



Socket Extension

P 44a

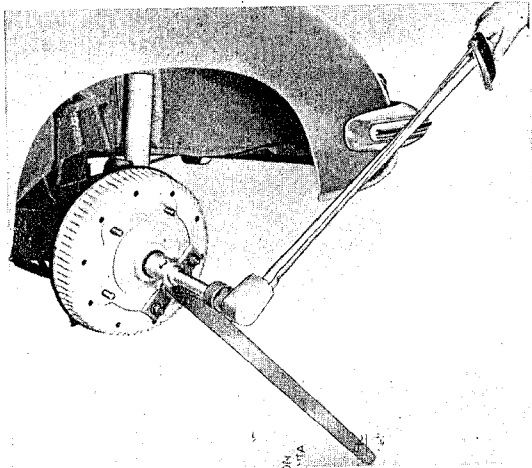

Application

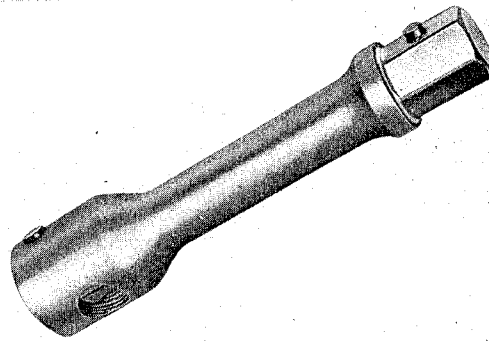

Tool


Use: To loosen and tighten rear axle nuts, used with P 36, P 42, and P 44

See: Workshop Manual, group R, operation 1 RA


Subject to change

Tube

P 45

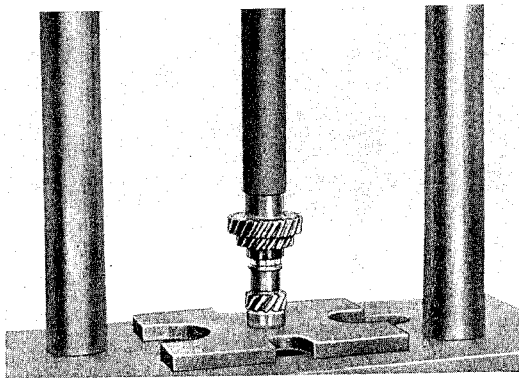

Application

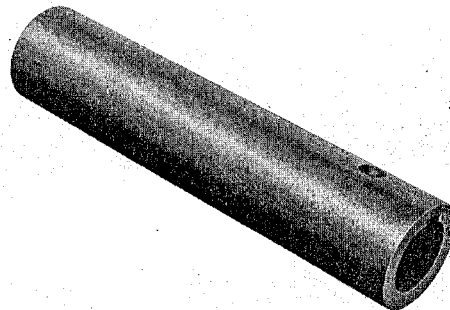

Tool

Use: To press gears onto main shaft

See: Workshop Manual, group R, operation 7 RA

Subject to change