

Installing Fresh-Air Blower

The Behr fresh-air blower can be installed as special order item in the below listed types of cars:

Coupe	from Serial No. 117 601
Cabriolet	from Serial No. 155 601
Karmann Hardtop	in Serial No. 201 601 - 202 299
Karmann Coupe	from Serial No. 210 001

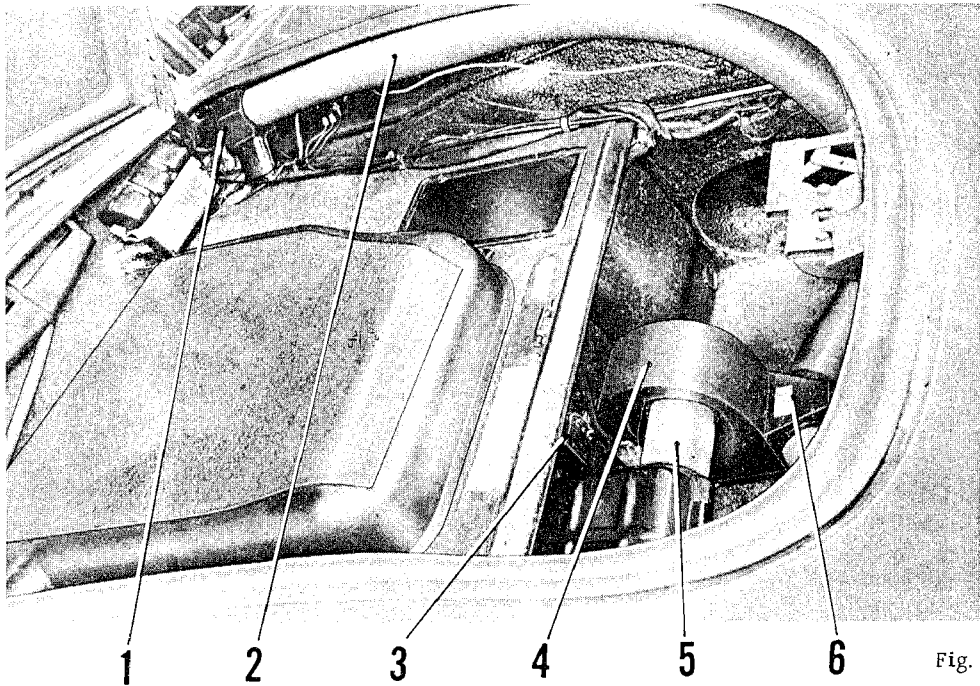


Fig. 1

- | | |
|------------------|-------------------------|
| 1 Fresh air duct | 4 Blower housing |
| 2 Flexible hose | 5 Blower motor |
| 3 Relay | 6 Distributing manifold |

The radially acting fresh-air blower is being installed in the front compartment behind the spare tire. With the fresh-air blower switched on, fresh air enters through the grill in front of the windshield and is pressed through the distributing manifold into the fresh air ducts via flexible hoses at the right and left compartment side. The fresh air is then conveyed

either to the windshield or to the floor by adjustment of the lower lever of the control unit.

The fresh-air blower has 2 control steps and is operated from the instrument panel. It is the same control unit as for the Eberspächer heater.