

Removing and Installing Gear Shift Linkage

21 RA

Removal

1. Remove both front seats and rubber floor mats.
2. Remove floor tunnel cover mat.
3. Disconnect heater cables from heater flaps.
4. Mark position of gear shift lever bracket to avoid unnecessary adjustments when installing.
8. Remove gear shift lever bracket.
9. Slide rubber boot forward on shift rod.
10. Loosen clamping screw and push shift rod forward from flexible connector.

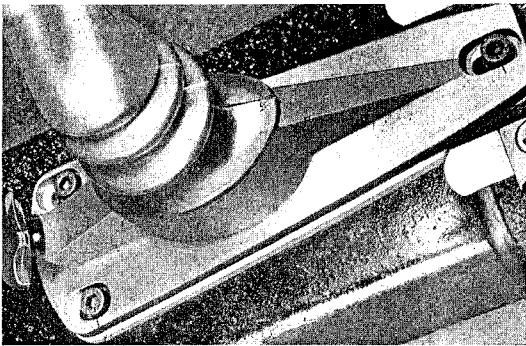


Fig. 125

5. Remove three allen screws.
6. Lift gear shift lever bracket and move to one side.
7. Remove lock ring from spindle for heater control screw and turn control knob till nut is free.

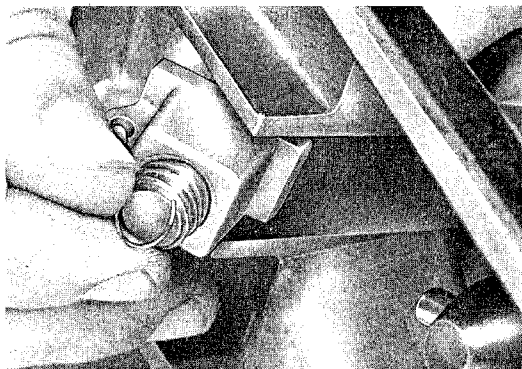


Fig. 126

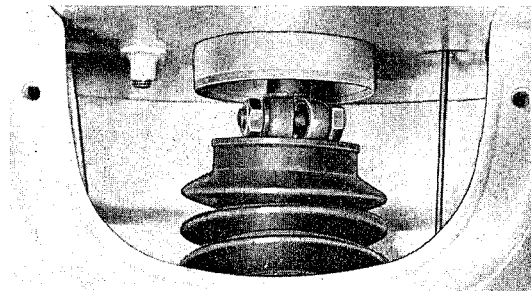


Fig. 127

11. Pull shift rod toward the front until the back end of the shift rod can be pushed back under the separating plate in the tunnel.

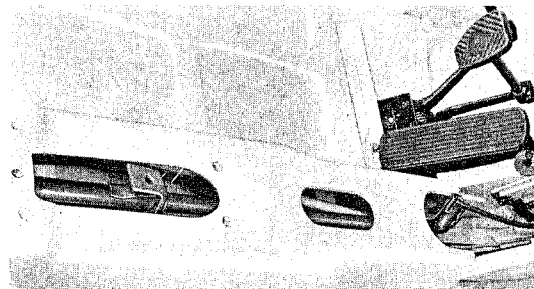


Fig. 128

12. Push shift rod back to shift bracket opening and remove pulling forward.

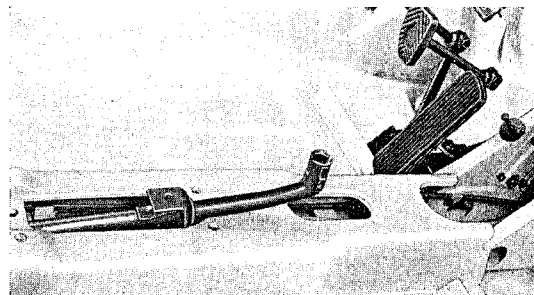


Fig. 129