



Piston pin bushing extractor and press

P 15

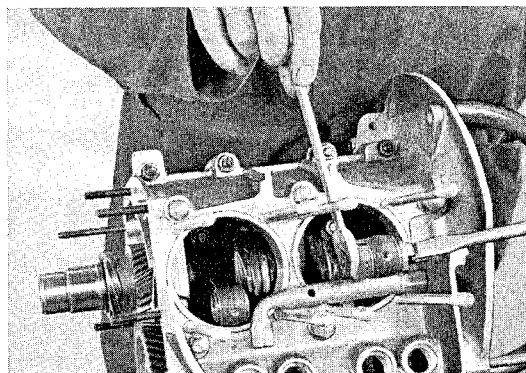

Example of use

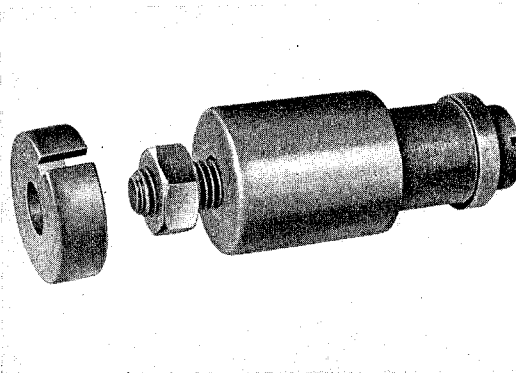

Tool


Use: To extract and install piston pin bushings

See operation 47 EN


Subject to change

Dial gauge holder

P 16

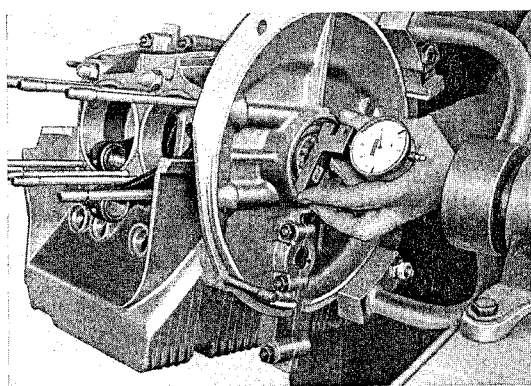

Example of use

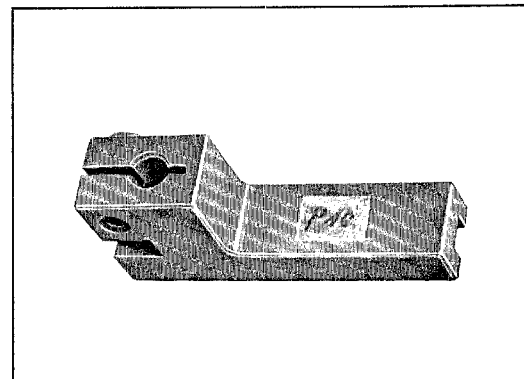

Tool

Use: To measure shim thickness for correct crankshaft end play

See operation 50 EN

Subject to change