

Removing and Installing Rear Bumper

8 80

Removal

1. Disconnect plug connectors to the licence plate lights.

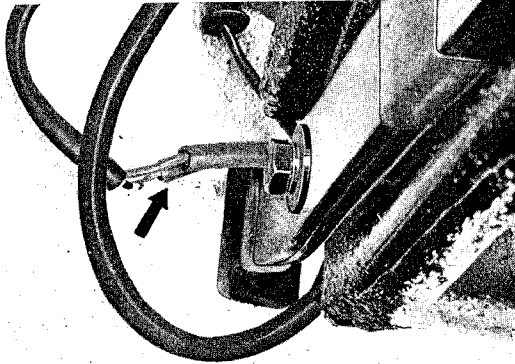


Fig. 24

2. Remove the bolts which hold the ends of the bumper from the inside of the fenders.

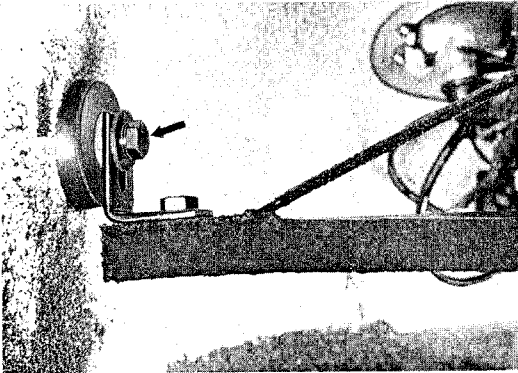


Fig. 25

3. Remove two bolts from each bumper brace under the fender and remove the bumper.

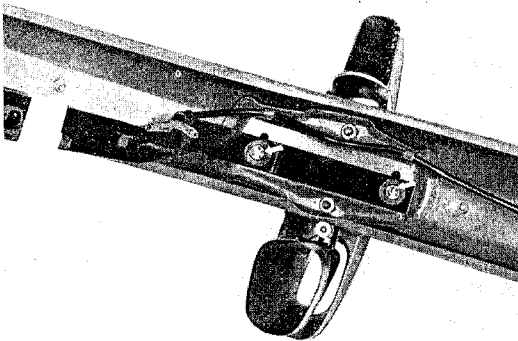


Fig. 26

4. Remove two bolts from the bumper brace at the bumper and remove the brace being careful not to damage the wires of the licence plate lights.

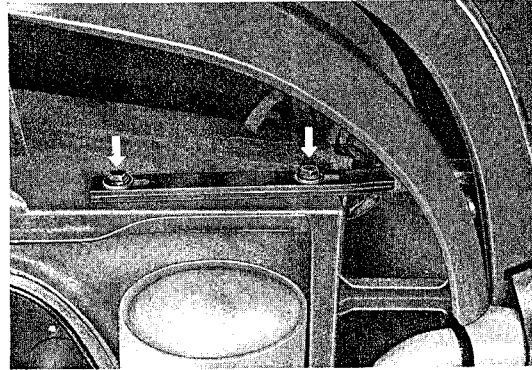


Fig. 27

5. Remove two bolts holding the bumper guard and remove bumper guard.

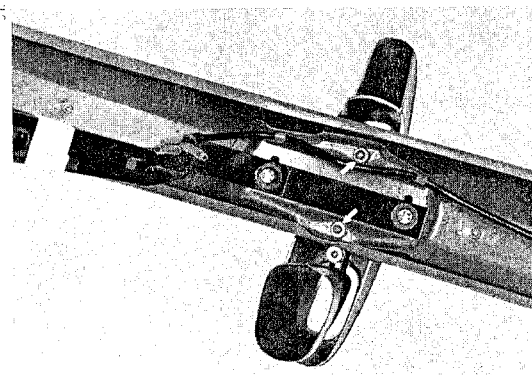


Fig. 28

6. Remove the nut holding the bumper guard exhaust funnel and remove the funnel.

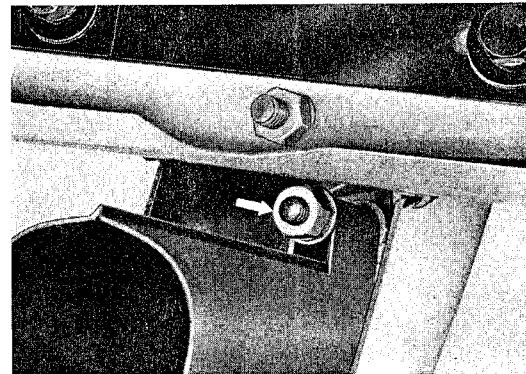


Fig. 29

7. If the moulding is to be removed, remove the nuts from the inside of the bumper. If the screws begin to turn, the plastic center piece can be pulled out to gain access to the screw heads.