

REMOVING AND INSTALLING SLIDING ROOF MOTOR

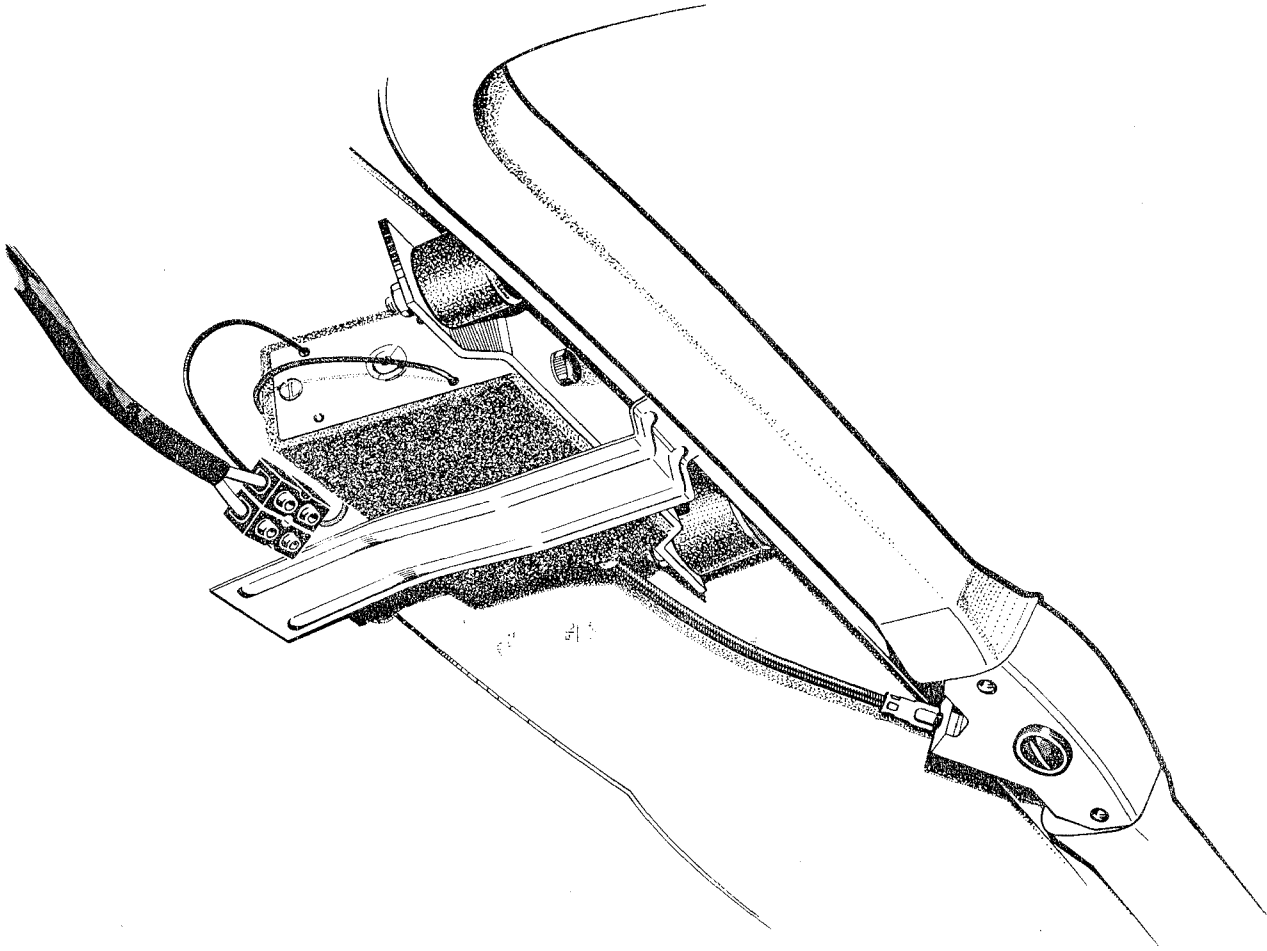


Fig. 9

Removal

1. Open zipper in roof lining.
2. Disconnect wire at porcelain insulator.
3. Withdraw flexible shaft from sockets and take out.
4. Remove both motor hold-down nuts at rubber bushings.
5. Slide motor over reinforcing bar and take it out.

Installation

1. Prior to installation, glue a 1/4" thick felt strip around motor to muffle noises.
2. Slide motor in through space above reinforcing bar and secure to studs in rubber bushing using 6 mm nuts.
3. Insert flexible shaft into sockets.
4. Connect electrical wires and check motor for proper operation. Shift motor in oval orifice until smoothness of action of the flexible shaft is possible. Tighten 6 mm nuts in this position.
5. Close zipper, check condition of roof lining.