

Front and Rear Hoods

Removing and Installing Front Hood

1 B0

Removal

1. Open front hood and engage the catch mechanism so that the hood remains open.
2. Carefully mark the position of the hood on both hinges with a line along the edge of the entire flange and one across the flange to the hinge.
3. With one person holding each side of the hood remove the bolts which hold the hood.

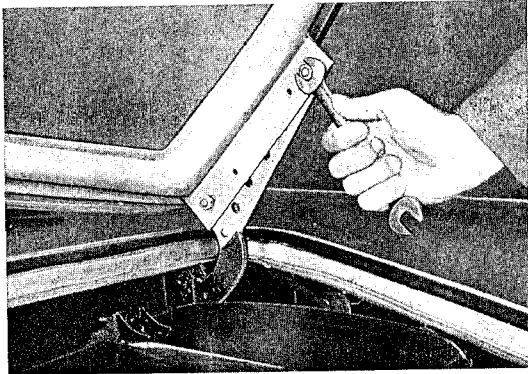


Fig. 1

Installation

The installation is accomplished in the reverse order of removal observing the following points:

1. Inspect the rubber weather strip around the opening. The strip is glued to the body and held in place with screws. The two upper corners have mouldings to hold the rubber. Install a new weather strip if necessary.



Fig. 2

4. Remove the hood being careful not to bend the hinge brackets and catch shaft.

2. Install the hood lightly tightening the four screws so that the lid may be adjusted to the previously inscribed marks. Tighten all screws and carefully close the hood to test the fit. Adjust where necessary.