

Removal (rear wheel brakes)

Follow procedures applying to the removal of rear wheel brakes on page ST 29. The applicable points are: 1, 4 (slightly bend the brake line clamping strap and loosen holder at axle tube), 5, 6, and 12 — in that order.

Caution: Do not bend the brake line. Attach brake caliper to the underbody; do not let it hang free on the brake line.

Installation (rear wheel brakes)

Installation is accomplished in reversed order of the above by noting the following points, as described under installation of the rear disc brakes, in the following sequence: 1, 13, 15, and 19; see page ST 31.

Caution:

Prior to driving the car, depress the foot brake pedal several times as far as it will go to bring the pistons and brake pads into their normal position, afterwards check level of hydraulic fluid in reservoir and replenish if necessary.

Removing and Installing Pistons in Brake Calipers

Removal

1. Remove brake caliper from vehicle according to instructions outlined in sections applicable to removal of the front and / or rear disc brake, Points 1 - 4.
2. Remove brake line connecting both housing halves.
3. Remove the 4 Allen-head screws in the brake caliper and separate both housing halves.

4. Remove clamping ring which secures dust cover.

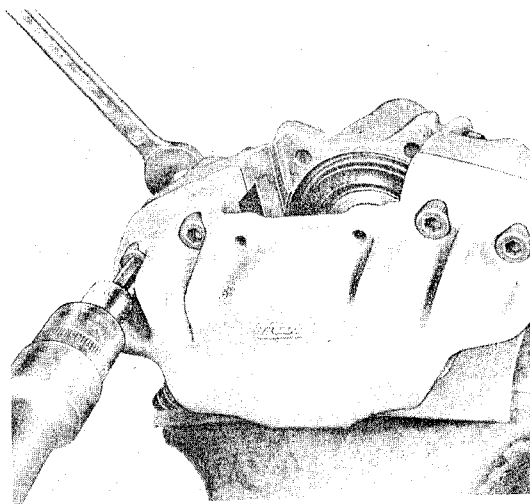


Fig. 42

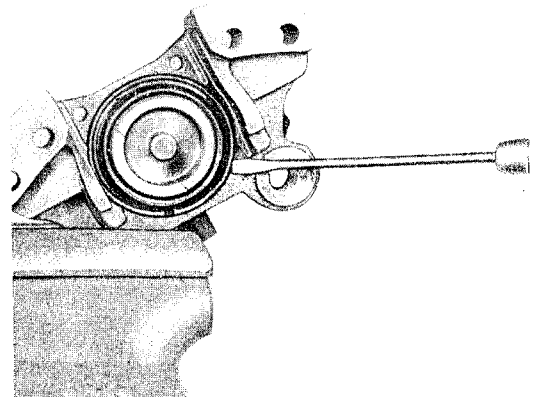


Fig. 43