

8. Remove V-belt.
9. Disconnect oil filter lines.

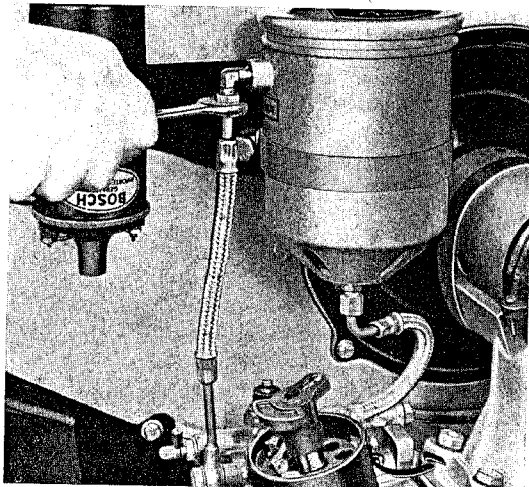


Fig. 29

10. Remove oil breather pipe.

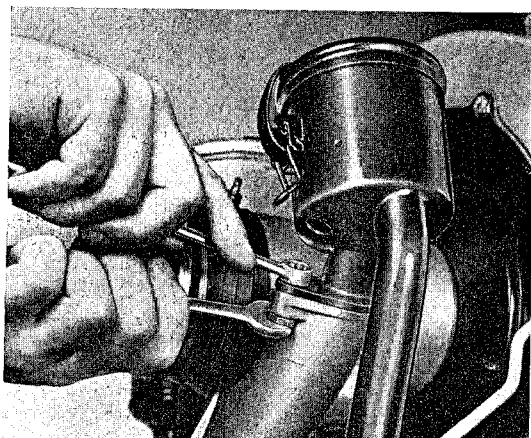


Fig. 30

11. Remove duct plates (3 EN).
12. Remove generator clamp.
13. Remove fan housing and generator as a unit (3 EN).
14. Remove cover plates and lower air channel.

**E 8**

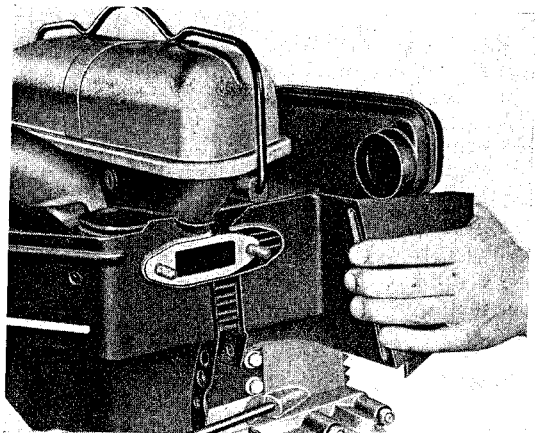


Fig. 31

15. Remove fuel pump.
16. Remove distributor and distributor drive pinion (37 EN).
17. Remove generator bracket.

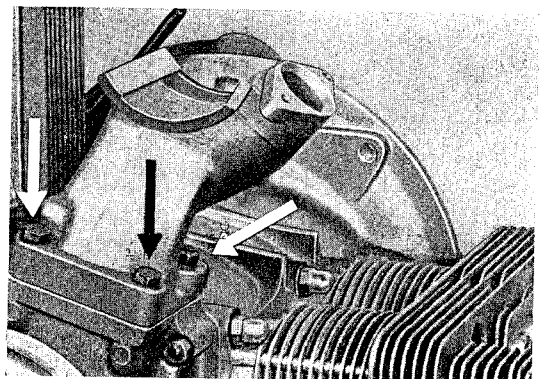


Fig. 32

18. Remove rocker box covers.
19. Remove rocker arm bracket (19 or 21 EN).

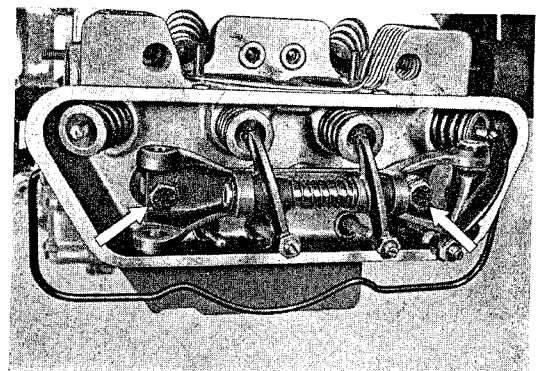


Fig. 33