

7. Disconnect lines from oil filter.

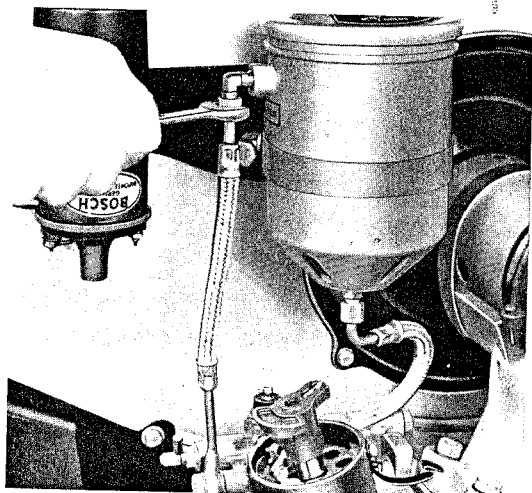


Fig. 66

8. Remove generator holding strap.

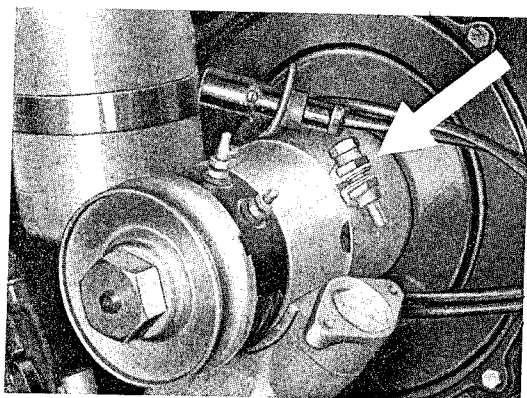


Fig. 67

9. Remove oil breather pipe.

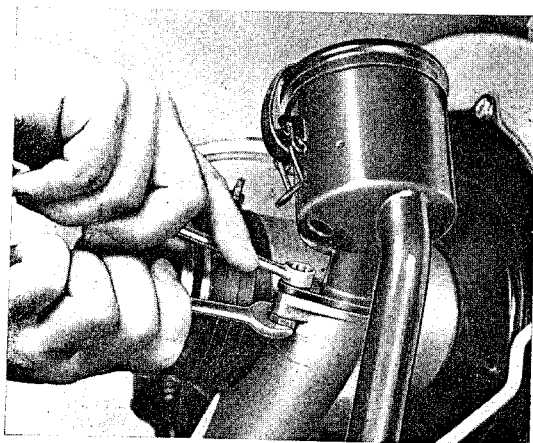


Fig. 68

10. Remove ignition wire from coil and distributor cap and remove distributor cap.

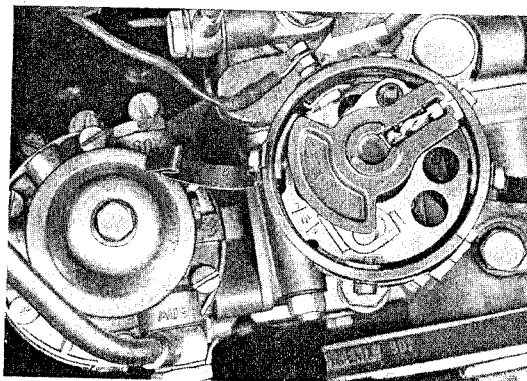


Fig. 69

11. Remove air filters, throttle linkage, and fuel lines.

12. Remove carburetors.

13. Remove fan housing and generator unit.

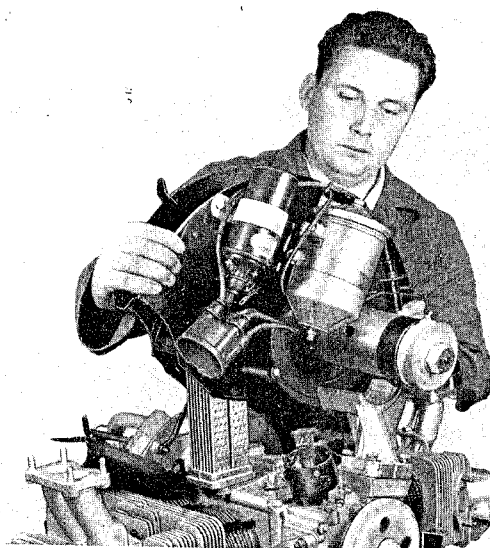


Fig. 70

14. Remove intake manifolds and cylinder heads. Remove deflector plates complete with spring clips.

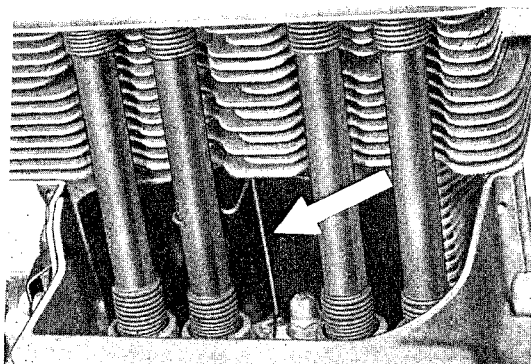


Fig. 71