

4. Remove the three 9 mm nuts and remove the switch, housing and cables from the steering column.

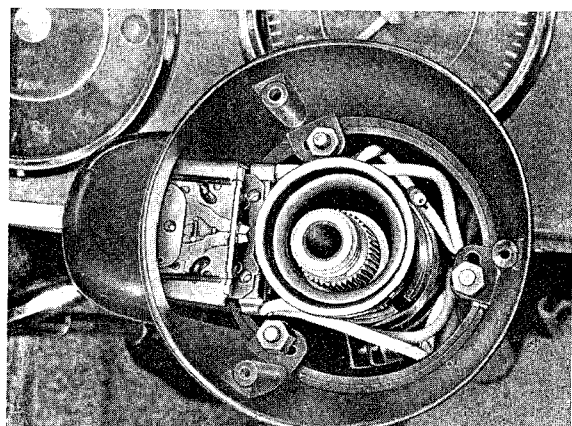


Fig. 62

5. Remove the three screws from the side of the switch housing and pull out the switch and cables from the inside.

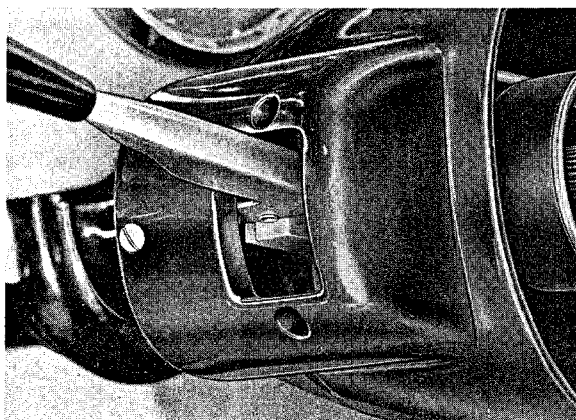


Fig. 63

Installation

The installation is accomplished in the reverse order of removal observing the following points:

1. Before installing the horn contact ring, connect the horn wire to the back of the ring.
2. Fasten the cables to the steering column with plastic electrical type.
3. Connect the cables in the correct manner always connecting cables of the same color code.

31 LI

Replacing Parking and Turn Signal Bulbs

General

The bulbs for the parking lights are located in the turn signal lamp below the headlights. The parking lights remain on when the headlights are on but may be switched on separately. In european cars the parking lights are located in the headlight reflector but operate in the same manner as those of the USA model.

Replacement

1. Grasp the turn signal lamp cover, press in and turn counter-clockwise to remove.
2. Remove burned out light bulb.
3. Install a new bulb of the same power.
4. Clean and install plastic cover and insure a water-proof seat against the gasket.