

Removing and installing control unit

For the removal and installation of the control unit and the Bowden control adjustment see Supplements Workshop Manual SB 11.

Attention!

The Bowden wire of the control unit, which serves to control the Eberspächer heater, is not necessary for the fresh-air blower. The Bowden wire can be removed or laid parallel to the left Bowden wire along the cable tree. In order to prevent a jamming of the Bowden wire at the envelope's end, a protective tubing must be slid on and fixed by compressing.

10 cm of a fuel pipe would offer a good protection.

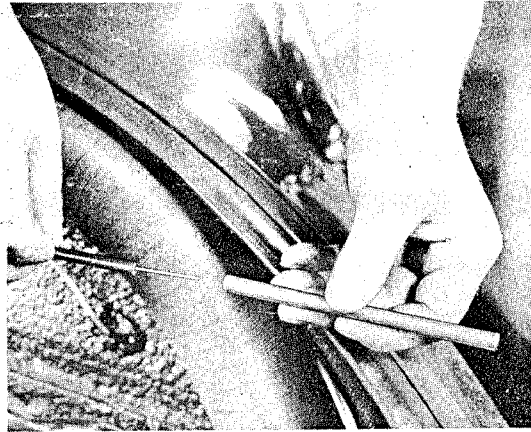


Fig. 5

Installing Fresh-Air Blower

1. Take out spare tire and remove plastic cover above fuel tank.
2. Mark holes to fix relay support on the rear wall of the front compartment (see Fig. 6) and bore with a 5.5 mm bore.
3. Working from the outside, insert relay support into these holes and mount nuts together with washers and spring rings.
4. Mount relay at the upper supporting stud and in the center of the relay support by means of a 5 mm cheese-head screw, so that the electric relay connections point to the left in driving direction.
5. Tighten the relay.

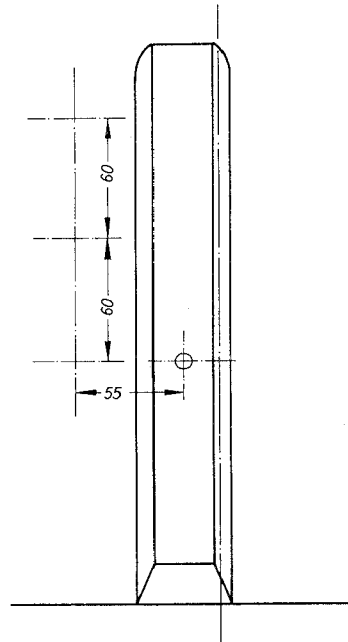


Fig. 6