

12. Fill fuel pump housing with special grease (anti-freeze). At operating temperature the grease assumes a liquid condition, thus lubricating all moving parts. Lubrication is improved by engine oil which is fed into the pump housing through the bore in the light alloy flange. Another grease packing is therefore not necessary. Rocker arms and actuating rods which are lacking grease indicate a leaking diaphragm.

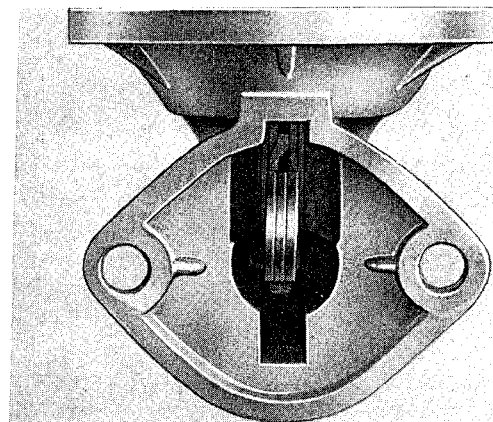


Fig. 38