



Valve spring compressor set

P 7

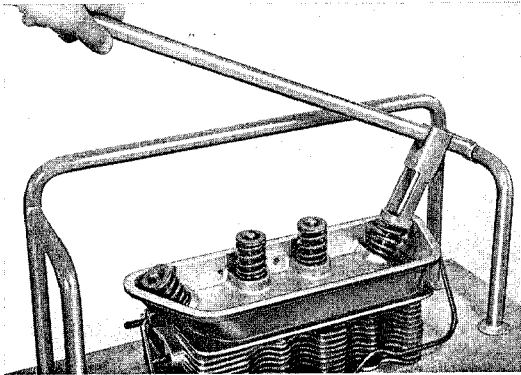

Example of use

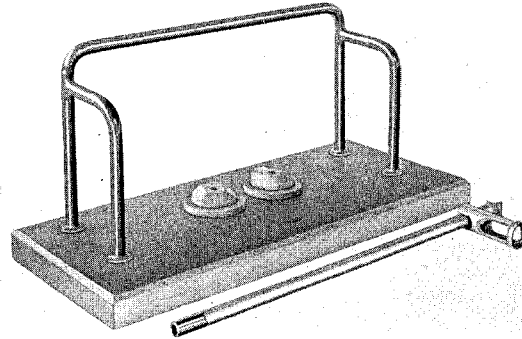

Tool


Use: To remove and install valve springs and valves

See operation 24 EN


Subject to change

Piston ring compressor 82,5 mm dia.

P 8a

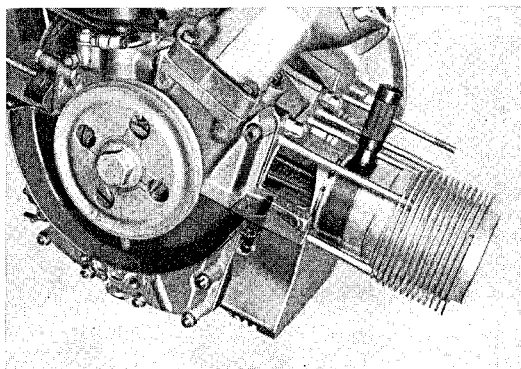

Example of use

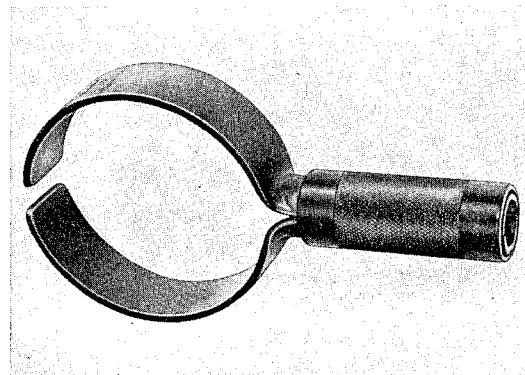

Tool

Use: To compress piston rings when installing cylinders

See operation 2 EN

Subject to change