

## Reconditioning Master Cylinder

2 Ti

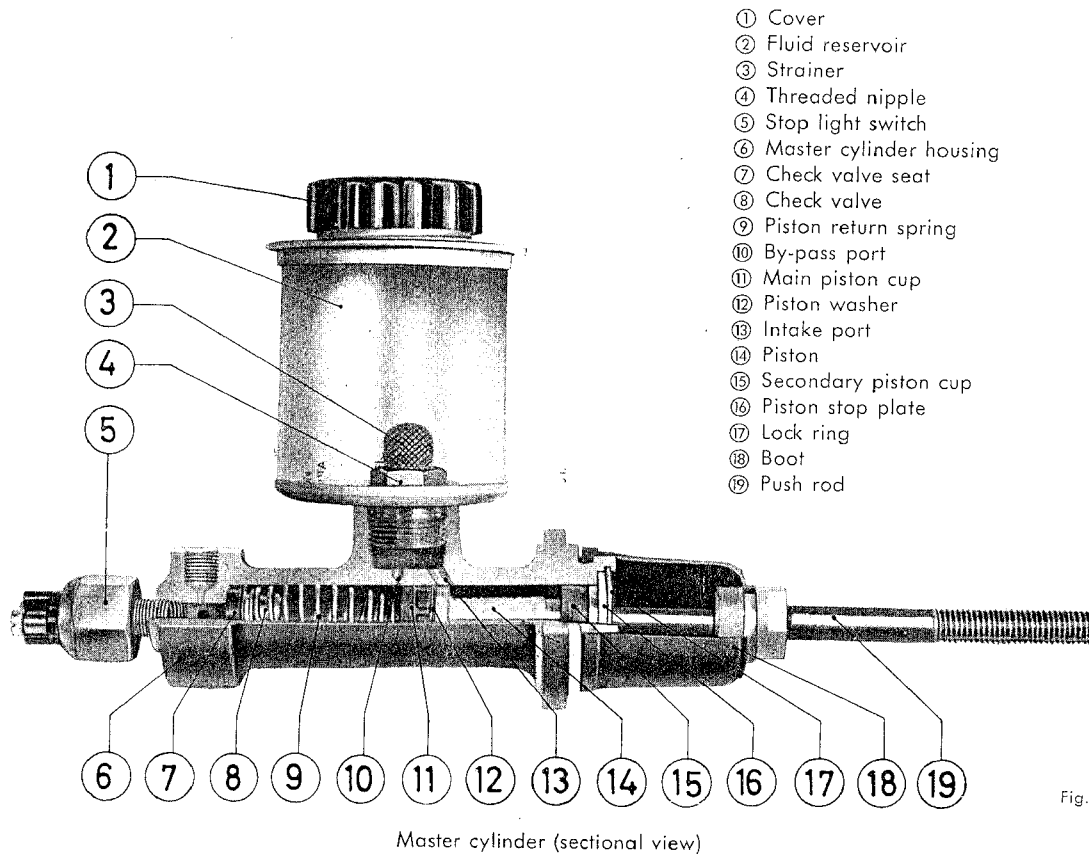


Fig. 8

### Disassembly

1. Empty and remove fluid reservoir.
2. Unscrew stop light switch.
3. Remove spring for stop plate (see fig. 9).
4. Take out stop plate, piston with secondary piston cup.
5. Remove washer, main piston cup, return spring with spring retainer, check valve and valve seat.

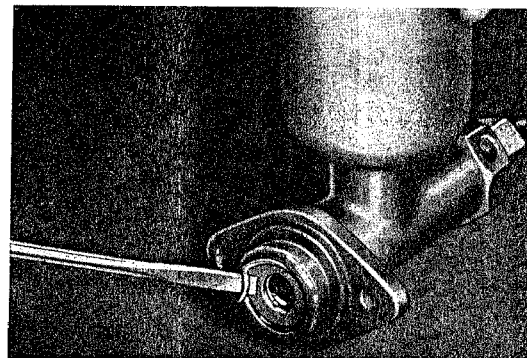


Fig. 9