


NOMURA CO. 野村商会

Nomura Building 2F, 1-18, Koshien-Abiki, Nishinomiya, 663-8156 Hyogo, JAPAN
Tel : +81 90 1586 7484 E-MAIL : nomnom13@yahoo.co.jp

How to open motor

1) un fasten special nut at center of spindle

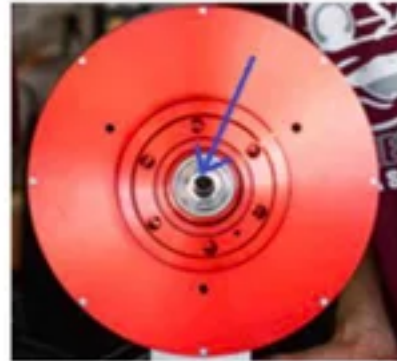

2) insert M8 bolt



The M8 bolt top need to be tipped for fit to hex bolt which fixed for stator.
Or some year model is not inline to M6 hex bolt, in that case M8 bolt need to reached to bottom housing which other side motor housing of M8 hole.

3) keep insert M8

you need keep housing nicely horizontal.
then you can open motor.

4) close motor housing

Simply you do reverse procedure.

Important note:

you must be USED M8 even you assemble motor, otherwise you cut your finger if your finger is in between stator and magnet which very very dangerous, thus need to be used M8 bolt.

Important thing is in the end you fasten special nut of the spindle.

This is bit delicate fasten required.

Because you need to fasten till just bearing center.

if too tight fasten, bearing makes friction loss,

if not enough fasten some pay housing,

Just nicely Zero tension is good fasten.