

How To Reset the Cashbox in the MS1™

This task topic discusses how to reset the cashbox in the IPS Group, Inc. **MS1™**.

To open the cashbox, collect the cash, and reset the cashbox and make it ready for use:

1. Use a cashbox key to open and empty the cashbox.




2. Press the release lever forward while simultaneously shifting the mechanism reset pin;



OR on various cashbox models, reset by pulling the reset pin.



3. Close the cashbox, and confirm that the Red indicator dot is now Green. The Green dot indicates an empty cashbox that is ready for use.

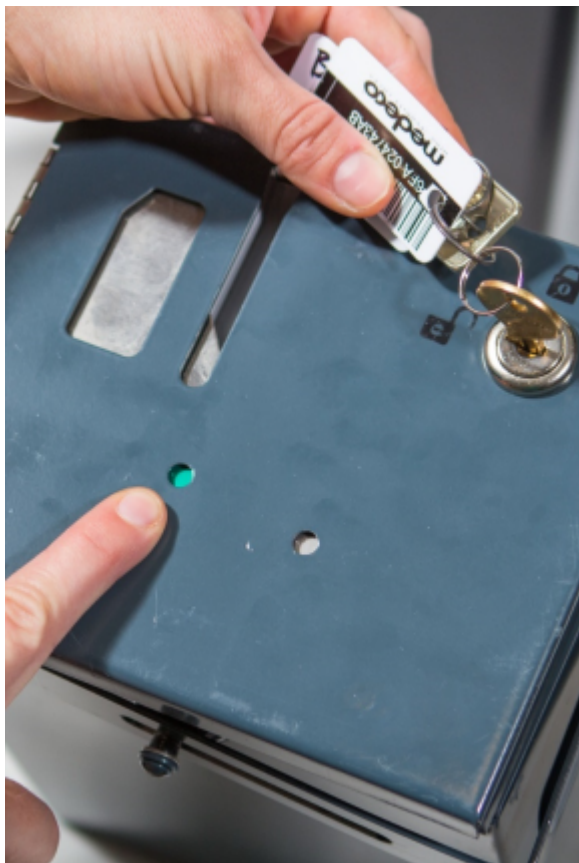

4. Replace the full cashbox, with an empty cashbox into the vault.
5. Lock the vault door and the lower **cabinet** door.



6. Ensure the upper cabinet door is locked, and the MS1™ is ready for normal operation.

The coins are collected, and the **pay station** contains an empty cashbox that is ready for use.