

12.15. DMU TRANSPONDER ID LOOPS

12.15.1. UP Auto DTMF Codes and Radio Procedures

All of the DMU equipment has been upgraded to include auto DTMF codes and the following procedures outlined below must be followed:

Accessing Channels and Volume Controls

- Set radio volume to desired level using the +/- keys
- Select radio channel using the ▲/▼ keys
- The channel name will be shown on the screen

Auto Dial DTMF Code

TRACK REQUEST

- Set VHF radio channel to CN3 using the ▲/▼ keys
- Press the Square Key to bring up a list of available codes (labelled as "ATDIAL" above the key)
- Use the ▲/▼ keys again to select DTMF codes, e.g. NO 1 TRK RQST
- Once the required code has been selected, press the Square Key again to transmit the code (now labelled "CALL")


TRACK CANCEL

- Set the VHF radio channel to CN3 using the ▲/▼ keys
- Press the Square Key to bring up a list of available codes (labelled as "ATDIAL" above the key)
- Use the ▲/▼ keys again to select DTMF codes, e.g., NO 1 TRK CNCL
- Once the required code has been selected, press the Square Key again to transmit the code (now labelled "CALL")
- To exit the Autodial menu, press the Home Key



Manual Dial DTMF Code

- **Set the VHF radio channel to CN3**
- Using the radio microphone, enter the necessary DTMF code for the signal to Request or Cancel as required.

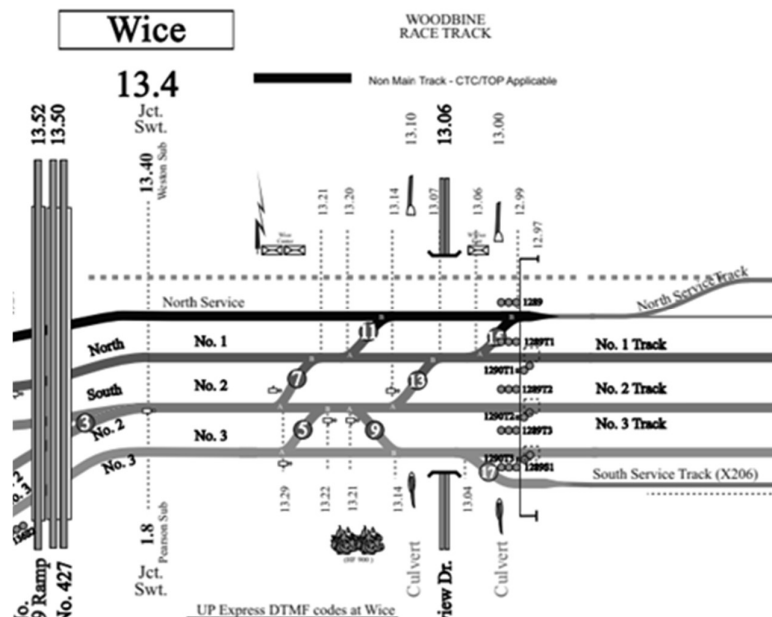

DESCRIPTION	DTMF Code
No. 1 Track Request	*0129021#
No. 1 Track Cancel	*0129020#
No. 2 Track Request	*0129031#
No. 2 Track Cancel	*0129030#
No. 3 Track Request	*0129041#
No. 3 Track Cancel	*0129040#
North Service Track Request	*0129011#
North Service Track Cancel	*0129010#
South Service Track Request	*0129051#
South Service Track Cancel	*0129050#