

# MT 3050



## AT Command Reference



# General

## TERMS OF USE OF NEW MATERIALS - PLEASE READ CAREFULLY

From time to time, Novatel Wireless, in its sole discretion, may make available for download on its website ([www.novatelwireless.com](http://www.novatelwireless.com)), or may transmit via mail or email, updates or upgrades to, or new releases of, the firmware, software or documentation for its products (collectively, 'New Materials'). Use of such New Materials is subject to the terms and conditions set forth below, and may be subject to additional terms and conditions as set forth in Novatel Wireless's Technical Support Policy (posted on its website) and/or any written agreement between the user and Novatel Wireless.

All New Materials are provided AS IS. Novatel Wireless makes no warranty or representation with respect to the merchantability, suitability, functionality, accuracy or completeness of any such New Materials. The user of such New Materials assumes all risk (known or unknown) of such use. Novatel Wireless reserves all rights in such New Materials. The user shall have only a revocable and limited license to use such New Materials in connection with the products for which they are intended. Distribution or modification of any New Materials without Novatel Wireless's consent is strictly prohibited.

IN NO EVENT WILL NOVATEL WIRELESS BE RESPONSIBLE FOR ANY INCIDENTAL, INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES AS A RESULT OF THE USE OF ANY NEW MATERIALS. NOVATEL WIRELESS'S MAXIMUM LIABILITY FOR ANY CLAIM BASED ON THE NEW MATERIALS SHALL NOT EXCEED FIFTY U.S. DOLLARS (\$50).

## Version Verification

Please ensure you have the latest version of this document by downloading it from [www.novatelwireless.com](http://www.novatelwireless.com)

# Copyright

© 2013 Novatel Wireless. All rights reserved. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the express written permission of Novatel Wireless.

Novatel Wireless and the Novatel Wireless logo are either registered trademarks or trademarks of Novatel Wireless. in the United States.

251 Renner Pkwy

Richardson, TX 75080 USA

Phone: (972) 633-4400

Fax: (972) 633-4444

Email: [info@enfora.com](mailto:info@enfora.com)

[www.novatelwireless.com](http://www.novatelwireless.com)

# Table of Contents

---

<b>Introduction</b>	<b>1</b>
Document Scope	2
Platform Reference And Use	2
Command Syntax	3
Standard AT Commands	4
<b>General Commands</b>	<b>5</b>
AT\$PKG Request Firmware Package	6
AT+CGMI Request Manufacturer Identification	8
AT+CGMM Request Manufacturer Model Identification	9
AT+CGMR Request Revision Identification	10
AT+CGSN Request IMEI	11
AT+GMI TA Manufacturer ID	12
AT+GMM TA Model ID	13
AT+GMR TA Revision Number	14
AT+GSN TA Serial Number	15
AT+WS46 Select Wireless Network	16
ATI Manufacturer Information About TA	17
<b>META Commands</b>	<b>18</b>
AT\$HBRST Automatic Modem Reset	19
AT&F Set All TA Parameters To Factory Defined Configuration	21
AT&V Display Current Profile	22
AT&W Save Current Settings	23
AT+CEER Extended Error Reporting	24
AT+CFUN Set Phone Functionality	26
AT+CMEE Report Mobile Equipment Errors	27

---

AT+CPIN Enter PIN .....	28
AT+CPUC Price Per Unit And Currency Table .....	30
AT+CRES Restore Settings .....	31
AT+CSAS Save Settings .....	32
AT+CSCS Select TE Character Set .....	33
AT+CSTA Select Type Of Address .....	34
AT+FCLASS GSM Class Of Service .....	35
AT+GCAP Request Overall Capabilities For TA .....	36
ATE Command Echo Mode .....	37
ATQ Result Code Suppression .....	38
ATS3 Command Line Termination Character .....	39
ATS4 Response Formatting Character .....	40
ATS5 Editing Character .....	41
ATV Response Format .....	42
ATX CONNECT Result .....	43
ATZ Set All TA Parameters To Default Configuration .....	44
<b>Call Control Commands .....</b>	<b>45</b>
ATD Dial Command .....	46
ATH Hook Control .....	48
H Manual Rejection Of A Network Request For PDP Context Activation .....	49
<b>Network Service Commands .....</b>	<b>50</b>
AT+CIMI Request IMSI .....	51
AT+CLCK Facility Lock .....	52
AT+CLCKCFG Set Facility Lock Configuration .....	55
AT+CLCKCP Set Corporate Personalization Lock .....	56
AT+CLCKSP Set Provider Personalization Lock .....	58
AT+CNUM Subscriber Number .....	60
AT+COPN Read Operator Names .....	61

---

AT+COPS Operator Selection .....	62
AT+CPOL Preferred Operator List .....	64
AT+CPOL Preferred PLMN List .....	65
AT+CSQ Signal Quality And Bit Error Rate .....	67
AT+CRLP Radio Link Protocol Parameters .....	70
<b>Supplementary Service Commands .....</b>	<b>71</b>
AT+CSSN Supplementary Service Notifications .....	72
AT+CUSD Unstructured Supplementary Service .....	75
<b>SMS Commands .....</b>	<b>77</b>
AT\$QCMSS Send Message From Storage .....	78
AT\$QCMGD Delete Message .....	79
AT\$QCMGF SMS Format .....	80
AT\$QCMGL List Messages .....	81
AT\$QCMGR Read Message .....	83
AT\$QCMGS Send Message .....	84
AT\$QCMGW Write Message To Memory .....	85
AT\$QCNMI New Message Indications To TE .....	86
AT\$QCPMS Preferred Message Storage .....	87
AT\$QCSMP Set Text Mode Parameters .....	89
AT\$SMSURC Enable URC To Be Sent By SMS .....	90
AT+CMGF SMS Format .....	91
AT+CMGD Delete Message .....	92
AT+CMGL List Messages .....	93
AT+CMGR Read Message .....	95
AT+CMGS Send Message .....	96
AT+CMGW Write Message To Memory .....	97
AT+CMSS Send Message From Storage .....	98
AT+CNMI New Message Indication To TE .....	99

---

AT+CPMS Preferred Message Storage .....	102
<b>GPRS Commands .....</b>	<b>103</b>
AT+CGACT PDP Context Activate Or Deactivate .....	104
AT+CGANS Manual Response To A Network Request For PDP Context Activation .....	105
AT+CGATT Data Service Attach Or Detach .....	106
AT+CGAUTO Automatic Response To A Network Request For PDP Context Activation .....	107
AT+CGCLASS GPRS Mobile Station Class .....	108
AT+CGDCONT Define PDP Context .....	109
AT+CGEREP Data Service Event Reporting .....	111
AT+CGEV Deactivation Indication Reporting .....	113
AT+CGPADDR Show PDP Address .....	114
AT+CGQMIN Quality Of Service Profile (Minimum Acceptable) .....	115
AT+CGREQ Quality Of Service .....	116
AT+CGSMS Select Service For MO SMS Messages .....	118
AT%CGPCO Set Type Of Authentication, Username And Password .....	119
AT%CGPPP Negotiation Selection .....	121
ATD Request GPRS Service .....	122
<b>IP Router Commands .....</b>	<b>123</b>
AT\$FLFILT Filter ICMP Echo Request .....	124
AT\$GATEWAY Gateway IP .....	125
AT\$NETIP Display Network Assigned IP & DNS .....	126
AT\$PING Send ICMP Echo Request .....	127
<b>Message Commands .....</b>	<b>128</b>
AT\$APIOPT Enable API Optional Header Fields .....	129
AT\$APIPWD API Password .....	132
AT\$ATPASSWD Set Authorization For AT Commands For Serial, SMS And API .....	133
AT\$CHKIN Configure Device Check-in .....	135

---

AT\$FRIEND Modem Friends .....	137
AT\$MDMID Modem ID .....	139
AT\$MLQSZ Message Log Queue Size .....	140
AT\$MSGLOGCL Message Log Clear .....	142
AT\$MSGLOGDMP Dump Unsent Messages To Serial Port .....	143
AT\$MSGLOGEN Message Log Enable .....	145
AT\$MSGLOGRD Message Log Read Data .....	146
AT\$MSGSEND Message Send .....	148
AT\$SMSDA Destination Address For SMS Messages .....	150
AT\$SMSDAEN Enable/Disable AT Commands Over SMS .....	152
AT\$SENDMSG Send Test Message .....	153
AT\$UDPSMSG Send And Receive UDP Messages .....	154
AT\$WAKEUP Modem To Server Wakeup/Keep Alive .....	156
AT%SNCNT Query (or Reset) The Byte Counters (GPRS Only) .....	158
<b>API Commands .....</b>	<b>159</b>
TCP API Commands .....	160
AT\$TCPAPI TCP API Control .....	160
AT\$TCPIDLETO TCP API Idle Timeout .....	162
AT\$TCPRESTR TCP API Restart .....	163
AT\$TCPRETRYTO TCP API Retry Timeout .....	164
AT\$TCPSRC TCP API Source Ports .....	165
AT\$TCPSTATS TCP API Statistics .....	166
AT\$TCPURC Enable URC Over TCP API .....	167
UDP API Commands .....	168
AT\$ACKTM Acknowledgment Message Period & Retry Number .....	168
AT\$UDPAPI Modem API Address .....	170
<b>FOTA Commands .....</b>	<b>171</b>
AT\$FOTACFG Configure Firmware Upgrade .....	172



---

AT\$FOTAGET Get Firmware Upgrade OTA .....	174
AT\$FOTAUPG Upgrade Current Firmware .....	176
<b>FTP Commands .....</b>	<b>177</b>
AT\$ATEXEC Execute AT Command File .....	178
AT\$FFS Generic Flash File System Access .....	180
AT\$FTPABORT Aborts Current Data Operation With FTP Server .....	183
AT\$FTPBLK Change Current FTP BLock Size .....	184
AT\$FTPCFG Configure FTP Parameters .....	185
AT\$FTPCHDIR Change Current Working Directory .....	186
AT\$FTPCLOSE Closes The Connection To The FTP Server .....	187
AT\$FTPDIR Directory Listing .....	188
AT\$FTPGET Retrieve A Remote File .....	189
AT\$FTPOPEN Opens FTP Connection .....	190
AT\$FTPPUT Store A Local File On The FTP Server .....	191
AT\$FTPR Outputs Block Of File Data Onto Serial Port .....	192
AT\$FTPRST Restart The Last FTP GET Operation .....	193
<b>RTC Commands .....</b>	<b>194</b>
AT\$RTCALRM Real Time Clock Alarm .....	195
AT\$RTCCLRA Real Time Clock Clear Alarm .....	197
AT\$RTCRSET RTC Report Reset State .....	198
AT\$RTCTIME Real Time Clock Time .....	200
AT\$RTCWAKE Real Time Alarm Wake .....	202
<b>Miscellaneous Commands .....</b>	<b>203</b>
AT\$AREG Auto Registration .....	204
AT\$CREG Network Registration Info .....	206
AT\$NETMON Monitor Network Availability .....	207
AT+CBST Select Bearer Service Type .....	209

---

AT%CGREG GPRS Extended Registration State .....	211
AT+CLCK Facility Lock .....	213
AT+CLIP Calling Line Identification Presentation .....	216
AT+CNUM Subscriber Number .....	218
AT+COLP Connected Line Identification .....	219
AT+COPN Read Operator Names .....	220
AT+COPS Operator Selection .....	221
AT+CPIN Enter PIN .....	223
AT+CPLS Selection Of Preferred PLMN List .....	225
AT+CPOL Preferred Operator List .....	226
AT+CPWD Change Password .....	227
AT+CR -Service Reporting Control .....	229
AT+CREG Network Registration Info .....	230
AT+CRLP Radio Link Protocol Parameters .....	232
AT+CSQ Signal Quality And Bit Error Rate .....	233
<b>Event Commands .....</b>	<b>236</b>
AT\$ETSAV# Event Timer Save Configuration .....	237
AT\$EVCID User Defined Incoming Call Number Event .....	238
AT\$EVDEL Delete Event .....	240
AT\$EVDELA Delete Event (All) .....	241
AT\$EVDELR Delete A Range Of Event Groups .....	242
AT\$EVENT User Defined Input/Output .....	243
AT\$EVGQRY Event Group Query .....	245
AT\$EVNTRY Event Count Query .....	246
AT\$EVTEST Generate Test Input Event .....	247
AT\$EVTIM# User Defined Input Event Timers .....	248
AT\$EVTIMQRY Event Counter .....	249
AT\$EVTOFF Event Engine Disable .....	250

AT\$EVTQRY Query The State Or Value Of The Specified Input Event .....	251
AT\$STOATEV Store AT Command Events .....	252
AT\$USRVAL User Value .....	254
<b>Miscellaneous Commands .....</b>	<b>255</b>
AT\$ICCID Integrated Circuit Card ID .....	256
AT\$IGNDBNC Debounce Ignition Hardware Line For The Specified Amount Of Time ...	257
AT\$MDSTAT Query Modem Status .....	258
AT\$OFF Power Off Command .....	263
AT%CSTAT Unsolicited SIM Status .....	264
AT%EM Engineering Mode .....	265
AT%MEPD MEPD Configuration Data .....	266
AT%SIMIND SIM Status Indication .....	268
AT%SLEEP Select Level Of Sleep Mode .....	270
AT+CPWD Change Password .....	272
<b>Battery Commands .....</b>	<b>274</b>
AT\$OBDBAT Enable/Disable Backup Battery .....	275
AT\$OBDBBT Backup Battery Timer .....	277
AT\$OBDBQS Backup Battery Quick Shutdown .....	278
<b>OBD Commands .....</b>	<b>279</b>
AT\$OBDAACL Acceleration Thresholds .....	280
AT\$OBDAADN Set Down Accelerometer Threshold .....	281
AT\$OBDAADT Auto Discovery Timer .....	282
AT\$OBDAALT Set Left Turn Accelerometer Threshold .....	283
AT\$OBDAAM Set Any Motion Parameters .....	284
AT\$OBDAART Set Right Turn Threshold .....	286
AT\$OBDAUP OBD2 Set Up Accelerometer Threshold .....	287
AT\$OBDBAT Enable/Disable Backup Battery .....	288

---

AT\$OBDBBT Backup Battery Timer .....	290
AT\$OBDBQS Backup Battery Quick Shutdown .....	291
AT\$OBDCUT Clear The OBD2 User Trip Odometer .....	292
AT\$OBDDCL Deceleration Thresholds .....	293
AT\$OBDDSC Discovery Configuration .....	294
AT\$OBDECT Engine Coolant Temperature Threshold .....	295
AT\$OBDEES Excessive Engine Speed Thresholds .....	296
AT\$OBDFAC Set Thresholds To Factory Defaults .....	297
AT\$OBDGSP Use OBD Speed In Place Of GPS Speed .....	298
AT\$OBDIDL Idle Speed Threshold .....	299
AT\$OBDIGN OBD2 Ignition Off Configuration .....	300
AT\$OBDLBL Low Battery Level Threshold .....	301
AT\$OBLED OBD2 LED Timer .....	302
AT\$OBDLFL Low Fuel Level Threshold .....	303
AT\$OBDSAV Save OBDII Thresholds To Memory .....	304
AT\$OBDSPD Vehicle Speed Thresholds .....	305
AT\$OBDTYP Protocol Type .....	306
AT\$OBDVER Auxiliary Processor .....	308
<b>GPS Commands .....</b>	<b>309</b>
AT\$ALTOSI Set And Query GPS Overspeed Interval .....	310
AT\$EXCACC Excessive Acceleration .....	312
AT\$EXCDEC Excessive Deceleration .....	313
AT\$GEOFNC Geo Fencing A Circular Area .....	314
AT\$GFDBNC Set Geofence Debounce Count .....	315
AT\$GFDEL Delete A Range Of Geo-Fences .....	316
AT\$GPSCMD GPS Command .....	317
AT\$GPSFD Restore GPS Filter Defaults .....	318
AT\$GPSFLT GPS Speed Filter .....	319

---

AT\$GPSLCL Configure Sending Of GPS Message To The Serial Port .....	324
AT\$GPSLNA Enable/Disable Internal LNA .....	326
AT\$GPSOSI Set And Query GPS Overspeed Interval .....	327
AT\$GPSQUAL GPS Quality Filters .....	329
AT\$GPSRD Read Current GPS ASCII Data .....	331
AT\$GPSRST Set And Query GPS Reset Interval .....	333
AT\$GPSVAL GPS Speed Validation .....	335
AT\$ODOCFG Thresholds For Odometer/Speed Filtering .....	336
AT\$ODOMETER GPS Trip Odometer .....	337
AT\$PLYCLR Clear Polygonal Geofence .....	338
AT\$PLYFN# Geo Fencing A Polygonal Area .....	339
AT\$PWRSV Enable Power Save Mode .....	342
AT\$TODOM Virtual Trip Odometer .....	343
AT\$GPSDIS Disable GPS Functionality .....	345
<b>Event Tables .....</b>	<b>346</b>
Event Engine .....	347
Event Category .....	347
Event Type .....	347
Input Event Table .....	351
Output Event Table .....	358
User Variable Index Table .....	362
GPIO Flash Table .....	372
Bit Field Tables .....	373
Bit-Field Table Selection .....	373
Bit-Field Table 0 - Legacy (0,0) .....	373
Bit-Field Table 2 - (1,0) .....	376
OBD Bit Field Tables .....	381
OBD BIT-FIELD TABLE SELECTION .....	381

---

BIT-FIELD TABLE 0 – OBD (0,0) .....	381
<b>Appendix - Result Codes .....</b>	<b>384</b>
Result Codes .....	385
UNSOLICITED RESULT Codes .....	385
SMS Unsolicited Result Codes .....	386
<b>Appendix - Error Codes .....</b>	<b>387</b>
General Error Codes .....	388
Network Error Codes .....	389
SMS Error Codes (+CMS) .....	391
Release Causes For Extended Error Reporting (+CEER) .....	394
Extended Error Codes .....	396
<b>Index .....</b>	<b>398</b>

# Introduction

---

# Document Scope

The following documentation pertains to the AT Command Set to be used in conjunction with the Novatel Wireless Device identified in the title of this document.

## Platform Reference And Use

The device will be referred to using various terms, to include: MS (Mobile Station), TA (Terminal Adapter), DCE (Data Communication Equipment), or ME (Mobile Equipment).

The device can be controlled via the use of a DTE (Data Terminal Equipment) platform by issuing the AT commands via a serial interface.



# Command Syntax

The attention or “AT” prefix is required prior to entering any command. All commands require a carriage return or <CR> following the entry of the desired command. All command responses are encapsulated by a carriage return and line feed or <CR><LF>. The ASCII display of these characters is suppressed with only the modem response being presented.

In addition to terminating AT commands, the carriage return <CR> is also used to abort commands that are executing.

Most AT commands complete immediately so there is no opportunity to abort them, for instance ATI. However, Some commands like AT+COPS or AT+CFUN can actually take several seconds to complete. The AT command interface is said to be in execution mode when a command is running and has not returned a result code (OK/ERROR). A second <CR> entered while the AT command interface is in execution mode will abort the command and return the interface to command mode.

Some AT commands require additional input, for instance AT+CMGS. After terminating the AT+CMGS command with a <CR> the AT command interface enters line edit mode. While in line edit mode all characters are accepted except CNTL-Z. CNTL-Z terminates line edit mode and the AT command interface enters execution mode. Like before, at this point another <CR> will abort the command.

AT message concatenation can be done using the ; <semicolon> between commands.

The following examples demonstrate the potential usage of AT commands presented:

Type	Example	Description
Syntax Query	AT+GXXX=?	When entered will return the command format and value ranges.
Read Syntax	AT+GXXX?	When entered will return the current value assigned to the command.
Write Syntax	AT+GXXX- X=<value>,<value>,	When entered will set the command to specified value(s).
Execute Syntax	AT+GXXX	When entered will execute the specified command.
Command Con- catenation	AT+CRC=1;S0=1	When entered it will execute both the CRC and S0 command.

# Standard AT Commands

The following is the format in which all commands will be presented.

ATx(Command)	Xxxxx (Command Description)
Command Function	(Description of the command function)
Syntax Query	ATx=?
Syntax	ATx: (parameter1 name 1 - 15), (parameter2 name 1-10),...
Write Syntax	ATx=<value>,<value>[,<optional value>],...
Write Response	OK or ERROR
Read Syntax	ATx?
Read Response	<value>,<value>,...
Execute Syntax	ATx
Execute Response	OK, ERROR, or <value>
Unsolicited Response	
Parameter Values	
<Value 1>	ATx: (1-15),(1-10)
<Value 2>	
Notes	(Additional command notes)
Examples	



Where applicable, the <value> responses provided for the READ and EXECUTE formats are modem default values. All efforts will be made by Novatel Wireless. to keep these values current in the documentation but will not be responsible for any differences that may occur as a result subsequent software builds and version enhancements.



Do not use tab characters in the custom AT command scripts.

# General Commands

---

# AT\$PKG Request Firmware Package

AT\$PKG	Request Firmware Package
Command Function	This command is used to obtain the firmware package version.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$PKG
Execute Response	<baseline release>-<release offset> OK
Unsolicited Response	N/A
Parameter Values	
<baseline release>	1 to 99 - number associated with official production release
<release offset>	<p>A = Controlled Availability : The 'A' release is a prerelease of the next production release and focuses on new features. These releases are rarely placed in manufacturing for shipment and the expectation is that customers move to the production release when available.</p> <p>C = Candidate (internal only) : This label is used to differentiate releases during the system test phase. Internal Release (IR) is by definition, "C1". It's possible that a 'C' release will be sent to a customer for the same reasons as the Controlled Availability release. This release type will not be available for order from manufacturing.</p> <p>D = Maintenance : A 'D' release includes the previous production release plus very specific bug fixes (no new features). Maintenance releases can be, and usually are, released to production. Not all products will necessarily have a maintenance release. For instance, if a Nitro has a GPS issue that requires a maintenance release, the OEM modules will not have a release.</p> <p>E = Engineering (internal only) : Although these are internal releases, they can be sent to specific customers to verify either a</p>

AT\$PKG	Request Firmware Package
	bug fix or new feature. These releases cannot be used by customers as a production release. This release type will not be available for order from manufacturing.
Notes	Return value is manufacturer specific.
Examples	<p>AT\$PKG?</p> <p>48 This is a baseline production release</p> <p>AT\$PKG?</p> <p>48-D1 This is the baseline production release with additional bug fixes</p>

# AT+CGMI Request Manufacturer Identification

AT+CGMI	Request Manufacturer Identification
Command Function	This command is used to obtain the manufacturer identification information.
Syntax Query	AT+CGMI=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CGMI
Execute Response	Novatel Wireless. OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	Return value is manufacturer specific.

# AT+CGMM Request Manufacturer Model Identification

AT+CGMM	Request Manufacturer Model Identification
Command Function	This command is used to obtain the manufacturer model identification information.
Syntax Query	AT+CGMM=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CGMM
Execute Response	<model> OK
Unsolicited Response	N/A
Parameter Values	N/A
<model>	Text string containing the model identification information.
Notes	<model> value is manufacturer and model specific.

# AT+CGMR Request Revision Identification

AT+CGMR	Request Revision Identification
Command Function	This command is used to obtain the manufacturer embedded firmware revision information.
Syntax Query	AT+CGMR=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CGMR
Execute Response	AT+CGMR Radio: <radio_vers> Smart Agent: <smart_agent_vers> OK
Unsolicited Response	N/A
Parameter Values	
<radio_vers>	Radio version
<smart_agent_vers>	Smart Agent version
Notes	Return value is manufacturer specific.



# AT+CGSN Request IMEI

AT+CGSN	Request IMEI
Command Function	This command is used to obtain the manufacturer International Mobile Equipment Identity (IMEI).
Syntax Query	AT+CGSN=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CGSN
Execute Response	0044008824900101 OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	Return value is manufacturer specific. The TA returns the International Mobile station Equipment Identifier (IMEI).

# AT+GMI TA Manufacturer ID

AT+GMI	TA Manufacturer ID
Command Function	TA returns information about the manufacturer.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+GMI
Execute Response	Novatel Wireless OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	N/A

# AT+GMM TA Model ID

AT+GMM	TA Model ID
Command Function	TA returns manufacturer model identification.
Syntax Query	AT+GMM=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+GMM
Execute Response	<model> OK
Unsolicited Response	N/A
Parameter Values	
<model>	Text string containing the model identification information.
Notes	<model> value is manufacturer and model specific.

# AT+GMR TA Revision Number

AT+GMR	TA Revision Number
Command Function	Returns software revision information.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+GMR
Execute Response	<revision> OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	N/A

# AT+GSN TA Serial Number

AT+GSN	TA Serial Number
Command Function	This command is used to obtain the manufacturer International Mobile Equipment Identity (IMEI).
Syntax Query	AT+GSN=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+GSN
Execute Response	0044008824900101 OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	Return value is manufacturer specific. The TA returns the International Mobile Equipment Identity (IMEI).

# AT+WS46 Select Wireless Network

AT+WS46	Select Wireless Network
Command Function	This command is used to select the wireless network to operate with the TA.
Syntax Query	AT+WS46=?
Syntax	+WS46: (12) OK
Write Syntax	AT+WS46=<n>
Write Response	OK
Read Syntax	AT+WS46?
Read Response	+WS46: 12 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<n>	12 (GSM Digital Cellular)
Notes	Will provide available network interface support selection.

# ATI Manufacturer Information About TA

ATI	Manufacturer Information About TA
Command Function	List manufacturer.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	ATI
Execute Response	ATI Novatel Wireless. OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	N/A

# META Commands

---



# AT\$HBRST Automatic Modem Reset

AT\$HBRST	Automatic Modem Reset
Command Function	This command allows the user to program the reset interval and enable/disable ignition resets on supported devices.
Syntax Query	AT\$HBRST=?
Syntax	\$HBRST:(0-168),(0-1*),(0-1),(0-1*) OK
Write Syntax	AT\$HBRST=<hours>,<ign rst inhibit>,<motion>,<ignition>
Write Response	OK
Read Syntax	AT\$HBRST?
Read Response	\$HBRST:<hours>,<ign rst inhibit>,<motion>,<ignition> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<hours>	0 = Automatic reset turned off 1-168 = Number of hours until the modem resets
<ign rst inhibit>	0 = inhibit off (default). Modem will be reset when ignition on event is detected. 1 = Inhibit reset upon ignition on  Note: If the device is being reset by ignition input (switched power), the frequency of the heartbeat reset can be set as high as 168 hours. If ignition resets are inhibited, the maximum heartbeat reset allowed is 24 hours. Therefore, if <ign rst inhibit> = 1, <hours> must = (1-24)  * Note: On devices that do not support ignition detection, this parameter value can only be set to 1.

AT\$HBRST	Automatic Modem Reset
<motion>	<p>0 = Postpone automatic reset when &lt;hours&gt; threshold is reached if device is in 'driving' motion state until mode transitions to 'parked' motion state.</p> <p>1= Ignore motion state when implementing automatic reset logic.</p>
<ignition>	<p>0 = Postpone automatic reset when &lt;hours&gt; threshold is reached if device is in 'ignition on' state until mode transitions to 'ignition off' state.</p> <p>1 = Ignore ignition state when implementing automatic reset logic.</p> <p>* Note: On devices that do not support ignition detection, this parameter value can only be set to 1.</p>
Notes	<p>* On devices that do not support ignition detection (such as the MT 1000), the only acceptable value for the &lt;ign rst inhibit&gt; and &lt;ignition&gt; parameters is 1.</p> <p>The time until the modem resets is an approximate value.</p> <p>If the device is being reset by ignition input (switched power), the frequency of the heartbeat reset can be set as high as 168 hours. If ignition resets are inhibited, the maximum heartbeat reset allowed is 24 hours.</p>

# AT&F Set All TA Parameters To Factory Defined Configuration

AT&F	Set All TA Parameters to Factory Defined Configuration
Command Function	Set All TA Parameters to Factory Defined Configuration
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT&F
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	



For devices that support the AT\$CMDPORT command: AT\$CMDPORT is not effected by AT&F. Check AT\$CMDPORT after running AT&F

---

# AT&V Display Current Profile

AT&V	Display Current Profile
Command Function	This command allows the user to view the settings in the current profile.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT&V
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	N/A

# AT&W Save Current Settings

AT&W	Save Current Settings
Command Function	This command allows the user to save the current settings in memory.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT&W
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	<p>To ensure successful completion of the command, do not issue additional commands until 'OK' is returned.</p> <p>AT&amp;W does not save commands that are implemented on the aux processor (OBD and accelerometer commands, essentially any command prefixed with "OBD"). These settings are only persistent if AT\$OBDSAV is sent. If AT\$OBDSAV is not sent, any changes made to OBD or accelerometer commands are maintained through a reset (AT\$RESET), but are lost if the power is cycled.</p>



Users should avoid sending AT&W immediately before a modem reset. A minimum of a few seconds should be allowed between issuing the command and a modem reset.

---

# AT+CEER Extended Error Reporting

AT+CEER	Extended Error Reporting
Command Function	This command is used to control the display of extended result codes for last unsuccessful call setup, in-call modification, last call release, last short message, or last data session.
Syntax Query	AT+CEER=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CEER
Execute Response	+CEER: < DEFBY >,<ORIGSIDE>,<ORIGIN_ENTITY>,<VALUE> [,ERROR DESCRIPTION] OK
Unsolicited Response	N/A
Parameter Values	
<DEFBY>	(defined by) 0 = Standard 1 = Novatel Wireless
<ORIGSIDE>	(originating side) 0 = Network 1 = MS
<ORIGIN_ENTITY>:	0 = SIM 1 = ACI 2 = RLP 3 = RR 4 = MM 5 = CC 6 = SS

AT+CEER	Extended Error Reporting
	7 = SMSCP 8 = SMSRP 9 =- SMSTP 10 = GMM 11 = SM 12 = FAD 13 = T30 14 = GRR 15 = PPP 16 = LLC 17 = SNDCP 18 = PKTIO 19 =- PSI
<VALUE>	See AT+CEER Table in Appendix B
<ERROR DESCRIPTION>	Optional extended error description
Notes	N/A

# AT+CFUN Set Phone Functionality

AT+CFUN	Set Phone Functionality
Command Function	Set command selects the level of functionality <fun> in the ME. Level "full functionality" is where the highest level of power is drawn. "Minimum functionality" is where minimum power is drawn.
Syntax Query	AT+CFUN=?
Syntax	+CFUN: (0,1,4), (0) OK
Response (If HS 1000)	+CFUN: (0,1,2,3,4), (0,1) OK
Write Syntax	AT+CFUN=<fun>,<rst>
Write Response	OK
Read Syntax	AT+CFUN?
Read Response	+CFUN: 1 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<fun>	0 = minimum functionality 1 = full functionality 2 = disable phone transmit RF circuits only (HS 1000 Only) 3 = disable phone receive RF circuits only (HS 1000 Only) 4 = disable phone both transmit and receive RF circuits
<rst>	0 = Do not reset ME
Notes	Once the modem has left the minimum functionality state, it will respond to AT+CFUN? with +CFUN: 1 regardless of whether the modem has reached full functionality yet. (Not applicable to HS 1000)



# AT+CMEE Report Mobile Equipment Errors

AT+CMEE	Report Mobile Equipment Errors
Command Function	Set command disables or enables the use of result code +CME ERROR: <err> as an indication of an error relating to the functionality of the ME. When enabled, ME related errors cause +CME ERROR: <err> final result codes to be returned, instead of the default ERROR final result code. ERROR is returned normally when error is related to syntax, invalid parameters, or TA functionality.
Syntax Query	AT+CMEE=?
Syntax	+CMEE: (0-2) OK
Write Syntax	AT+CMEE=<n>
Write Response	OK
Read Syntax	AT+CMEE?
Read Response	+CMEE: 0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<n>	0 = Disable +CME ERROR 1 = Enable +CME result code and username values 2 = Enable +CME result code and ME verbose values
Notes	

# AT+CPIN Enter PIN

AT+CPIN	Enter PIN
Command Function	<p>Set command sends to the ME a password that is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.).</p> <p>If no PIN request is pending, no action is taken towards ME and an error message, +CME ERROR, is returned to TE.</p> <p>If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, &lt;newpin&gt;, is issued to replace the old pin in the SIM.</p>
Syntax Query	AT+CPIN=?
Syntax	OK
Write Syntax	AT+CPIN=<"pin">,<"newpin">]
Write Response	
Read Syntax	AT+CPIN?
Read Response	<p>+CPIN: &lt;code&gt;</p> <p>OK</p> <p>or</p> <p>+CME ERROR: &lt;err&gt;</p>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<code>	<p>READY = ME is not pending for any password</p> <p>SIM PIN = ME is waiting SIM PIN to be given</p> <p>SIM PUK = ME is waiting SIM PUK to be given</p> <p>PH-SIM PIN = ME is waiting phone-to-SIM card password to be given</p> <p>PH-FSIM PIN = ME is waiting phone-to-very first SIM card password to be given</p> <p>PH-FSIM PUK = ME is waiting phone-to-very first SIM card unblocking password to be given</p> <p>SIM PIN2 = ME is waiting SIM PIN2 to be given (this &lt;code&gt; is recommended to be returned only when the last executed command resulted in PIN2 authentication failure (i.e. +CME</p>

AT+CPIN	Enter PIN
	<p>ERROR: 17); if PIN2 is not entered right after the failure, it is recommended that ME does not block its operation)</p> <p>SIM PUK2 = ME is waiting SIM PUK2 to be given (this &lt;code&gt; is recommended to be returned only when the last executed command resulted in PUK2 authentication failure (i.e. +CME ERROR: 18); if PUK2 and new PIN2 are not entered right after the failure, it is recommended that ME does not block its operation)</p> <p>PH-NET PIN = ME is waiting network personalization password to be given</p> <p>PH-NET PUK = ME is waiting network personalization unblocking password to be given</p> <p>PH-NETSUB PIN = ME is waiting network subset personalization password to be given</p> <p>PH-NETSUB PUK = ME is waiting network subset personalization unblocking password to be given</p> <p>PH-SP PIN = ME is waiting service provider personalization password to be given</p> <p>PH-SP PUK = ME is waiting service provider personalization unblocking password to be given</p> <p>PH-CORP PIN = ME is waiting corporate personalization password to be given</p> <p>PH-CORP PUK = ME is waiting corporatepersonalization</p>
<b>Note</b>	<p>Commands which interact with ME that are accepted when ME is pending SIM PIN, SIM PUK, or PH-SIM are: +CGMI, +CGMM, +CGMR, +CGSN, D112; (emergency call), +CFUN, +CPIN, After power on the modem needs 20-25 seconds to initialize and completely read the SIM.</p> <p>* If AT\$AREG=1, and PIN is enabled, the modem will not complete the auto registration process until after the PIN has been entered (AT+CPIN).</p> <p>Quotation marks are optional when entering &lt;pin&gt; or &lt;newpin&gt;.</p>

# AT+CPUC Price Per Unit And Currency Table

AT+CPUC	Price Per Unit and Currency Table
Command Function	Set command sets the parameters of Advice of Charge related price per unit and currency table in SIM file EFPUCT.
Syntax Query	N/A
Syntax	N/A
Write Syntax	AT+CPUC=<currency>,<ppu>,<passwd>
Write Response	OK
Read Syntax	AT+CPUC?
Read Response	AT+CPUC: " ", " " OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<currency>	string type; three-character currency code (e.g. "GBP", "DEM"); character set as specified by command Select TE Character Set +CSCS
<ppu>	string type; price per unit; dot is used as a decimal separator (e.g. "2.66")
<passwd>	string type; SIM PIN2
Notes	N/A

# AT+CRES Restore Settings

AT+CRES	Restore Settings
Command Function	Restores message service settings from non-volatile memory to active memory.
Syntax Query	AT+CRES=?
Syntax	+CRES: (0-3) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CRES
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	Retrieves profiles stored using AT+CSAS.

# AT+CSAS Save Settings

AT+CSAS	Save Settings
Command Function	Saves active message service commands into non-volatile memory.
Syntax Query	AT+CSAS=?
Syntax	+CSAS: (0-3) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CSAS
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	AT+CRES retrieves stored profiles. Settings specified in commands Service Center Address +CSCA, Set Message Parameters +CSMP and Select Cell Broadcast Message Types +CSCB are saved.

# AT+CSCS Select TE Character Set

AT+CSCS	Select TE Character Set
Command Function	This command is used to select the terminal equipment character set.
Syntax Query	AT+CSCS=?
Syntax	+CSCS: "GSM", "IRA", "PCCP437", "PCDN", "8859-1", "HEX", "UCS2" OK
Write Syntax	AT+CSCS=<chset>
Write Response	OK
Read Syntax	AT+CSCS?
Read Response	+CSCS: "PCCP437" OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<chset>	"GSM" "IRA" "PCCP437" "PCDN" "8859-1" "HEX" "UCS2"
Notes	Values are based on character set support.

# AT+CSTA Select Type Of Address

AT+CSTA	Select Type of Address
Command Function	This command is used to select the type of number to be used for further dialing commands.
Syntax Query	AT+CSTA=?
Syntax	+CSTA: (129,145) OK
Write Syntax	AT+CSTA=<n>
Write Response	OK
Read Syntax	AT+CSTA?
Read Response	+CSTA: 129 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<n>	129 - Dialing string without International Access Code character "+" 145 - Dialing string with International Access Code character "+"
Notes	N/A



# AT+FCLASS GSM Class Of Service

AT+FCLASS	GSM Class of Service
Command Function	This command puts the TA into a particular mode of operation (data, voice etc.). This causes the TA to process information in a manner suitable for that type of information (rather than for other types of information).
Syntax Query	AT+FCLASS=?
Syntax	0,2,0,8 OK
Write Syntax	AT+FCLASS=<mode>
Write Response	OK
Read Syntax	AT+FCLASS?
Read Response	0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<mode>	0 = Data 2.0 = fax class 2 (ITU-T T.32 [12] and TIA-592) 8 = Voice
Notes	N/A

# AT+GCAP Request Overall Capabilities For TA

AT+GCAP	Request Overall Capabilities for TA
Command Function	TA returns a list of additional capabilities
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+GCAP
Execute Response	+GCAP: +CIS707-A, +MS, +ES, +DS, +FCLASS OK
Response (if HS 1000)	+GCAP: +CGSM OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	N/A

# ATE Command Echo Mode

ATE	Command Echo Mode
Command Function	Determines whether the TA echoes characters typed locally.
Syntax Query	N/A
Syntax	N/A
Write Syntax	ATE<value>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<value>	0 = Do not echo characters locally 1 = Echo characters locally
Notes	ATE1 cannot be saved using AT&W

# ATQ Result Code Suppression

ATQ	Result Code Suppression
Command Function	Determines whether or not the TA transmits any result code to the TE.
Syntax Query	N/A
Syntax	N/A
Write Syntax	ATQ<value>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<value>	0 =DCE transmits result codes 1 =Result codes are suppressed and not transmitted
Notes	The parameter for this command is persistent via AT&W.

# ATS3 Command Line Termination Character

ATS3	Command Line Termination Character
Command Function	Determines the character recognized by the TA to terminate an incoming command line.
Syntax Query	ATS3=?
Syntax	S3(0-127) OK
Write Syntax	ATS3=<n>
Write Response	OK
Read Syntax	ATS3?
Read Response	013 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	N/A
Notes	The parameter for this command is persistent via AT&W.

# ATS4 Response Formatting Character

ATS4	Response Formatting Character
Command Function	Determines the character generated by the TA for result code and information text.
Syntax Query	ATS4=?
Syntax	S4(0-127) OK
Write Syntax	ATS4=<n>
Write Response	OK
Read Syntax	ATS4?
Read Response	010 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	N/A
Notes	The parameter for this command is persistent via AT&W.

# ATS5 Editing Character

ATS5	Editing Character
Command Function	Determines the character recognized by the TA as a request to delete the preceding character form the command line.
Syntax Query	ATS5=?
Syntax	S5(0-127) OK
Write Syntax	ATS5=<n>
Write Response	OK
Read Syntax	ATS5?
Read Response	008 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	N/A
Notes	The parameter for this command is persistent via AT&W.

# ATV Response Format

ATV	Response Format
Command Function	Determines the DCE response format, with or without header character, and the use of numerical results code.
Syntax Query	N/A
Syntax	N/A
Write Syntax	ATV<value>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<value>	0 = DCE transmits limited headers and trailers and numeric result codes 1 = DCE transmits full headers and trailers and verbose response text
Notes	N/A



# ATX CONNECT Result

ATX	CONNECT Result
Command Function	Determines whether or not the TA transmits particular result codes.
Syntax Query	N/A
Syntax	N/A
Write Syntax	ATX<value>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<value>	0 = Short result code format 1 = Long result code format
Notes	For UDP and TCP PAD operation, setting of ATX1 will display the network assigned IP after the CONNECT or LISTEN message.

# ATZ Set All TA Parameters To Default Configuration

ATZ	Set All TA Parameters to Default Configuration
Command Function	Set All TA Parameters to Default Configuration.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	ATZ
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	Non volatile memory is not reset.

# Call Control Commands

---

# ATD Dial Command

ATD	Dial command
Command Function	This command is used to setup an outbound voice or data call.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	ATD1234567I;
Execute Response	NO DIALTONE or NO CARRIER or CONNECT <value> (for Data only) or BUSY or OK
Unsolicited Response	N/A
Parameter Values	
<n>	V.25ter Dialing Digits = 0 - 9, *, #, +, A, B, C V.25ter Dialing Modifiers = , (comma), T, P, !, @, W

ATD	Dial command
<cmo>	GSM Modifier Characters I = Restrict CLI, i = Allow CLI (Not applicable to HS 1000)
<;>	Semicolon after dialing string or modifier indicates voice call and forces TA into command mode after successful completion. If sending ATD for voice call via a stored event (AT\$STOATEV) replace <;> with a v. Refer to AT\$STOATEV command
Notes	Modem Responses: NO DIALTONE - if no dial tone is detected NO CARRIER - if call cannot be set up CONNECT <value> - when connected in a non-voice call (data mode) <value> dependent on ATX setting BUSY - if dialed number is busy OK - when successful voice call or TA ends current call and returns to command mode

# ATH Hook Control

ATH	Hook Control
Command Function	Disconnect an existing PAD session.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	ATH
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	If data call or session is active, +++ (escape sequence) must be entered to go to command mode prior to sending ATH command. User must set AT+CVHU=0 to enable ATH to hang up a voice call.

# H Manual Rejection Of A Network Request For PDP Context Activation

H	Manual Rejection of a Network Request for PDP Context Activation
Command Function	The V.25ter 'H' or 'HO' (On-hook) command may be used to reject a network request for PDP context activation announced by the unsolicited result code RING.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	H
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	N/A

# Network Service Commands

---




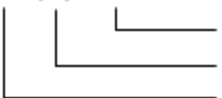
# AT+CIMI Request IMSI

AT+CIMI	Request IMSI
Command Function	This command is used to obtain the International Mobile Subscriber Identity (IMSI) value assigned to the SIM.
Syntax Query	AT+CIMI=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CIMI
Execute Response	310260101xxxxx OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	Return value is manufacturer specific. The TA returns the International Mobile Subscriber Identity (IMSI).

# AT+CLCK Facility Lock

AT+CLCK	Facility Lock
Command Function	This command is used to lock, unlock or interrogate a ME or a network facility <fac>. When querying the status of a network service (<mode>=2) the response line for a “not active” case (<status>=0) should be returned only if service is not active for any <class>. It should be possible to abort the command when network facilities are set or interrogated.
Syntax Query	AT+CLCK=?
Syntax	+CLCK: ("SC","AO","OI","OX","AI","IR","AB","AG","AC","FD","PS","PN","PU","PP","PC","PF","FC","FM","MU","MM","AL") OK
Write Syntax	AT+CLCK=<fac>, <mode> [, <passwd> [, <class>]]
Write Response	If <mode><> 2 and command is successful then OK If <mode>=2 and command is successful then +CLCK:<status>[, <class1>[<CR><LF>+CLCK: <status>, class2...]] OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<fac>	“SC” = (SIM PIN 1) “AO” = (Barr All Outgoing Calls) “OI” = (Barr Outgoing International Calls) “OX” = (Barr Outgoing International Calls except Home Country) “AI” = (Barr All Incoming Calls) “IR” = (Barr Incoming Calls when Roaming outside the Home Country) “AB” = (All Barring Services) “AG” = (All Outgoing Barring)

AT+CLCK	Facility Lock
	<p>"AC" = (All incoming Barring)</p> <p>"FD" = (SIM Fixed Dialing Feature)</p> <p>"PC" = (Corporate Personalization, allows personalization to custom corporate group settings)</p> <p>"PP" = (Provider Personalization, allows for personalization to custom service provider defined groups)</p> <p>"PS" = PH-SIM (lock PHone to SIM card) (ME asks password when other than current SIM card inserted; ME may remember certain amount of previously used cards thus not requiring password when they are inserted)</p> <p>"PN" = Network Personalisation (refer GSM 02.22 [33])</p> <p>"PU" = network sUbset Personalisation (refer GSM 02.22 [33])</p> <p>"PF" = lock Phone to the very First inserted SIM card (also referred in the present document as PH-FSIM) (ME asks password when other than the first SIM card is inserted)</p> <p>"FC" = Fail count</p> <p>"FM" = Fail count reset</p> <p>"MU" = Master unlock</p> <p>"MM" = Master unlock menu</p> <p>"AL" = alternating Line service (PIN2)</p>
<mode>	<p>0 = Unlock</p> <p>1 = Lock</p> <p>2 = Query Status</p>
<passwd>	"password"
<class>	<p>1 = voice</p> <p>2 = data</p> <p>4 = fax (fax not supported)</p> <p>7 = all classes (default)</p> <p>8 = short message service</p>

AT+CLCK	Facility Lock
<status>	0 = Off 1 = On
Notes	Quotation marks are optional when entering <passwd>.
Example:	<p>To set Network Personalization on first SIM inserted</p> <pre>AT+CLCK="PF",1,"password","PN"</pre>  <p>       Password        Lock        Lock module to very first SIM        inserted     </p> <p>To enable SIM PIN</p> <pre>AT+CLCK="SC",1,"xxxx"</pre>  <p>       PIN        Enable        SIM PIN     </p>

# AT+CLCKCFG Set Facility Lock Configuration

AT+CLCKCFG	Set Facility Lock Configuration
Command Function	This command set the configuration for facility lock "PN" (network personalization)
Syntax Query	QueryAT+CLCKCFG=?
Response	+CLCKCFG: (0-2),("MCC"),("MNC"),("NWSub") OK
Write Syntax	AT+CLCKCFG=<mode>,"MCC","MNC"
Response	OK
Read Syntax	AT+CLCKCFG?
Response	+CLCKCFG: MCC,MNC,[NWSub] OK
Execute Syntax	N/A
Response	N/A
Parameter Values	
<Mode>	0 Disable 1 Enable 2 Disable all "MCC" = Mobile Country Code "MNC" = Mobile Network Code "NWSub" = 2 digit Network Subset Code (optional)
Notes	

# AT+CLKCP Set Corporate Personalization Lock

AT+CLKCP	Set Corporate Personalization Lock
Command Function	allows the user to set, delete and or display the Corporate Provider personalization lock codes, which are stored in the device. <a href="#">"AT+CLKCP Set Corporate Personalization Lock" on page 56</a>
Syntax Query	AT+CLKCP=?
Response	+CLKCP: (0-2), (0-FE)
Write Syntax	AT+CLKCP= <operation_code>,<cp_personalization_code>
Response	OK
Read Syntax	AT+CLKCP?
Response	CP: "<cp_personalization_code(s)>"...
Execute Syntax	N/A
Response	N/A
Parameter Values	
<operation code>	<p>Operation to be performed. The available options are;</p> <p>0=&gt; Delete the value "cp_personalization_code", from the current list stored in the device.</p> <p>1=&gt; Add the value "cp_personalization_code", to the current list stored in the device.</p> <p>2=&gt; Delete ALL entries from the device stored list. When this operation is selected the user MUST enter the value of D6 for the cp_personalization_code. This acts as safety</p>

<b>AT+CLCKCP</b>	<b>Set Corporate Personalization Lock</b>
<b>&lt; cp_personalization_code&gt;</b>	CP personalization code which to set or delete from the devices stored list. The valid range for this parameter is 0..FE. The values are hexadecimal input only.
<b>Notes</b>	
<b>Examples</b>	AT+CLCKCP=1,34 Adds the Corporate Personalization

# AT+CLKSP Set Provider Personalization Lock

AT+CLKSP	Set Provider Personalization Lock
Command Function	This command allows the user to set, delete and or display the Service Provider personalization lock codes, which are stored in the phone device.
Syntax Query	AT+CLKSP=?
Response	+CLKSP: (0-2),(0-FE) OK
Write Syntax	AT+CLKSP= <operation_code>,<sp_personalization_code>
Response	OK
Read Syntax	AT+CLKSP?
Response	+CLKSP: "<sp_personalization_code(s)>"...
Execute Syntax	N/A
Response	N/A
Parameter Values	
<operation code>	<p>Operation to be performed. The available options are;</p> <p>0=&gt; Delete the value "sp_personalization_code", from the current list stored in the phone.</p> <p>1=&gt; Add the value "sp_personalization_code", to the current list stored in the phone.</p> <p>2=&gt; Delete ALL entries from the phone stored list. When this operation is selected the user MUST enter the value of D6 for the sp_personalization_code. This acts as safety</p>



AT+CLCKSP	Set Provider Personalization Lock
< Sp_personalization_code>	<p>personalization code which to set or delete from the phones stored list.</p> <p>The valid range for this parameter is 0..FE. The values are hexadecimal input only.</p>
<b>Notes</b>	<p>The SIM used for the phone must be programmed and inserted into the phone with valid SP codes,</p> <p>and available to be read or this command will not store or delete phone SP codes.</p> <p>If the SIM does not support SP personalization an error will be returned.</p>
<b>Examples</b>	<p>AT+CLCKSP=1,34 Adds the Service Provider personalization code 34 to the phone stored list. If the list is full an error will be returned.</p> <p>AT+CLCKSP?Display current Service Provider code list from the phone</p> <p>SP: 34</p> <p>OK</p> <p>AT+CLCKSP=0,32Deletes the code value 32 from the phones list. If the value is not found an error is returned.</p> <p>AT+CLCKSP=2,D6Deletes all entries from the SP phone list.</p>

# AT+CNUM Subscriber Number

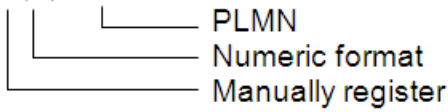
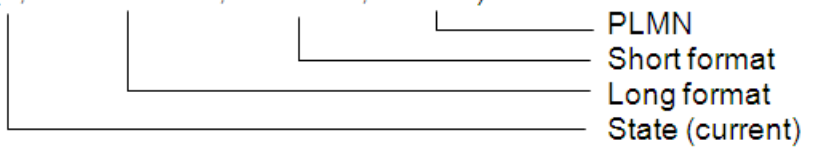
AT+CNUM	Subscriber Number
Command Function	This command is used to obtain the MSISDNs related to the subscriber.
Syntax Query	AT+CNUM=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CNUM
Execute Response	+CNUM: "Line1", "xxx xxx xxxx", 145 OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	

# AT+COPN Read Operator Names

AT+COPN	Read Operator Names
Command Function	Execute command returns the list of operator names from the ME.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+COPN
Execute Response	+COPN: <numeric1>,<alpha1>[<CR><LF>+COPN: <numeric2>,<alpha2>[...]] OK
Unsolicited Response	N/A
Parameter Values	
<numericn>	string type; operator in numeric format (see +COPS)
<alphan>	string type; operator in long alphanumeric format (see +COPS)
Notes	N/A

# AT+COPS Operator Selection

AT+COPS	Operator Selection
Command Function	<p>Write command forces an attempt to select and register the GSM network operator. &lt;mode&gt; is used to select whether the selection is done automatically by the ME or is forced by this command to operator &lt;oper&gt; (it shall be given in format &lt;format&gt;). If the selected operator is not available, no other operator shall be selected (except &lt;mode&gt; = 4). The selected operator name format shall apply to further read commands (+COPS?) also. &lt;mode&gt;=2 forces an attempt to deregister from the network. The selected mode affects to all further registration (e.g. after &lt;mode&gt;=2, ME shall be unregistered until &lt;mode&gt;=0 or 1 is selected).</p> <p>Read command returns the current mode and the currently selected operator. If no operator is selected, &lt;format&gt; and &lt;oper&gt; are omitted.</p> <p>Test command returns a list of quadruplets, each representing an operator present in the network. Quadruplet consists of an integer indicating the availability of the operator &lt;stat&gt;, long and short alphanumeric format of the name of the operator, and numeric format representation of the operator. Any of the formats may be unavailable and will then be an empty field (,,). The list of operators comes in the following order: Home network, networks referenced in SIM, and other networks.</p>
Syntax Query	AT+COPS=?
Syntax	<p>+COPS: (2, “ “, “ “, “31022”), (3, “ “, “ “, “310380”)</p> <p>OK</p>
Write Syntax	AT+COPS=<mode>
Write Response	<p>[, &lt;format&gt; [, oper&gt;]]</p> <p>OK or +CME ERROR: &lt;err&gt;</p>
Read Syntax	AT+COPS?
Read Response	<p>+COPS: 0</p> <p>OK</p>
Execute Syntax	N/A
Execute Response	N/A

AT+COPS	Operator Selection
Unsolicited Response	N/A
Parameter Values	
<mode>	0 = automatic (<oper> field is ignored) 1 = manual (<oper> field shall be present) 2 = deregister from network 3 = set only <format> (for read command +COPS?), do not attempt registration/deregistration (<oper> field is ignored); this value is not applicable in read command response 4 = manual/automatic (<oper> field shall be present); if manual selection fails, automatic mode (<mode>=0) is entered
<format>	0 = long format alphanumeric <oper> 1 = short format alphanumeric <oper> 2 = numeric <oper>; GSM Location Area Identification Number
<oper>	operator in format as in per <format>
<stat>	0 = Unknown 1 = Available 2 = Current 3 = Forbidden
Notes	
Example	<p>To manually register the modem on a known PLMN:</p> <pre>AT+COPS=1,2,"xxxxx"</pre>  <p>To read operator information:</p> <pre>AT+COPS=? +COPS: (2,"Voicestream","Vstream","31022")</pre> 

# AT+CPOL Preferred Operator List

AT+CPOL	Preferred Operator List
Command Function	This command is used to list and edit the SIM preferred list of networks.
Syntax Query	AT+CPOL=?
Syntax	+CPOL: (1-n), (0-2) OK
Write Syntax	AT+CPOL=[<index>][, <format>[, <oper>]]
Write Response	OK
Read Syntax	AT+CPOL?
Read Response	+CPOL: <index1>,<format>,<oper1>... <index10>,<format>,<oper10> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<indexn>	integer type; the order number of operator in the SIM preferred operator list
<format>	0 = long format alphanumeric <oper> 1 = short format alphanumeric <oper> 2 = numeric <oper>
<opern>	string type; <format> indicates if the format is alphanumeric or numeric (see +COPS)
Notes	This command is used to edit the SIM preferred list of networks. Execute command writes an entry in the SIM list of preferred operators (EFPLMNsel). If <index> is given but <oper> is left out, entry is deleted. If <oper> is given but <index> is left out, <oper> is put in the next free location. If only <format> is given, the format of the <oper> in the read command is changed.

# AT+CPOL Preferred PLMN List

AT+CPOL	Preferred PLMN List
Command Function	This command is used for adding/deleting/updating the preferred PLMN list. Also it is used for reading the all used entries from the SIM/USIM list of preferred PLMNs.
Syntax Query	+CPOL=?
Response	+CPOL: (list of supported <index>s),(list of supported <format>s) +CME ERROR: <err>
Write Syntax	+CPOL=[<index>][,<format>,<oper>[,<GSM_AcT>,<GSM_Compact_AcT>,<UTRAN_AcT>]]
Response	+CME ERROR: <err>
Read Syntax	+CPOL?
Response	+CPOL: <index1>,<format>,<oper1>[,<GSM_AcT1>,<GSM_Compact_AcT1>,<UTRAN_AcT1>] [<CR><LF>+CPOL: <index2>,<format>,<oper2>[,<GSM_AcT2>,<GSM_Compact_AcT2>,<UTRAN_AcT2>] [...]] +CME ERROR: <err>
Execute Syntax	N/A
Response	N/A
Parameter Values	
<indexn>	integer type; the order number of operator in the SIM/USIM preferred operator list  Note: Index value supported values is 1..MAX depends on the SIM Capacity.
<format>	0 = long format alphanumeric <oper> 2 = numeric <oper>  Note: Only Numeric values are allowed when <format> is set to "2".
<opern>	string type; <format> indicates if the format is alphanumeric or numeric (see +COPS)  <GSM_AcTn>: GSM access technology: 0 = access technology not selected

AT+CPOL	Preferred PLMN List
	1 =access technology selected
<GSM_Compact_AcTn>	GSM compact access technology: 0 = access technology not selected 1 = access technology selected
<UTRA_AcTn>	UTRA access technology: 0 = access technology not selected 1 = access technology selected
Notes	
Examples	



# AT+CSQ Signal Quality And Bit Error Rate

AT+CSQ	Signal Quality and Bit Error Rate
Command Function	Execution command returns received signal strength indication <rss> and channel bit error rate <ber> from the ME.
Syntax Query	AT+CSQ=?
Syntax	+CSQ: 2-31,(99),(99) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CSQ
Execute Response	+CSQ: <rss>,<ber> OK
Unsolicited Response	NA
Parameter Values	
<rss>	0 = -113 dBm or less 1 = -111 dBm 2-30 = -109... -53 dBm 31 = -51 dBm or greater 99 = not known or not detectable
<ber>	(in percent) 0-7 = as RXQUAL values in the table in GSM 05.08 [20] subclause 8.2.4 99 = not known or not detectable
Notes	N/A

RX Level	Range	
	(min) dBm	(max) dBm
0	< -110	-110
1	-110	-109
2	-109	-108
3	-108	-107
4	-107	-106
5	-106	-105
6	-105	-104
7	-104	-103
8	-103	-102
9	-102	-101
10	-101	-100
11	-100	-99
12	-99	-98
13	-98	-97
14	-97	-96
15	-96	-95
16	-95	-94
17	-94	-93
18	-93	-92
19	-92	-91
20	-91	-90
21	-90	-89
22	-89	-88
23	-88	-87
24	-87	-86
25	-86	-85
26	-85	-84
27	-84	-83
28	-83	-82
29	-82	-81
30	-81	-80
31	-80	-79
32	-79	-78
33	-78	-77
34	-77	-76
35	-76	-75
36	-75	-74

37	-74	-73
38	-73	-72
39	-72	-71
40	-71	-70
41	-70	-69
42	-69	-68
43	-68	-67
44	-67	-66
45	-66	-65
46	-65	-64
47	-64	-63
48	-63	-62
49	-62	-61
50	-61	-60
51	-60	-59
52	-59	-58
53	-58	-57
54	-57	-56
55	-56	-55
56	-55	-54
57	-54	-53
58	-53	-52
59	-52	-51
60	-51	-50
61	-50	-49
62	-49	-48
63	-48	> -48 dBm

Table 5-1 RSSI values

# AT+CRLP Radio Link Protocol Parameters

AT+CRLP	Radio Link Protocol Parameters
Command Function	This command is used to select the radio link protocol parameters.
Syntax Query	AT+CRLP=?
Syntax	+CRLP: (0-61), (0-61), (39-255), (1-255) OK
Write Syntax	AT+CRLP=<iws>,<mws>,<T1>,<N2>
Write Response	OK/ERROR
Read Syntax	AT+CRLP?
Read Response	+CRLP: 61, 61, 48, 6 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<iws>	IWF to MS window size values = 0 to 61 (61 recommended)
<mws>	MS to IWF window size values = 0 to 61 (61 recommended)
<T1>	Acknowledgment timer values = halfrate >380ms (480 recommended) fullrate >600ms (780 recommended)
<N2>	Retransmission attempts values = >0 (6 recommended)
Notes	N/A

# Supplementary Service Commands

---

# AT+CSSN Supplementary Service Notifications

AT+CSSN	Supplementary Service Notifications
Command Function	<p>This command refers to supplementary service related network initiated notifications. The set command enables/disables the presentation of notification result codes from TA to TE.</p> <p>When &lt;n&gt;=1 and a supplementary service notification is received after a mobile originated call setup, intermediate result code +CSSI: &lt;code1&gt;[,&lt;index&gt;] is sent to TE before any other MO call setup result codes are presented. When several different &lt;code1&gt;s are received from the network, each of them shall have its own +CSSI result code.</p> <p>When &lt;m&gt;=1 and a supplementary service notification is received during a mobile terminated call setup or during a call; or when a forward check supplementary service notification is received, unsolicited result code +CSSU: &lt;code2&gt;[,&lt;index&gt;[,&lt;number&gt;,&lt;type&gt;[,&lt;subaddr&gt;,&lt;satype&gt;]]] is sent to TE. In case of MT call setup, result code is sent after every +CLIP result code (refer command "Calling line identification presentation +CLIP"). When several different &lt;code2&gt;s are received from the network, each of them shall have its own +CSSU result code.</p>
Syntax Query	AT+CSSN=?
Syntax	+CSSN: (0,1),(0,1) OK
Write Syntax	AT+CSSN=<n>,<m>
Write Response	OK
Read Syntax	AT+CSSN?
Read Response	+CSSN: <n>,<m> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<n>	(parameter sets/shows the +CSSI result code presentation status in

AT+CSSN	Supplementary Service Notifications
	<p>the TA):</p> <p>0 = disable</p> <p>1 = enable</p>
<m>	<p>(parameter sets/shows the +CSSU result code presentation status in the TA):</p> <p>0 = disable</p> <p>1 = enable</p>
<code1>	<p>0 = unconditional call forwarding is active</p> <p>1 = some of the conditional call forwardings are active</p> <p>2 = call has been forwarded</p> <p>3 = call is waiting</p> <p>4 = this is a CUG call (also &lt;index&gt; present)</p> <p>5 = outgoing calls are barred</p> <p>6 = incoming calls are barred</p> <p>7 = CLIR suppression rejected</p> <p>8 = call has been deflected</p>
<index>	refer "Closed user group +CCUG"
<code2>	<p>0 = this is a forwarded call (MT call setup)</p> <p>1 = this is a CUG call (also &lt;index&gt; present) (MT call setup)</p> <p>2 = call has been put on hold (during a voice call)</p> <p>3 = call has been retrieved (during a voice call)</p> <p>4 = multiparty call entered (during a voice call)</p> <p>5 = call on hold has been released (this is not a SS notification) (during a voice call)</p> <p>6 = forward check SS message received (can be received whenever)</p> <p>7 -= call is being connected (alerting) with the remote party in alerting state in explicit call transfer operation (during a voice call)</p> <p>8 = call has been connected with the other remote party in explicit call transfer operation (also number and subaddress parameters may be present) (during a voice call or MT call setup)</p> <p>9 = this is a deflected call (MT call setup)</p>

AT+CSSN	Supplementary Service Notifications
<number>	string type phone number of format specified by <type>
<type>	type of address octet in integer format
<subaddr>	string type subaddress of format specified by <satype>
<satype>	type of subaddress octet in integer format
Notes	N/A



# AT+CUSD Unstructured Supplementary Service

AT+CUSD	Unstructured Supplementary Service
Command Function	This command allows control of the Unstructured Supplementary Service Data (USSD)]. Both network and mobile initiated operations are supported. Parameter <n> is used to disable/enable the presentation of an unsolicited result code (network initiated operation) to the TE.
Syntax Query	AT+CUSD=?
Syntax	+CUSD: (0,1,2) OK
Write Syntax	+CUSD=[<n>[,<str>[,<dcs>]]]
Write Response	OK
Read Syntax	AT+CUSD?
Read Response	+CUSD: 0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<n>	0 = disable the result code presentation 1 = enable the result code presentation 2 = cancel session
<str>	(when <str> parameter is not given, network is not interrogated) actual USSD string in “quotes”

AT+CUSD	Unstructured Supplementary Service
<dc>	language parameter - Default 15 (Language unspecified)
Notes	
Example	AT+CUSD=1,"*201*35#",15 OK +CUSD: 0,"*201*35#",15 (network response) USSD stings can also be sent using the ATD command. ATD*201*35# OK +CUSD: 0,"*201*35#",15 (network response)

# SMS Commands

---

# AT\$QCMSS Send Message From Storage

AT\$QCMSS	Send Message from Storage
Command Function	Sends message (with location value) from preferred message storage.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$QCMSS=<index>
Execute Response	\$QCMSS: <mr> OK
Unsolicited Response	N/A
Parameter Values	
<index>	Integer value of location number supported by associated memory
<mr>	Message reference
Notes	<p>The above is for text mode only.</p> <p>The following limitations on SMS functionality currently apply.</p> <ol style="list-style-type: none"> <li>1. Concatenated SMS transmit is not supported.</li> <li>2. Broadcast SMS is not supported.</li> </ol>

# AT\$QCMGD Delete Message

AT\$QCMGD	Delete Message
Command Function	Deletes message from preferred storage location.
Syntax Query	AT\$QCMGD=?
Syntax	\$QCMGD:(<indexList>),(0-4)
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$QCMGD=<index>[,<status>]
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	
<index>	Integer value of memory location.
<status>	<p>0 = Delete the messages specified by the index</p> <p>1 = Ignore the index and delete all the read messages</p> <p>2 = Ignore the index and delete all the read and sent messages</p> <p>3 = Ignore the index and delete all the read, sent and unsent messages.</p> <p>4 = Ignore the index and delete all the messages whatever the status is</p>
Notes	<p>If there is no message stored in the selected index, an error will be returned.</p> <p>To delete a single message, use the execute command with the single index parameter and do not include the &lt;status&gt; parameter.</p>
Examples	<p>To delete message 1: AT\$QCMGD=1</p> <p>To delete all messages: AT\$QCMGD=,4</p>

# AT\$QCMGF SMS Format

AT\$QCMGF	SMS Format
Command Function	Set command tells the TA, which input and output format of messages to use. <mode> indicates the format of messages used with send, list, read and write commands and unsolicited result codes resulting from received messages.
Syntax Query	AT\$QCMGF=?
Syntax	AT\$QCMGF: (1) OK
Write Syntax	AT\$CMGF=<mode>
Write Response	OK
Read Syntax	AT\$QCMGF?
Read Response	\$QCMGF: 1 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<mode>	1 = Text mode
Notes	

# AT\$QCMGL List Messages

AT\$QCMGL	List Messages
Command Function	List messages from storage.
Syntax Query	AT\$QCMGL=?
Syntax	\$QCMGL: ("REC UNREAD","REC READ","STO UNSENT","STO SENT","ALL") OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$QCMGL =<stat>
Execute Response	\$QCMGL: <index>,<stat>,<da/oa>, [<alpha>,<scts>,<tooa/toda>,<length>] <CR><LF> data OK
Unsolicited Response	N/A
Parameter Values	See Notes
<index>	Memory location integer
<stat>	Status of message "REC UNREAD" "REC READ" "STO UNREAD" "STO READ" "ALL"
<do/oa>	destination address
<alpha>	alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook
<scts>	Service center time stamp

<b>AT\$QCMGL</b>	<b>List Messages</b>
<b>&lt;tooa/toda&gt;</b>	Address Type-of-Address octet in integer format
<b>&lt;length&gt;</b>	Length of message in octets
<b>Notes</b>	<p>Above settings for &lt;stat&gt; assume AT\$QCMGF=1 (text mode).</p> <p>Parameters in [] may or may not be reported dependent upon the setting of AT\$QCMGF.</p> <p>0 = "Rec Unread"</p> <p>1 = "Rec Read"</p> <p>2 = "Sto Unsent"</p> <p>3 = "Sto Sent"</p> <p>4 = "ALL"</p>



# AT\$QCMGR Read Message

AT\$QCMGR	Read Message
Command Function	Read stored messages.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$QCMGR=<index>
Execute Response	\$QCMGR: <stat>,<oa>,<scts>,<tooa>,<fo>,<pid>,<sca>,<tosca>,<length>]<CR><LF><data> OK
Unsolicited Response	N/A
Parameter Values	
<stat>	Status of message (Rec Read, Rec Unread, Sto Unsent, Sto Sent)
<oa>	Originating address
<scts>	Service center time stamp
<tooa>	Originating address - type of address
<fo>	First octet
<pid>	Protocol identifier
<sca>	Service center address
<tosca>	Type of address
<length>	Length of message in octets
Notes	The above parameters are for text mode.

# AT\$QCMGS Send Message

<b>AT\$QCMGS</b>	<b>Send Message</b>
<b>Command Function</b>	Sends message from the TE to the network.
<b>Syntax Query</b>	N/A
<b>Syntax</b>	N/A
<b>Write Syntax</b>	N/A
<b>Write Response</b>	N/A
<b>Read Syntax</b>	N/A
<b>Read Response</b>	N/A
<b>Execute Syntax</b>	AT\$QCMGS="<da>",<[<tda>]
<b>Execute Response</b>	Enter text <cntl Z> \$QCMGS <mr> OK
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;da&gt;</b>	Destination address
<b>&lt;mr&gt;</b>	Message reference
<b>Notes</b>	<p>The example provided is for text mode (AT\$CMGF=1).</p> <p>The following limitations on SMS functionality currently apply.</p> <ol style="list-style-type: none"> <li>1. Concatenated SMS transmit is not supported.</li> <li>2. Broadcast SMS is not supported.</li> </ol>

# AT\$QCMGW Write Message To Memory

AT\$QCMGW	Write Message to Memory
Command Function	Writes message to preferred storage location.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$QCMGW=<"da"><CR><LF>
Execute Response	Text is entered<ctrlZ> \$CMGW: <index> OK
Unsolicited Response	N/A
Parameter Values	
<da>	Destination Address
<index>	Integer value of memory location of the stored message
Notes	The above is for text mode only.

# AT\$QCNMI New Message Indications To TE

AT\$QCNMI	New Message Indications to TE
Command Function	New Message Indications to TE
Syntax Query	\$QCNMI=?
Response	QCNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bfr>s)
Write Syntax	\$QCNMI=[<mode>[,<mt>[,<bfr>]]]
Response	\$QCMS ERROR: <err>
Read Syntax	\$QCNMI?
Response	\$CNMI: <mode>,<mt>,<bfr>
Execute Syntax	N/A
Response	N/A
Parameter Values	
<mode>	0 = Do not forward unsolicited result codes 3 = Forward unsolicited codes to accessory
<mt>	0 = Disable SMS notification 1 = Enable unsolicited response for indication of incoming message in storage. 2 = Enable unsolicited response for incoming SMS message.
<bfr>	0 = Flush SU's result code buffer when <mode> is 3.
Notes	
Examples	

# AT\$QCPMS Preferred Message Storage

AT\$QCPMS	Preferred Message Storage
Command Function	Set command selects memory storages <mem1>, <mem2> and <mem3> to be used for reading, writing, etc.
Syntax Query	AT\$QCPMS=?
Syntax	\$QCPMS: "ME","MT" OK
Write Syntax	AT\$QCPMS=<mem1>,<mem2>,<mem3>
Write Response	OK
Read Syntax	AT\$QCPMS?
Read Response	\$QCPMS: <mem1>,<usedSpace1>,<maxSpace1>,<mem2>,<usedSpace2>,<maxSpace2>,<mem3>,<usedSpace3>,<maxSpace3> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<mem1>	String type; memory from which messages are read and deleted (commands List Messages \$QCMGL, Read Message \$QCMGR and Delete Message \$QCMGD)  Defined values: "ME" = ME message storage "MT" = Any of the message storage associated with the device

AT\$QCPMS	Preferred Message Storage
<mem2>	String type; memory to which writing and sending operations are made (commands Send Message from Storage \$QCMSS and Write Message to Memory \$QCMGW) refer to <mem1> for defined values
<mem3>	String type; memory to which received messages are preferred to be stored (unless class of message defines a specific storage location; refer to command New Message Indications \$QCNMI) refer to <mem1> for defined values
Notes	

# AT\$QCSMP Set Text Mode Parameters

AT\$QCSMP	Set Text Mode Parameters
Command Function	Selects additional values needed when the SMS is sent to the network or placed in storage.
Syntax Query	AT\$QCSMP=?
Syntax	OK
Write Syntax	AT\$QCSMP=<tid>,<vpf>,<vp>,<ddtf>,<ddt>
Write Response	OK
Read Syntax	AT\$QCSMP?
Read Response	\$QCSMP: 4095, 0, "string", 0, 0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<tid>	Teleservice ID 4095 - 4102
<vpf>	Validity Period Format 0 = Absolute 1 = Relative
<vp>	Validity Period string[22]
<ddtf>	Deferred Delivery Time Format 0 Absolute, 1 Relative
<ddt>	Deferred Delivery Time string[22]
Notes	N/A

# AT\$SMSURC Enable URC To Be Sent By SMS

AT\$SMSURC	Enable URC to be sent by SMS
Command Function	This command enables some URCs to be sent via SMS.
Syntax Query	AT\$SMSURC=?
Syntax	\$SMSURC: (0-1),(0-1) OK
Write Syntax	AT\$SMSURC=<urc1>,<urc2>
Write Response	OK
Read Syntax	AT\$SMSURC?
Read Response	\$SMSURC: OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<urc1>	0 = Do not send URCs from \$FTPOPEN, \$FTPCLOSE, \$FTPGET, and \$FTPPUT via SMS if the command was sent via SMS 1 = Send URCs from \$FTPOPEN, \$FTPCLOSE, \$FTPGET, and \$FTPPUT via SMS if the command was sent via SMS
<urc2>	0 = Do not send URCs from \$ATEXEC via SMS if the command was sent via SMS 1 = Send URCs from \$ATEXEC via SMS if the command was sent via SMS
Notes	N/A



# AT+CMGF SMS Format

AT+CMGF	SMS Format
Command Function	Set command tells the TA, which input and output format of messages to use. <mode> indicates the format of messages used with send, list, read and write commands and unsolicited result codes resulting from received messages. Mode can be either PDU mode (entire TP data units used) or text mode (headers and body of the messages given as separate parameters).
Syntax Query	AT+CMGF=?
Syntax	AT+CMGF: (0,1) OK
Write Syntax	AT+CMGF=<mode>
Write Response	OK
Read Syntax	AT+CMGF?
Read Response	+CMGF: 1 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<mode>	0 = PDU mode 1 = Text mode
Notes	Use of PDU mode requires an in depth understanding of PDU message and header formats.  For CDMA Version:- only the text format (1) is supported.

# AT+CMGD Delete Message

AT+CMGD	Delete Message
Command Function	Deletes message from preferred storage location.
Syntax Query	AT+CMGD=?
Syntax	+CMGD: (list of message indexes),(0-4)
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CMGD=<index>,<status>
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	
<index>	Integer value of memory location.
<status>	0 = Delete the messages specified by the index 1 = Ignore the index and delete all the read messages 2 = Ignore the index and delete all the read and sent messages 3 = Ignore the index and delete all the read, sent and unsent messages. 4 = Ignore the index and delete all the messages whatever the status is
Notes	If there is no message stored in the selected index, an error will be returned.

# AT+CMGL List Messages

AT+CMGL	List Messages
Command Function	List messages from storage.
Syntax Query	AT+CMGL=?
Syntax	+CMGL: ("REC UNREAD","REC READ","STO UNSENT","STO SENT","ALL") OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CMGL =<stat>
Execute Response	+CMGL: <index>,<stat>,<da/oa>, [<alpha>,<scts>,<tooa/toda>,<length>] <CR><LF> data OK
Unsolicited Response	N/A
Parameter Values	See Notes
<index>	Memory location integer
<stat>	Status of message "REC UNREAD" "REC READ" "STO UNREAD" "STO READ" "ALL"
<do/oa>	destination address
<alpha>	alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook
<scts>	Service center time stamp

AT+CMGL	List Messages
<tooa/toda>	Address Type-of-Address octet in integer format
<length>	Length of message in octets
Notes	<p>Above settings for &lt;stat&gt; assume AT+CMGF=1 (text mode).</p> <p>Parameters in [] may or may not be reported dependent upon the setting of AT+CMGF.</p> <p>0 = "Rec Unread"</p> <p>1 = "Rec Read"</p> <p>2 = "Sto Unsent"</p> <p>3 = "Sto Sent"</p> <p>4 = "ALL"</p>

# AT+CMGR Read Message

AT+CMGR	Read Message
Command Function	Read stored messages.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CMGR=<index>
Execute Response	+CMGR: <stat>,<oa>,<scts>,[<tooa>,<fo>,<pid>,<sca>,<tosca>,<length>]<CR><LF><data> OK
Unsolicited Response	N/A
Parameter Values	
<stat>	Status of message (Rec Read, Rec Unread, Sto Unsent, Sto Sent)
<oa>	Originating address
<scts>	Service center time stamp
<tooa>	Originating address - type of address
<fo>	First octet
<pid>	Protocol identifier
<sca>	Service center address
<tosca>	Type of address
<length>	Length of message in octets
Notes	The above parameters are for text mode.

# AT+CMGS Send Message

<b>AT+CMGS</b>	<b>Send Message</b>
<b>Command Function</b>	Sends message from the TE to the network.
<b>Syntax Query</b>	N/A
<b>Syntax</b>	N/A
<b>Write Syntax</b>	N/A
<b>Write Response</b>	N/A
<b>Read Syntax</b>	N/A
<b>Read Response</b>	N/A
<b>Execute Syntax</b>	AT+CMGS="<da>",<[<tda>]
<b>Execute Response</b>	Enter text <cntl Z> +CMGS <mr> OK
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;da&gt;</b>	Destination address
<b>&lt;mr&gt;</b>	Message reference
<b>Notes</b>	The example provided is for text mode (AT+CMGF=1). An in depth understanding of PDU messages is required for PDU mode.

# AT+CMGW Write Message To Memory

AT+CMGW	Write Message to Memory
Command Function	Writes message to preferred storage location.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CMGW=<"da"><CR><LF>
Execute Response	Text is entered<ctrlZ> +CMGW: <index> OK
Unsolicited Response	N/A
Parameter Values	
<da>	Destination Address
<index>	Integer value of memory location of the stored message
Notes	The above is for text mode only.

# AT+CMSS Send Message From Storage

AT+CMSS	Send Message from Storage
Command Function	Send Message from Storage
Syntax Query	N/A
Response	N/A
Write Syntax	+CMSS=<index>
Response	if PDU mode (+CMGF=0) and sending successful: +CMSS: <mr> if sending fails: +CMS ERROR: <err>
Read Syntax	N/A
Response	N/A
Execute Syntax	N/A
Response	N/A
Parameter Values	
Notes	
Examples	



# AT+CNMI New Message Indication To TE

AT+CNMI	New Message Indication to TE
Command Function	Selects how incoming messages from the network are indicated to the TE when the TE is active.
Syntax Query	AT+CNMI=?
Syntax	+CNMI: (0-2),(0-3),(0),(0),(0,1) OK
Write Syntax	AT+CNMI=<mode>,<mt>,<bm>,<ds>,<bfr>
Write Response	OK
Read Syntax	AT+CNMI?
Read Response	+CNMI: 0,0,0,0,0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<mode>	0 = Buffer unsolicited result codes in the TA 1 = Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved 2 = Buffer unsolicited result codes in the TA when TA-TE link is reserved and flush them to the TE after reservation
<mt>	Receiving procedure for different message data coding schemes (refer GSM 03.38 [2])
<mt> 0	no class: as in GSM 03.38, but use <mem3> as preferred memory class 0: as in GSM 03.38, but use <mem3> as preferred memory if message is tried to be stored class 1: as in GSM 03.38, but use <mem3> as preferred memory class 2: as in GSM 03.38 class 3: as in GSM 03.38, but use <mem3> as preferred memory message waiting indication group (discard message): as in GSM 03.38, but use <mem3> as preferred memory if message is tried to

AT+CNMI	New Message Indication to TE
	<p>be stored</p> <p>message waiting indication group (store message): as in GSM 03.38, but use &lt;mem3&gt; as preferred memory</p>
<mt>1	as <mt>=0 but send indication if message stored successfully
<mt>2	<p>no class: route message to TE</p> <p>class 0: as in GSM 03.38, but also route message to TE and do not try to store it in memory</p> <p>class 1: route message to TE</p> <p>class 2: as &lt;mt&gt;=1</p> <p>class 3: route message to TE</p> <p>message waiting indication group (discard message): as in GSM 03.38, but also route message to TE and do not try to store it in memory</p> <p>message waiting indication group (store message): as &lt;mt&gt;=1</p>
<mt>3	<p>class 3: route message to TE</p> <p>others: as &lt;mt&gt;=1</p>
<bm>	<p>0 &lt;bm&gt; No CBM indications are routed to the TE</p> <p>If CBM is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code:</p> <p>+CBMI: &lt;mem&gt;,&lt;index&gt;</p> <p>1 New CBMs are routed directly to the TE using unsolicited result code</p> <p>2 Class 3 CBMs are routed directly to TE using unsolicited result codes defined in &lt;bm&gt;=2. If CBM storage is supported, messages of other classes result in indication as defined in &lt;bm&gt;=1</p>

AT+CNMI	New Message Indication to TE
<ds>	<p>0 = No SMS-STATUS_REPORTs are routed to the TE</p> <p>1 = SMS-STATUS-REPORTs are routed to the TE using unsolicited result code.</p>
<bfr>	<p>0 =TA buffer of unsolicited result codes defined within this command is flushed to the TE when &lt;mode&gt; 1...2 is entered.</p> <p>1 = TA buffer of unsolicited result codes defined within this command is cleared when &lt;mode&gt; 1...2 is entered.</p>
Notes	For CDMA Version: The 3rd and 4th params are ignored and are not range checked.

# AT+CPMS Preferred Message Storage

AT+CPMS	Preferred Message Storage
Command Function	Set command selects memory storages <mem1>, <mem2> and <mem3> to be used for reading, writing, etc.
Syntax Query	AT+CPMS=?
Syntax	+CPMS: ("ME","SM"),("ME","SM"),("ME","SM") OK
Write Syntax	AT+CPMS=<mem1>,<mem2>,<mem3>
Write Response	+CPMS: 0,25,0,25,0,25 OK
Read Syntax	AT+CPMS?
Read Response	+CPMS: "SM",0,25,"SM",0,25,"SM",0,25 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<mem1>	String type; memory from which messages are read and deleted (commands List Messages +CMGL, Read Message +CMGR and Delete Message +CMGD); defined values: "ME" = ME message storage "SM" = SIM message storage
<mem2>	String type; memory to which writing and sending operations are made (commands Send Message from Storage +CMSS and Write Message to Memory +CMGW ); refer to <mem1> for defined values
<mem3>	String type; memory to which received messages are preferred to be stored (unless class of message defines a specific storage location; refer to command New Message Indications +CNMI); refer to <mem1> for defined values
Notes	ME can only store up to three (3) short messages.

# GPRS Commands

---

# AT+CGACT PDP Context Activate Or Deactivate

AT+CGACT	PDP Context Activate or Deactivate
Command Function	The execution command is used to activate or deactivate the specified PDP context (s).
Syntax Query	AT+CGACT=?
Syntax	+CGACT: (0,1) OK
Write Syntax	AT+CGACT=<state>,<cid>
Write Response	OK
Read Syntax	AT+CGACT?
Read Response	+CGACT: 1,0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<state>	0 = deactivated 1 = activated
<cid>	numeric value of PDP context activation
Notes	It is not possible to omit the parameter <state>. AT+CGDCONT command must be entered prior to context activation.  Activating a PDP Context through AT+CGACT will not allow for the modem to be used in a DUN connection. To use the modem in a DUN connection, use the AT\$AREG=2 command instead.

# AT+CGANS Manual Response To A Network Request For PDP Context Activation

AT+CGANS	Manual Response to a Network Request for PDP Context Activation
Command Function	The execution command requests the MT to respond to a network request for GPRS PDP context activation which has been signaled to the TE by the RING or +CRING: unsolicited result code.
Syntax Query	AT+CGANS=?
Syntax	+CGANS: (0,1),"PPP" OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CGANS+<Execute Response>,<L2P>
Unsolicited Response	N/A
Execute Response	OK
Unsolicited Response	NA
Parameter Values	
<response>	0 = request is rejected 1 = request is accepted
<L2P>	"PPP"
Notes	Supported value for <L2P>: "PPP".

# AT+CGATT Data Service Attach Or Detach

AT+CGATT	Data Service Attach or Detach
Command Function	The execution command is used to attach the device to, or detach the device from data service.
Syntax Query	AT+CGATT=?
Syntax	+CGATT: (0,1) OK
Write Syntax	AT+CGATT=<state>
Write Response	OK
Read Syntax	AT+CGATT?
Read Response	+GCATT: 0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<state>	0 = detached 1 = attached
Notes	If parameter <state>is omitted the data service attach state will be changed.



# AT+CGAUTO Automatic Response To A Network Request For PDP Context Activation

<b>AT+CGAUTO</b>	<b>Automatic Response to a Network Request for PDP Context Activation</b>
<b>Command Function</b>	The set command disables or enables an automatic positive response (auto-answer) to the receipt of a Request PDP Context Activation message from the network.
<b>Syntax Query</b>	AT+CGAUTO=?
<b>Syntax</b>	+CGAUTO: (0-3) OK
<b>Write Syntax</b>	AT+CGAUTO=<n>
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT+CGAUTO?
<b>Read Response</b>	+CGAUTO: 3 OK
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;n&gt;</b>	0 = turn off automatic response for GPRS only 1 = turn on automatic response for GPRS only 2 = modem compatibility mode, GPRS only 3 = modem compatibility mode, GPRS and circuit switched calls (default)
<b>Notes</b>	If parameter <n> is omitted it is assumed to be 3 (modem compatibility mode, GPRS and circuit switched calls).

# AT+CGCLASS GPRS Mobile Station Class

AT+CGCLASS	GPRS Mobile Station Class
Command Function	Sets the MT to operate to a specified GPRS mobile class.
Syntax Query	AT+CGCLASS=?
Syntax	+CGCLASS: ("B","CG","CC") OK
Write Syntax	AT+CGCLASS=<class>
Write Response	OK
Read Syntax	AT+CGCLASS?
Read Response	+CGCLASS: "B" OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<class>	"B" = class B "CG" = class C in GPRS only mode "CC" = class C in circuit switched only mode (lowest)
Notes	If parameter <class> is omitted, a detached mobile attaches with the last class or the default class ("B").

# AT+CGDCONT Define PDP Context

AT+CGDCONT	Define PDP Context
Command Function	Specifies PDP context parameter values for a PDP context identified by the (local) context identification parameter, <cid>.
Syntax Query	AT+CGDCONT=?
Syntax	+CGDCONT: (1-6),"IP" ,,,(0),(0,1) OK
Write Syntax	AT+CGDCONT=<cid>,<PDP_Type>,<APN>,<PDP_ADDR>,<d_comp>,<h_comp>
Write Response	OK
Read Syntax	AT+CGDCONT?
Read Response	+CGDCONT: <cid>,<PDP Type>,<"APN">,<"PDP_ADDR">,<d_comp>,<h_comp> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<cid>	PDP Context Identifier a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of permitted values (minimum value = 1) is returned by the test form of the command.
<PDP_type>	"IP"
<"APN">	"Access Point Name"
<"PDP_addr">	" Identifies the device in the address space"
<d_comp>	0 = off 1 = on
<d_comp> (if HS 1000)	A numeric parameter that controls PDP data compression (applicable for SMDCP only). Currently AUF IDL does not support

AT+CGDCONT	Define PDP Context
	<p>PDP data compression, that's why the supported value is 0. It is an optional parameter. AT parser will ignore this parameter</p> <p>0 = off</p> <p>Note: Currently AUF IDL does not support PDP header compression, that's why the supported value is 0. AT parser will ignore this parameter.</p>
<p>&lt;h_comp&gt;</p> <p>&lt;h_comp&gt; (if HS 1000)</p>	<p>0 = off</p> <p>1 = on</p> <p>A numeric parameter that controls PDP header compression.</p> <p>0 = off</p>
Notes	<p>AT+CGDCONT must be entered before Context activation.</p> <p>AT+CGDCONT=1,"IP","","",0,0 may be entered for networks that dynamically assign the APN. Contact your service provider for correct APN information.</p> <p>Multiple +CGDCONT entries can be used for Dial-Up Networking with the appropriate ATD*99**n# command where n represents the +CGDCONT index. For the TCP PAD and UDP PAD features, the 'n' is ignored and the first +CGDCONT index entry is always used.</p>

# AT+CGEREP Data Service Event Reporting

AT+CGEREP	Data Service Event Reporting
Command Function	This command enables or disables sending of unsolicited result codes, +CGEV: XXX from MT to TE in the case of certain events occurring in the MT or the network.
Syntax Query	AT+CGEREP=?
Syntax	+CGEREP: (0-2),(0,1) OK
Write Syntax	AT+CGEREP=<mode>,<bfr>
Write Response	OK
Read Syntax	AT+CGEREP?
Read Response	+CGEREP: 0,0
	OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	

AT+CGEREP	Data Service Event Reporting
<mode>	<p>0 = buffer unsolicited result codes in the MT</p> <p>1 = discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE</p> <p>2 = buffer unsolicited result codes in the MT when MT-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when MT-TE link becomes available; otherwise forward them directly to the TE</p>
<bfr>	<p>0 = MT buffer of unsolicited result codes defined within this command is cleared when &lt;mode&gt; 1 or 2 is entered</p> <p>1 = MT buffer of unsolicited result codes defined within this command is flushed to the TE when &lt;mode&gt; 1 or 2 is entered (OK response shall be given before flushing the codes)</p>
Notes	<p>If parameter &lt;mode&gt; is omitted it is assumed to be the value of the last command execution or the default value</p> <p>(0). If parameter &lt;bfr&gt; is omitted it is assumed to be the value of the last command execution or the default value (0).</p>

# AT+CGEV Deactivation Indication Reporting

AT+CGEV	Deactivation Indication Reporting
Command Function	When event reporting is enabled (using AT+CGEREP), in case the AT parser receives the asynchronous event Deactivate Indication initiated from the network, the AT parser will send the AT+CGEV command to the Terminal to notify this event.
Syntax Query	N/A
Response	N/A
Write Syntax	N/A
Response	N/A
Read Syntax	N/A
Response	N/A
Execute Syntax	+CGEV
Response	+CGEV: NW DEACT <PDP_type>,<PDP_addr>,<cid>]
Parameter Values	N/A
Notes	

# AT+CGPADDR Show PDP Address

AT+CGPADDR	Show PDP Address
Command Function	The execution command returns a list of PDP addresses for the specified context identifiers.
Syntax Query	AT+CGPADDR=?
Syntax	+CGPADDR: (1) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CGPADDR=<cid>
Execute Response	+CGPADDR: 1 OK
Unsolicited Response	N/A
Parameter Values	
<cid>	Numeric value of PDP context activation
Notes	N/A



# AT+CGQMIN Quality Of Service Profile (Minimum Acceptable)

AT+CGQMIN	Quality of Service Profile (Minimum Acceptable)
Command Function	Allows the TE to specify a minimum acceptable profile which is checked by the MT against the negotiated profile returned in the Activate PDP Context Accept message.
Syntax Query	AT+CGQMIN=?
Syntax	+CGQMIN: "IP",(1-3),(1-4),(1-5),(1-9),(1-18,31) OK
Write Syntax	AT+CGQMIN=<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>
Write Response	OK
Read Syntax	AT+CGQMIN?
Read Response	+CGQMIN: 1,0,0,0,0,0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<cid>	> numeric value of PDP context activation
<precedence class>	1-3
<delay class>	1-4
<reliability class>	1-5
<peak throughput>	1-9
<mean throughput>	1-18,31
Notes	For any parameter where network subscribed is desired, enter 0. A special form of the set command, +CGQREQ=,... or +CGQMIN=,... provide a set of the default values of Quality of Service Profile for new PDP context definitions. AT+CGDCONT must be entered prior to entering AT+CGQMIN command.

# AT+CGREQ Quality Of Service

AT+CGREQ	Quality of Service
<b>Command Function</b>	<p>The set command specifies a profile for the context identified by the (local) context identification parameter, &lt;cid&gt;. Since this is the same parameter that is used in the +CGDCONT and +CGDSCONT commands, the +CGQREQ command is effectively an extension to these commands. The QoS profile consists of a number of parameters, each of which may be set to a separate value.</p> <p>A special form of the set command, +CGQREQ= &lt;cid&gt; causes the requested profile for context number &lt;cid&gt; to become undefined.</p> <p>The read command returns the current settings for each defined context.</p> <p>The test command returns values supported as a compound value. If the MT supports several PDP types, the parameter value ranges for each PDP type are returned on a separate line.</p>
<b>Syntax Query</b>	+CGQREQ=?
<b>Response</b>	<p>+CGQREQ: &lt;PDP_type&gt;, (list of supported &lt;precedence&gt;s), (list of supported &lt;delay&gt;s), (list of supported &lt;reliability&gt;s) , (list of supported &lt;peak&gt;s), (list of supported &lt;mean&gt;s)</p> <p>[&lt;CR&gt;&lt;LF&gt;+CGQREQ: &lt;PDP_type&gt;, (list of supported &lt;precedence&gt;s), (list of supported &lt;delay&gt;s), (list of supported &lt;reliability&gt;s) , (list of supported &lt;peak&gt;s), (list of supported &lt;mean&gt;s) [...]]</p>
<b>Write Syntax</b>	+CGQREQ=[<cid>[,<precedence >[,<delay>[,<reliability.>[,<peak>[,<mean>]]]]]]
<b>Response</b>	OK or ERROR
<b>Read Syntax</b>	+CGQREQ?
<b>Response</b>	<p>+CGQREQ: &lt;cid&gt;,&lt;precedence &gt;,&lt;delay&gt;,&lt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt; [&lt;CR&gt;&lt;LF&gt;+CGQREQ: &lt;cid&gt;,&lt;precedence &gt;,&lt;delay&gt;,&lt;reliability.&gt;,&lt;peak&gt;,&lt;mean&gt; [...]]</p>
<b>Execute Syntax</b>	N/A
<b>Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;cid&gt;</b>	a numeric parameter which specifies a particular PDP context definition (see the +CGDCONT and +CGDSCONT commands).

AT+CGREQ	Quality of Service
<precedence>	a numeric parameter which specifies the precedence class
<delay>	a numeric parameter which specifies the delay class
<reliability>	a numeric parameter which specifies the reliability class
<peak>	a numeric parameter which specifies the peak throughput class
<mean>	a numeric parameter which specifies the mean throughput class
Notes	
Examples	

# AT+CGSMS Select Service For MO SMS Messages

AT+CGSMS	Select Service for MO SMS Messages
Command Function	The set command is used to specify the service or service preference that the MT will use to send MO SMS messages.
Syntax Query	AT+CGSMS=?
Syntax	+CGSMS: (0-3) OK
Write Syntax	AT+CGSMS=<service>
Write Response	OK
Read Syntax	AT+CGSMS?
Read Response	:+CGSMS: 3 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<service>	0 = GPRS 1 = circuit switched 2 = GPRS preferred (use circuit switched if GPRS not available) 3 = circuit switched preferred (use GPRS if circuit switched not available)
Notes	If parameter <service> is omitted the command does nothing. SMS over GPRS has not been fully tested.

# AT%CGPCO Set Type Of Authentication, Username And Password

AT%CGPCO	Set Type of Authentication, Username and Password
Command Function	This command sets the type of Authentication, username and password for GPRS context activation.
Syntax Query	AT%CGPCO=?
Syntax	%CGPCO: 0,(0-251),(0-6) OK
Write Syntax	AT%CGPCO=<Input format>,"<Authentication data>",<cid>
Write Response	OK
Read Syntax	AT%CGPCO?
Read Response	CGPCO: 0,"<PCO Hex string>",1 CGPCO: 0,"<PCO Hex string>",2 OK AT%CGPCO? CGPCO: 1,"<Username,Password>",1 CGPCO: 1,"<Username,Password>",2 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<Input format>	0 = Inputs specified in Hexadecimal 1 = Inputs specified in ASCII
<Authentication data>	Authentication data (ASCII) <username>,<password> where Username: Maximum 63 bytes ASCII string. Password: Maximum 63 bytes ASCII string. Authentication data (Hexadecimal):

AT%CGPCO	Set Type of Authentication, Username and Password
	Protocol Configuration Option specified in Hex value; maximum size is equal to 251 bytes.
<cid>	<p>0 = The new username and password is to be applied to all context Activation.</p> <p>1 = The new username and password is to be applied to Context identifier 1.</p> <p>2 = The new username and password is to be applied to Context identifier 2.</p>
Notes	<p>AT+CGDCONT command must be set before the %CGPCO command is used.</p> <p>If %CGPCO is set with the input format of 0 (hexadecimal), then the setting of AT%CGPPP will be ignored.</p> <p>Username and Password are case sensitive.</p>
Example:	<p>Example of ASCII input parameters:</p> <p>AT%CGPCO=1, "username, password", 1</p> <p>AT%CGPCO?</p> <p>CGPCO: 1,"username,password",1</p> <p>(PAP:80C023160101001608757365726E616D65087061737776F726480211001010010810600000000830600000000)</p> <p>Example of Hex input parameters:</p> <p>AT%CGPCO=0,</p> <p>"80C023160101001608757365726E616D6508706173737776F726480211001010010810600000000830600000000", 1</p>

# AT%CGPPP Negotiation Selection

AT%CGPPP	PPP Negotiation Selection
Command Function	This command is used select the type of negotiation protocol.
Syntax Query	AT%CGPPP=?
Syntax	%CGPPP: (0-3) OK
Write Syntax	AT%CGPPP=<pt>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<pt>	(authentication protocol) 0 = No authentication (ignore login + pwd) 1 = PAP 2 = CHAP 3 = automatic authentication
Notes	This command is used in conjunction with the %CGPCO command.

# ATD Request GPRS Service

ATD	Request GPRS Service
Command Function	This command causes the MT to perform whatever actions are necessary to establish communication between the TE and the external PDN
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	ATD<GPRS_SC><CID>#
Execute Response	CONNECT
Unsolicited Response	N/A
Parameter Values	
<GPRS_SC>	*99
<CID>	***1 ***2
Notes	ATD*99***1# - Dials GPRS call for context activation 1. See +CGDCONT for context activation definition.



# IP Router Commands

---

# AT\$FLFILT Filter ICMP Echo Request

AT\$FLFILT	Filter ICMP Echo Request
Command Function	This command allows the user to filter the ICMP echo request based against the Friends list
Syntax Query	AT\$FLFILT=?
Syntax	\$FLFILT: (0-1) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$FLFILT?
Read Response	\$FLFILT: <enable> OK
Execute Syntax	AT\$FLFILT=<enable>
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	
<enable>	0 = do not filter ICMP echo requests 1 = filter ICMP echo requests against Friends List ** Default value is 1
Notes	Friends list entries are used without regard to the setting of the server bit.  This function will also filter ICMP Echo requests when in Dial-Up Networking Mode (\$HOSTIF=0)

# AT\$GATEWAY Gateway IP

AT\$GATEWAY	Gateway IP
Command Function	This command allows the user to select a gateway IP. Windows CE 3.0 devices and some Linux platforms require a gateway address. Default value "0.0.0.0" indicates that no gateway IP will be requested from the host. A non-zero value will cause the modem to request the indicated gateway IP from the host.
Syntax Query	AT\$GATEWAY=?
Syntax	\$GATEWAY: ("<IP>") OK
Write Syntax	AT\$GATEWAY = "<IP >"
Write Response	OK
Read Syntax	AT\$GATEWAY?
Read Response	\$GATEWAY: "<IP >"
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<IP>	gateway IP address.
Notes	N/A

# AT\$NETIP Display Network Assigned IP & DNS

AT\$NETIP	Display Network Assigned IP & DNS
Command Function	This command allows the user to query the modem's network assigned IP.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$NETIP?
Read Response	<"IP">,<"DNS1">,<"DNS2">
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<IP>	network assigned IP
<DNS1>	network assigned DNS1
<DNS2>	network assigned DNS2
Notes	N/A

# AT\$PING Send ICMP Echo Request

AT\$PING	Send ICMP Echo Request
Command Function	This command allows the user to send an ICMP echo request and display the echo reply (ping).
Syntax Query	AT\$PING=?
Syntax	\$PING: "host",(1-5),(1-10) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$PING=<"host">,<count>,<timeout>
Execute Response	Immediate response: "Pinging <IP address>"  After ICMP response: "Reply from <IP address>"
Unsolicited Response	N/A
Parameter Values	
<"host">	FQDN or IP address
<count>	Number of ICMP frames to send Range: 1-5 Default: 1
<timeout>	Maximum amount of time, in seconds, to wait for a response. Range: 1-10 Default: 5
Notes	The modem must have an IP address assigned to it by the network to send or receive ICMP packets.

# Message Commands

---

# AT\$APIOPT Enable API Optional Header Fields

AT\$APIOPT	Enable API Optional Header Fields
Command Function	This command allows the user to enable specific Optional Header Fields to be included in the UDPAPI and TCPAPIs' API Optional Header. See Novatel Wireless GSM/GPRS Family API Reference (GSM0308UG001) for details.
Syntax Query	AT\$APIOPT=?
Syntax	\$APIOPT: (0-1),(0-1),(0-4),(0-1),(0-1),(0-1),(0-1) OK
Write Syntax	AT\$APIOPT=<MDMID>,<Msg Event Format>,<Event Seq Num>,<HdrDisable>,<Output Event Type>,<HexModemID>,<SendParam3>
Write Response	OK
Read Syntax	AT\$APIOPT?
Read Response	\$APIOPT=<MDMID>,<Msg Event Format>,<Event Seq Num>,<HdrDisable>,<Output Event Type>,<HexModemID>,<SendParam3>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<MDMID>	0 = Disable sending of MDMID value in TCPAPI or UDPAPI Header 1 = Enable sending of MDMID value in TCPAPI or UDPAPI Header
<Msg Event Format>	0 = Disable sending of Output Message Event Format value in TCPAPI or UDPAPI Header 1 = Enable sending of Output Message Event Format in TCPAPI or UDPAPI Header
<Event Seq Num>	0 = Disable sending of Event Sequence Number value in TCPAPI or UDPAPI Header 1 = Enable sending of the least significant byte of the Event Sequence Number in TCPAPI or UDPAPI Header

<b>AT\$APIOPT</b>	<b>Enable API Optional Header Fields</b>
	<p>2 = Enable sending of the two least significant bytes of the Event Sequence Number in TCPAPI or UDPAPI Header</p> <p>3 = Enable sending of the three least significant bytes of the Event Sequence Number in TCPAPI or UDPAPI Header</p> <p>4 = Enable sending of the full four bytes of the Event Sequence Number in TCPAPI or UDPAPI Header</p>
<b>&lt;HdrDisable&gt;</b>	<p>0 = UDPAPI header is enabled (default)</p> <p>1 = UDPAPI header is disabled for UDP messages sent via event engine. The UDPAPI header will not be disabled if bit 18 (send this OTA message via SMS when GPRS services are not available) is set in parm2 of the \$event command that generates the message (see AT\$EVENT). This flag has no effect on commands sent from the server or the ack sequence. This feature is intended to be used with UDP messages when the size of the data packet is critical due to the rapid rate at which messages are sent over an extended period of time.</p>
<b>&lt;Output Event Type&gt;</b>	<p>0 = Disable sending of Output Event number in TCPAPI or UDPAPI Header</p> <p>1 = Enable sending of Output Event number in TCPAPI or UDPAPI Header</p>
<b>&lt;HexModemID&gt;</b>	<p>0 = Do not include the hex modem ID in the optional header</p> <p>1 = Include the hex modem ID in the optional header</p> <p>Note: The optional header type for hex modem ID is 7.</p>



AT\$APIOPT	Enable API Optional Header Fields
<SendParam3>	<p>0 = Disable sending of Parameter 3 data in the optional header</p> <p>1 = Enable sending of Parameter 3 data in the optional header</p>
Notes	<p>When a message is formatted for transmission via the event engine (UDP, TCP, SMS, or serial), we call the function to retrieve/increment the sequence number. The sequence number is passed to the task that actually makes the decision about what to do with the message. If the message is SMS or serial, the sequence number doesn't actually get used in the end, but does get incremented.</p> <p>To support the hex modem ID feature, each MDMID character must be a decimal character between '0' and '9'. If the MDMID contains a character outside of this range, the hex MDMID will be the NULL string. If all MDMID characters are decimal characters, then the decimal MDMID is converted into the hexadecimal equivalent value.</p>
Examples	<p>This example will disable the sending of the MDMID, enable the Msg Event Format and enable the full Event Sequence Number.</p> <p>AT\$APIOPT=0,1,4</p> <p>This example will enable the sending of the MDMID and the least two significant bytes of the Event Sequence Number. The state of the Enable Msg Event Format will remain unchanged</p> <p>AT\$APIOPT=1,,2</p> <p>This example will enable the sending of the MDMID and disable the Msg Event Format. The state of the Event Seq Num will remain unchanged</p> <p>AT\$APIOPT=1,0</p> <p>Hex Modem ID Examples:</p> <p>AT\$APIOPT=0,,,,,1</p> <p>MDMID - "001036000211071"</p> <p>{07}{07}{F1}{36}{6C}{B0}{7F}</p> <p>MDMID - "99"</p> <p>{03}{07}{63}</p> <p>MDMID - "999999999999999999A"</p> <p>{03}{07}{00}</p>

# AT\$APIPWD API Password

AT\$APIPWD	API Password
<b>Command Function</b>	This command allows the user to query/set the API password. Any IP address will be able to access the device if the password is not set (null). If the password is set, control is given to the last friend IP that supplied the correct password.
<b>Syntax Query</b>	AT\$APIPWD=?
<b>Syntax</b>	\$APIPWD: ("PASSWORD") OK
<b>Write Syntax</b>	AT\$APIPWD="<API password>"
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT\$APIPWD?
<b>Read Response</b>	\$APIPWD: "<API password>"
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;API password&gt;</b>	Maximum of 8 characters. A NULL password indicates ALL remote users are allowed API access.
<b>Notes</b>	See Novatel Wireless GSM-GPRS Family UDP-API Reference GSM0308UG001 for further details regarding the use of the API Password.

# AT\$ATPASSWD Set Authorization For AT Commands For Serial, SMS And API

AT\$ATPASSWD	Set authorization for AT commands for serial, SMS and API								
Command Function	This command allows the user to enable or disable authorization for AT commands for the serial, SMS and API. It also sets the password required to run this command								
Syntax Query	AT\$ATPASSWD=?								
Syntax	AT\$ATPASSWD: ("oldpasswd",mask "newpasswd") OK								
Write Syntax	AT\$ATPASSWD= <"oldpasswd","newpasswd">								
Write Response	OK								
Read Syntax	N/A								
Read Response	N/A								
Execute Syntax Execute Response	AT\$ATPASSWD=<"passwd",mask>								
Unsolicited Response	N/A								
Response	N/A								
Parameter Values									
<oldpasswd>	Specified when the password is being changed.								
<newpasswd>	This is the value of the new password and is specified only when the password is being changed. It must be no more than eight characters in length and must be enclosed in double quotes.								
<passwd>	Specified when changing the AT command authorization mask.								
<mask>	<p>Bit mask specifying which interfaces will be authorized to enter AT commands. Each bit specifies one interface as enumerated in the table below.</p> <table> <thead> <tr> <th>Bit Value</th><th>Interface</th></tr> </thead> <tbody> <tr> <td>1</td><td>Serial Port</td></tr> <tr> <td>2</td><td>SMS</td></tr> <tr> <td>4</td><td>API</td></tr> </tbody> </table>	Bit Value	Interface	1	Serial Port	2	SMS	4	API
Bit Value	Interface								
1	Serial Port								
2	SMS								
4	API								

<b>AT\$ATPASSWD</b>	<b>Set authorization for AT commands for serial, SMS and API</b>
	To select multiple items to authorize, add the bit values of each interface to be authorized. To authorize API and SMS only, the mask value is 6 (4 + 2). AT commands entered over the serial port will not execute and will reply with ERROR.
<b>Notes:</b>	N/A
<b>Example:</b>	To set a password on a device that previously had no set \$ATPASSWD enter: AT\$ATPASSWD="", "1234" To change a previously set \$ATPASSWD password enter: AT\$ATPASSWD-D="1234", "5678"

# AT\$CHKIN Configure Device Check-in

AT\$CHKIN	Configure Device Check-in
Command Function	This command adds event group 8 to the event table and configures the device check-in feature. The feature is used to send a wakeup type message to an alternate server (server other than the one the device normally reports). This alternate server is listed in the \$FRIEND list with a usage=4.
Syntax Query	AT\$CHKIN=?
Syntax	\$CHKIN: (0-1),(0-43200) OK
Write Syntax	AT\$CHKIN=<enable><periodic_interval>
Write Response	OK
Read Syntax	AT\$CHKIN?
Read Response	\$CHKIN: 1,43200 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<enable>	0 = remove group 8 from the event table. 1 = add event group 8 to the event table.

AT\$CHKIN	Configure Device Check-in
<periodic_interval>	<p>Sets the periodic reporting interval (in minutes)</p> <p>Range: 0-43200</p> <p>Default: 43200</p>
Notes	<p>Input event 200 is used for the periodic check-in timer.</p> <p>Output event 152 is used for sending UDP messages to the check-in servers specified in the \$FRIEND list.</p> <p>NOTE: Setting AT\$CHKIN=1 will overwrite any existing event group 8.</p>
Example:	<p>AT\$CHKIN=1,x adds event group 8 to the event table.</p> <p>AT\$CHKIN=0,x removes event group 8 from the event table.</p>

# AT\$FRIEND Modem Friends

AT\$FRIEND	Modem Friends
<b>Command Function</b>	This command allows the user to configure the modem friend/server list. A friend is always allowed remote API access. Friend servers can be configured to receive WAKEUP messages whenever the modem receives a new IP, or after a certain period has elapsed. (see AT\$WAKEUP)
<b>Syntax Query</b>	\$FRIEND=?
<b>Syntax</b>	\$FRIEND: (1-10),(0,1),"(0-255).(0-255).(0-255).(0-255)",(0-65535), (0-4) OK
<b>Write Syntax</b>	AT\$FRIEND =<friend number>,<server indication>,"<friend IP> or <DNS name>",<destination port>,<usage>
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT\$FRIEND?
<b>Read Response</b>	\$FRIEND: =01, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =02, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =03, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =04, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =05, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =06, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =07, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =08, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =09, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage> \$FRIEND: =10, <server indication>,"<friend IP> or <DNS name>",<destination port>,<usage>

<b>AT\$FRIEND</b>	<b>Modem Friends</b>
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;friend number&gt;</b>	friend identification (1-10).
<b>&lt;server indication&gt;</b>	0 = Server is disabled. 1 = Server is enabled.
<b>&lt;friend IP&gt;</b>	friend IP value.
<b>OR</b>	
<b>&lt;DNS name&gt;</b>	friend DNS name
<b>&lt;destination port&gt;</b>	friend destination port (TCP API only). Note: If <usage> = 4, this parameter is used to configure the UDP port for the AT\$CHKIN command.
<b>&lt;usage&gt;</b>	0 = Unspecified (treated as UDPAPI) 1 = TCPAPI 2 = UDPAPI 3 = TCPAPI and/or UDPAPI 4 = Alternate server for UDPAPI check-in message (see AT\$CHKIN)
<b>Notes</b>	If destination port and usage are not present in the command, it is assumed to be a UDPAPI friend with the destination port filled in with the UDPAPI port number and usage = 0.  You will use either the Friend IP address or the Friend DNS name, but not both.



# AT\$MDMID Modem ID

AT\$MDMID	Modem ID
Command Function	This command allows the user to query/set the modem ID. The modem ID is copied into each wakeup message sent from the modem. (see AT\$WAKEUP)
Syntax Query	AT\$MDMID=?
Syntax	\$MDMID: ("MODEM ID") OK
Write Syntax	AT\$MDMID = "<modem ID>"
Write Response	OK
Read Syntax	AT\$MDMID?
Read Response	\$MDMID: "<modem ID>"
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<modem ID >	0-20 character string in ASCII format.
Notes	The modem's IMEI is the default modem ID.

# AT\$MLQSZ Message Log Queue Size

AT\$MLQSZ	Message Log Queue Size
Command Function	The \$MLQSZ allows the user to restrict the number of unsent messages maintained in the buffers for the four message log queues: UDP, UDP with SMS backup, SMS, and TCP.
Syntax Query	AT\$MLQSZ=?
Syntax	\$MLQSZ:(0-3000),(0-3000),(0-3000), (0-3000) OK
Write Syntax	AT\$MLQSZ=<UdpQsize>,<SmsBckupQsize>,<SmsQsize>,<TcpQsize>
Write Response	OK
Read Syntax	AT\$MLQSZ?
Read Response	\$MLQSZ: <UdpQsize>,<SmsBckupQsize>,<SmsQsize>,<TcpQsize>
Execute Syntax	N/A
Execute Response	
Unsolicited Response	N/A
Parameter Values	
<UdpQsize>	Maximum # of unsent messages stored in message log queue for UDP messages. Valid range is 0-3000. The default is 0, which is treated as a special value indicating no message size restriction. This is the equivalent of restricting the size of this queue to 3000 messages.
<SmsBckupQsize>	Maximum # of unsent messages stored in message log queue for UDP messages where SMS messaging is allowed as a backup when UDP messaging is unavailable. Valid range is 0-3000. The default is 0, which is treated as a special value indicating no message size restriction. This is the equivalent of restricting the size of this queue to 3000 messages.
<SmsQsize>	Maximum # of unsent messages stored in message log queue for SMS messages. Valid range is 0-3000. The default is 0, which is treated as a special value indicating no message size restriction. This is the equivalent of restricting the size of this queue to 3000 messages.
<TcpQsize>	Maximum # of unsent messages stored in message log queue for

AT\$MLQSZ	Message Log Queue Size
	<p>TCP messages. Valid range is 0-3000. The default is 0, which is treated as a special value indicating no message size restriction. This is the equivalent of restricting the size of this queue to 3000 messages.</p>
<b>Notes</b>	<p>All over-the-air messages sent via the event engine are first stored in flash and indexed via one of four message log queues. Due to indexing restrictions, no queue can contain more than 3000 unsent messages.</p> <p>For performance reasons, messages formatted via the event engine are stored in an array of 256 1000-byte flash files.</p> <p>Indexing for these messages is maintained in four separate flash files (one for each queue).</p> <p>Normally, the number of unsent messages that can be stored in flash is a function of the size of the messages. For example, when storing messages containing only NMEA data, the message log files will be completely filled after about 2500 messages. Binary messages are typically smaller and take up less space in the message log files, but are still subject to the 3000 message maximum per queue.</p> <p>In default operation, when the message log files are full OR when an individual queue exceeds 3000 messages, the oldest log file is deleted so that newer messages can be stored in a circular fashion using a new file in the place made available by deleting the oldest file. For some applications, the message buffers can contain far more unsent messages than is desired.</p>
	<p>The purpose of this command is to mark older messages as 'sent' so that the number of messages in the queue never exceeds the threshold set by the user.</p> <p>Please note that the values specified in this command are not reflected in the value calculated for input event 61 (memory full percentage). That percentage represents the worst case (largest percentage) of either the % of the size of all unsent messages with respect to the size of all 256 log files OR the % of unsent messages with respect to the 3000 messages allowed for an individual queue.</p> <p>This command is used in conjunction with MSGLOGDMP and allows the user to restrict the number of unsent messages maintained in the buffers for the four message log queues: UDP, UDP with SMS backup, SMS and TCP. To Dump the message the user needs to turn off the GPS receiver with the GPSCMD. (GPSCMD Only applicable to MT Devices)</p>

# AT\$MSGLOGCL Message Log Clear

AT\$MSGLOGCL	Message Log Clear
Command Function	The \$MSGLOGCL command erases the log file.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$MSGLOGCL
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	None
Notes	If AT&F is performed, the message log buffer will be cleared.

# AT\$MSGLOGDMP Dump Unsent Messages To Serial Port

AT\$MSGLOGDMP	Dump Unsent Messages to Serial Port
Command Function	This command allows the user to dump the contents of the unsent messages to the serial port. This command is non-destructive in that it does not actually remove the messages from the queue
Syntax Query	AT\$MSGLOGDMP=?
Syntax	\$MSGLOGDMP: (0-3),(0-1),(1-83),(0-1) OK
Write Syntax	AT\$MSGLOGDMP=<queue>,<format>,<bytes_per_line>,<display_all>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	N/A
<queue>	0 = event data that was configured to be sent to a remote server via data service only  1 = event data that was configured to be sent to a remote server via data service primarily but also use SMS as backup method if data service is not available  2 = event data that was configured to be sent to a remote server via SMS only  3 = event data that was configured to be sent to a remote server via TCPAPI only
<format>	0 = ASCII format (if message contains a byte that is not a printable ASCII character, it will be displayed as '?')  1 = hex format (Each byte in message is displayed as a two-digit hex character representing the value of the byte with spaces between each byte. Maximum of 16 bytes per line.)
<bytes_per_line>	1-83 (default = 16) number of bytes displayed per line for binary

AT\$MSGLOGDMP	Dump Unsent Messages to Serial Port
	data (each byte is represented as a two-digit hex value followed by a space)
<display_all>	<p>0 = display unsent messages only (default)</p> <p>1 = display all messages (unsent and sent) from the indicated queue</p>
Notes	<p>This command was developed primarily as a troubleshooting utility to help debug problems related to handling unsent messages in flash.</p> <p>However, it has also been useful in collecting GPS data. With this utility, you can put multiple devices in a vehicle for a drive test to collect NMEA data and dump the data for analysis easily when you return.</p> <p>GPS must be off to forward the data.</p> <p>When using larger bytes per line values (~30 and above), the user may need to issue the AT\$EVTOFF=1 command to successfully dump data via this command (AT\$MSGLOGDMP).</p>

# AT\$MSGLOGEN Message Log Enable

AT\$MSGLOGEN	Message Log Enable
Command Function	The \$MSGLOGEN command has been created to enable or disable saving Event data generated via the event engine in modem's memory
Syntax Query	AT\$MSGLOGEN=?
Syntax	\$MSGLOGEN: (0-1) OK
Write Syntax	AT\$MSGLOGEN=<setting>
Write Response	OK
Read Syntax	AT\$MSGLOGEN?
Read Response	\$MSGLOGEN: <setting>
Execute Syntax	
Execute Response	
Unsolicited Response	N/A
Parameter Values	
<setting>	0 - 1 (possible valid values)  0 = Disable message logging (default). Event data is sent to the remote server upon occurrence.  1 = Enable message logging. Event data has to be read via AT\$MSGLOGRD command or when AT\$MSGLOGEN=0 is sent.
Notes	If AT\$MSGLOGEN command was enabled and any unsent messages exist in memory, then the unsent data will be sent to the remote server when data logging is disabled.

# AT\$MSGLOGRD Message Log Read Data

AT\$MSGLOGRD	Message Log Read Data
Command Function	The \$MSGLOGRD command is used to query the status of the four event-engine message logs. Using the queue status this command can be used to resend messages that have already been sent and are still in the log.
Syntax Query	AT\$MSGLOGRD=?
Syntax	\$MSGLOGRD: (0-3),(0-x),(0-y) OK
Write Syntax	\$MSGLOGRD=<queue>,<number of messages>, <starting index>
Write Response	OK
Read Syntax	AT\$MSGLOGRD?
Read Response	<p>\$MSGLOGRD: 0, 0, 0, 0, 0, 0, 0, 0, 0,0,0</p> <p>OK</p> <p>AT\$MSGLOGRD? command returns 108 values:</p> <p>\$MSGLOGRD: udp1,udp2,udpsms1,udpsms2,sms1,sms2,tcp1,tcp2,ussd1,ussd2</p> <p>First pair of numbers: unsent UDP messages, total number of UDP messages in the UDP message log.</p> <p>Second pair of numbers: unsent UDP messages with SMS as backup, total number of UDP messages with SMS as backup in the UDP/SMS log.</p> <p>Third Pair of numbers: unsent SMS messages, total number of SMS messages in the SMS log.</p> <p>Fourth Pair of messages: unsent messages via TCP, total number of messages in the TCP log.</p> <p>Fifth pair of messages: unsent messages via USSD, total number of messages in the USSD log.</p> <p>Each value is comma (,) delimited.</p> <p>The first value of any queue represents “Total Number of Unsent Messages”. This value can be used as the &lt;number of messages&gt; field while resending messages.</p> <p>The second value of any queue represents: “Total Number of Messages Stored for that Queue”. Subtract the “Total Number of Unsent Messages” from the “Total Number of Messages Stored for</p>



AT\$MSGLOGRD	Message Log Read Data
	that Queue” and use that as the <starting index> to resend all of the messages still in the log.
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<queue>	<p>0 -43 (possible valid values).</p> <p>0 = event data that was configured to be sent to a remote server via network provider's data connection.</p> <p>1 = event data that was configured to be sent to a remote server via network provider's data connection primarily but also use SMS as backup method if network provider's data connection is not available.</p> <p>2 = event data that was configured to be sent to a remote server via SMS only.</p> <p>3 = event data that was configured to be sent to a remote server via TCP.</p> <p>4 = event data that was configured to be sent to a remote server via USSD</p>
<number of messages>	<p>x</p> <p>x = total number of messages one desires to read from the memory. A user can choose to read 1 message in which case x = 1 or read all messages in which case x = 65535.</p>
<starting index>	<p>y</p> <p>y = starting index number of messages that are stored in the memory.</p> <p>NOTE: y cannot be greater than total number of stored messages.</p>
Notes	<p>If AT&amp;F is performed, the message log buffer will be cleared.</p> <p>The message logs are cleared when the modem id is changed (AT\$MDMID).</p> <p>The message logs work on a FIFO basis. I.e. when a log is full the oldest messages are deleted to make room for new messages.</p>

# AT\$MSGSEND Message Send

AT\$MSGSEND	Message Send
Command Function	The \$MSGSEND command has been created to allow sending of data from one mode to another.
Syntax Query	AT\$MSGSEND=?
Syntax	AT\$MSGSEND: (0-5),("DATA") OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$MSGSEND=<destination>,<"data">
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	

AT\$MSGSEND	Message Send
<destination>	<p>0 – 5 (possible valid values)</p> <p>0 = &lt;"data"&gt; is sent out the USB port</p> <p>1 = &lt;"data"&gt; is sent to all SMS addresses listed in AT\$SMSDA command.</p> <p>2 = &lt;"data"&gt; is sent via UDP API to IP address and port number of the first UDP server listed in the AT\$FRIEND command</p> <p>3 = &lt;"data"&gt; is sent via PAD to IP address and Port number listed in the AT\$PADDEST command</p> <p>4 = &lt;"data"&gt; is sent via TCP API to IP address and port number of the first TCP server listed in the AT\$FRIEND command</p> <p>5 = &lt;"data"&gt; is sent out the USB port</p>
<"data">	a maximum of 50 bytes ASCII characters
Notes	<p>Use the AT\$CMDPORT command to select the primary UART serial port and/or the USB AT command port.</p> <p>Messages sent to OTA destinations (options 1, 2, 3, and 4) are transmitted immediately. If network coverage is not available, then the message is silently discarded. The message is not stored for later transmission when the modem returns to good network coverage.</p> <p>AT\$MSGSEND command can be sent to the device via SMS, UDP-API, or serial port.</p> <p>AT\$MSGSEND=4 checks for TCPAPI usage in the first \$FRIEND entry. AT\$MSGSEND=2 checks for UDPAPI usage in the first \$FRIEND entry. ERROR will be reported if invalid usage is selected.</p> <p>AT\$MSGSEND=4 checks if TCPAPI is enabled (AT\$TCPAPI=1) before attempting to send message. Will report error if not enabled.</p> <p>A carriage return can be added to a \$MSGSEND message by inserting "\OD" in to the text portion of the message</p> <p>For example:  AT\$MSGSEND=0,"Hello \OD"  OK  Hello</p> <p>To add a carriage return to a \$STOATEV use the following format:  AT\$STOATEV=1,AT\$MSGSEND=0,"Hello \OD"</p>

# AT\$SMSDA Destination Address For SMS Messages

AT\$SMSDA	Destination Address for SMS Messages
Command Function	This command allows a user to configure the phone number or email address for the sending of event data. It is also used in limiting the originating address for sending AT commands over SMS.
Syntax Query	AT\$SMSDA=?
Syntax	\$SMSDA: (1-5),"+1234...", "+123.."
Write Syntax	AT\$SMSDA=<index>,<dest addr>,<gateway number>
Write Response	OK
Read Syntax	AT\$SMSDA?
Read Response	\$SMSDA: 1,"<dest addr>","<gateway number>", \$SMSDA: 2,"<dest addr>","<gateway number>", \$SMSDA: 3,"<dest addr>","<gateway number>", \$SMSDA: 4,"<dest addr>","<gateway number>", \$SMSDA: 5,"<dest addr>","<gateway number>", OK
Execute Syntax Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<index>	1 - 5 defines the index number for destination address

AT\$SMSDA	Destination Address for SMS Messages
<dest addr>	38 characters or less phone number or email address (Phone numbers must match exactly as they appear in the AT+CGML="ALL" command response.)
<gateway>	7 characters or less gateway number for email address
Notes	<p>The ability to limit AT Commands over SMS is now also controlled by AT#SMSDAEN.</p> <p>If AT\$SMSDAEN=1, (default) and if there are no addresses populated in AT\$SMSDA, then all SMS with the correct AT command format addressed to the MSISDN of the device, and with the correct MDMID (if populated) will be allowed.</p> <p>To disable all AT Commands over SMS, set AT\$SMSDAEN=0.</p> <p>The gateway number is provided by the Network Provider and is only used for sending email over SMS. It is not required if you are sending SMS to a phone number.</p> <p>An AT\$EVENT command has to be set to send a message over SMS.</p>

# AT\$SMSDAEN Enable/Disable AT Commands Over SMS

AT\$SMSDAEN	Enable/Disable AT Commands over SMS
Command Function	This command allows the user to enable or disable the ability to allow AT commands over SMS
Syntax Query	AT\$SMSDAEN=?
Syntax	\$SMSDAEN: (0-1) OK
Write Syntax	AT\$SMSDAEN =<mode>
Write Response	OK
Read Syntax	AT\$SMSDAEN?
Read Response	AT\$SMSDAEN: <mode> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
< mode >	0 = Disables ability to send AT commands over SMS 1 = Enables the ability to send AT commands over SMS
Notes	<p>AT\$SMSDAEN is set to 1 by default. This allows SMS over AT commands to be sent to the modem. IF there is no entries in AT\$SMSDA, then all SMS with the correct AT command format, and addressed to the MSISDN of the device, and with the correct MDMID (if populated) will be allowed.</p> <p>AT\$SMSDAEN=0 will completely disable all AT COMMAND over SMS. Any SMS received, will be treated as normal SMS.</p> <p>To limit AT commands Over SMS to originating from a given address, ensure AT\$SMSDAEN=1 and populate the desired addresses in AT\$SMSDA.</p>
Example:	See App note GSM0308AN001- Sending AT Commands over SMS

# AT\$SNDMSG Send Test Message

AT\$SNDMSG	Send Test message
Command Function	This command allows the user to send the requested test message to the destination IP and port as defined in AT\$FRIEND and AT\$UDPAPI.
Syntax Query	N/A
Syntax	N/A
Write Syntax	AT\$SNDMSG=<test message select >
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<test message select >	<p>AND selected HEX options into a single 16 bit word.</p> <p>01 = Send Remote Ack Test Msg</p> <p>02 = Send Remote Broadcast Test Msg</p> <p>04 = Send Remote Fire &amp; Forget Test Msg</p> <p>08 = Send Local PAD Test Msg</p> <p>10 = Send Local UDP Test Msg</p>
Notes	N/A

# AT\$UDPMSG Send And Receive UDP Messages

AT\$UDPMSG	Send and Receive UDP Messages
Command Function	<p>This command allows the user to send UDP/IP data packets while in AT command mode. The destination IP address is set by the \$friend command while the port number is set by the \$udpapi command. The modem must have a network data connection established (\$areg=2 command setting).</p> <p>Incoming messages addressed to the modem's IP and port specified in AT\$UDPAPI will be displayed on the serial port with the unsolicited response \$UDPMSG: followed by the message.</p>
Syntax Query	AT\$UDPMSG=?
Syntax	(0-1),(0-2),("data"),(0-1) OK
Write Syntax	AT\$UDPMSG=<format>,<type>,<data>,<flash> <cr>
Write Response	OK
Read Syntax	AT\$UDPMSG?
Read Response	OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<format>	0 = <data> is an ASCII string (i.e.: "is this is my data") 1 = <data> is an ASCII-Hex bytes (i.e.: 050a25)
<type>	0 = message will only be sent to the first IP address in the friend's list and to port number mentioned by the \$FRIEND command 1 = message will be sent via the ACK method (controlled by \$ACKTM command) to the IP address listed in \$FRIEND and port number listed by \$FRIEND command 2 = message will be sent to all IP address in \$FRIEND command at port number listed by \$FRIEND command.



AT\$UDPMSG	Send and Receive UDP Messages
<data>	"ABCD" (Data to be transmitted in quotes) (NOTE: HEX format data shall always be entered as two ASCII characters per byte. ex: 0x5 should be entered as 05)
<flash>	<p>This optional parameter, when enabled, allows a user to store the message in the device's FLASH memory when the device is out of coverage or not registered. Stored messages will be transmitted when the device enters network data coverage.</p> <p>0 - Do not store messages in FLASH memory. 1 - Store messages in FLASH memory.</p>
Notes	<p>Data received from OTA shall be sent to the modem's serial port as: \$UDPMSG: &lt;text&gt; (ASCII or Binary data) (NOTE: Binary message will be displayed as two ASCII Hex characters)</p> <p>&lt;data&gt; field from the at\$udpmsg command will be sent to IP address(es) listed in the \$FRIEND command and at port number defined by \$FRIEND command.</p> <p>&lt;data&gt; sent or received OTA shall be appended with a 4-byte UDP-API header as follows:</p> <p>Bytes 0 - 1: First 2 bytes of &lt;data&gt; field  Byte 2: 0x06 for ASCII data type or 0x07 for Binary data type  Byte 3: reserved  Byte 4 - n: &lt;data&gt; minus the first two bytes</p> <p>* A minimum of 2 and maximum of 244 ASCII characters are support. For HEX, a minimum of 2 and maximum of 122 bytes are supported.</p>

# AT\$WAKEUP Modem To Server Wakeup/Keep Alive

AT\$WAKEUP	Modem to Server Wakeup/Keep Alive
Command Function	This command allows the user to configure the modem wakeup/keep alive parameters. These parameters control how the modem initiates contact with its server friends. Parameters can be selected so that a wakeup message sequence is executed every time the modem receives a new IP, and/or after a requested period has passed since the previous wakeup sequence has completed. A wakeup message sequence consists of sending <max retry> messages to each server friend in sequence (i.e. server 2 is contacted after all retries for server 1 is complete) and is complete when each server friend has received <max retry> messages, or upon receipt of an acknowledge message from a server.
Syntax Query	AT\$WAKEUP=?
Syntax	\$WAKEUP: (0-2),(0-10080) OK
Write Syntax	AT\$WAKEUP=<wakeup mode>,<retry period>
Write Response	OK
Read Syntax	AT\$WAKEUP?
Read Response	\$WAKEUP: <wakeup mode>,<retry period>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	

AT\$WAKEUP	Modem to Server Wakeup/Keep Alive
<wakeup mode>	<p>0 = No wakeup messages sent</p> <p>1 = Send one message upon receipt of new IP and every &lt;retry period&gt; minutes</p> <p>2 = send acknowledgement message using at\$acktm parameters upon receipt of new IP and every &lt;retry period&gt; minutes message</p>
<retry period >	The number of minutes for keep alive period. Zero indicates no retries.
Notes	<p>When this command is used, it will generate event group 0 events in the event table when the AT\$EVENT? command is issued.</p> <p>The &lt;retry period&gt; parameter of this command populates the event timer value when the AT\$EVTIM4? command is issued. The AT\$EVTIM value will be in seconds. The parameter will also generate additional event group 0 entries.</p> <p>If AT\$EVDEL=0 is issued or any entry for group 0 is deleted, this command MUST be re-entered for proper functionality. If a read command is issued, it will not reflect the true state of the AT\$WAKEUP setting.</p> <p>Wakeup messages are sent to the IPs specified in AT\$FRIEND and to the port specified in AT\$UDPAPI command.</p>

# AT%SNCNT Query (or Reset) The Byte Counters (GPRS Only)

AT%SNCNT	Query (or Reset) the Byte Counters. (GPRS Only)
Command Function	Returns (or resets) the byte counts of every current connection.
Syntax Query	AT%SNCNT=?
Syntax	%SNCNT: (0) OK
Write Syntax	AT%%SNCNT=<rst>
Write Response	OK
Read Syntax	AT%SNCNT?
Read Response	OK %SNCNT: <nsapi1>,<upo>,<dno>,<upp>,<dnpp><CR><LF> %SNCNT: <nsapi2>,<upo>,<dno>,<upp>,<dnpp><CR><LF>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<rst>	resets the counters if rst = 0
<nsapi>	connection id
<upo>	uplink octets count.
<dno>	downlink octets count.
<upp>	uplink packets count.
<dnpp>	downlink packets count.
Notes	If multiple contexts are activated / deactivated, set/query will result in OK followed by byte counts (set command resets the counters to 0) for each connection.

# API Commands

---

# TCP API Commands

## AT\$TCPAPI TCP API Control

AT\$TCPAPI	TCP API Control
Command Function	This command allows the user to initiate and terminate and query the status of the TCP API connection. Please note that the TCP API can only be used over the air.
Syntax Query	AT\$TCPAPI=?
Syntax	\$TCPAPI: (0-1) OK
Write Syntax	AT\$TCPAPI=<Status>
Write Response	OK
Read Syntax	AT\$TCPAPI?
Read Response	\$TCPAPI: <Status> (M-<Mgr Task>,R-<Rec Task>,T-<Trans Task>,Idx <Friend Index>)
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<Status>	TCP API connection status 0=Disabled 1=Enabled
<Mgr Task>	TCP API Manager Task 0 = None 1 = Init 2 = Idle 3 = Connecting 4 = Connected 5 = Disconnecting
<Rec Task>	TCP API Receive Task 0 = None

AT\$TCPAPI	TCP API Control
	1 = Init 2 = Idle 3 = Connecting 4 = Waiting for Header 5 = Waiting for Frame
<Trans Task>	TCP API Transmit Task 0 = None 1 = Init 2 = Idle 3 = Connected 4 = Sending
<Friend Index>	Friend Index (1 - 10)
Notes	N/A

# AT\$TCPIDLETO TCP API Idle Timeout

<b>AT\$TCPIDLETO</b>	<b>TCP API Idle Timeout</b>
<b>Command Function</b>	Specifies the number of seconds without data traffic, in either direction, before closing the connection.
<b>Syntax Query</b>	AT\$TCPIDLETO=?
<b>Syntax</b>	\$TCPIDLETO: (10-86400) OK
<b>Write Syntax</b>	AT\$TCPIDLETO=<Timeout>
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT\$TCPIDLETO?
<b>Read Response</b>	\$TCPIDLETO: <Timeout>
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;Timeout&gt;</b>	TCP API idle timeout value in seconds
<b>Notes</b>	After closing the connection, the device will attempt to reconnect using the FRIEND list.



## AT\$TCPRESTR TCP API Restart

AT\$TCPRESTR	TCP API Restart
Command Function	If a connection exists, it is dropped and a new connection is attempted starting at the beginning of the Friend list.
Syntax Query	AT\$TCPRESTR=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$TCPRESTR
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	N/A

# AT\$TCPRETRYTO TCP API Retry Timeout

<b>AT\$TCPRETRYTO</b>	<b>TCP API Retry Timeout</b>
<b>Command Function</b>	Specifies the number of seconds without receiving a TCP level ACK that will cause the connection to be closed.
<b>Syntax Query</b>	AT\$TCPRETRYTO=?
<b>Syntax</b>	\$TCPRETRYTO: (120-65535) OK
<b>Write Syntax</b>	AT\$TCPRETRYTO=<Timeout>
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT\$TCPRETRYTO?
<b>Read Response</b>	\$TCPRETRYTO: <Timeout>
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;Timeout&gt;</b>	TCP API retry timeout value in seconds
<b>Notes</b>	<p>After closing the connection, the device will attempt to reconnect using the FRIEND list. The purpose of this command is to provide an abort to the TCP stack level retries.</p> <p>Currently, the number of retries is 10 and the amount of time varies based on calculated round trip time. The minimum time allowed is 120 seconds.</p> <p>Attempts to set the retry timeout to a value less than 120 or more than 65535 will result in an error.</p>

# AT\$TCPSRC TCP API Source Ports

AT\$TCPSRC	TCP API Source Ports
Command Function	Specifies the TCP API source port range used when making a TCPAPI connection.
Syntax Query	AT\$TCPSRC=?
Syntax	\$TCPSRC: (1024-65535),(1024-65535) OK
Write Syntax	AT\$TCPSRC=<Start Port Number>,[<End Port Number>]
Write Response	OK
Read Syntax	AT\$TCPSRC?
Read Response	\$TCPSRC: <Start Port Number>,<End Port Number>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<Start Port Number>	TCP API starting port number
<End Port Number>	TCP API ending port number
Notes	<p>Each connection attempt uses the next port number in sequence until the end port is passed. When this happens the port is set to the start port number.</p> <p>This current port number in use is retained over a power cycle.</p> <p>If only the start port number is provided, the end port number will be start port number + 49 (range of 50).</p> <p>The default start port number is 1024. The modem will increment the port number with each connection attempt until it reaches the default end port number of 65535. Once the modem reaches the end port number it will begin incrementing the ports again using the start port number of 1024.</p>

# AT\$TCPSTATS TCP API Statistics

AT\$TCPSTATS	TCP API Statistics
Command Function	Displays bytes transmitted and received since last reset or last AT\$TCPSTATS=0 command.
Syntax Query	AT\$TCPSTATS=?
Syntax	\$TCPSTATS: (0) OK
Write Syntax	AT\$TCPSTATS=<Clear>
Write Response	OK
Read Syntax	AT\$TCPSTATS?
Read Response	\$TCPSTATS: Rx <Rx Bytes>,Tx <Tx Bytes>,M <Mode Change>,D <GPRS Deactivate>,R <Restarts>,C <Connection Timeout>,I <Idle Timeout>,S <Socket Errors>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<Rx Bytes>	TCP API bytes received
<Tx Bytes>	TCP API bytes transmitted
<Mode Changes>	Mode change (AT\$TCPAPI=0)
<GPRS Deactivate>	GPRS deactivate
<Restarts>	TCP API restarts (AT\$TCPRESTR)
<Connection Timeout>	TCP API connection timeout
<Idle Timeout>	TCP API idle timeout
<Socket Errors>	TCP API socket errors
Notes	AT\$TCPSTATS=0 will clear all TCP API statistics.

# AT\$TCPURC Enable URC Over TCP API

AT\$TCPURC	Enable URC Over TCP API
Command Function	This command is used to enable and disable sending Unsolicited Response Codes over TCPAPI.
Syntax Query	AT\$TCPURC=?
Response	\$TCPURC: (0-1)
OK	
Write Syntax	AT\$TCPURC=<MODE>
Response	OK
Read Syntax	AT\$TCPURC?
Response	\$TCPURC: <MODE>
OK	
Execute Syntax	N/A
Response	N/A
Parameter Values	
<MODE>	0 = Disabled 1 = Enabled
Notes	

# UDP API Commands

## AT\$ACKTM Acknowledgment Message Period & Retry Number

AT\$ACKTM	Acknowledgment Message Period & Retry Number
Command Function	This command allows the user to configure the modem msg acknowledge behavior. If server acknowledgement is selected for a message, the message will be re-sent every <retry period> number of seconds until the acknowledge message sequence is complete, or until an acknowledge message is received from a server. An acknowledge message sequence consists of sending <max retry> messages to each server friend in sequence (i.e. server 2 is contacted after all retries for server 1 is complete) and is complete when each server friend has received <max retry> messages, or upon receipt of an acknowledge message from a server.
Syntax Query	AT\$ACKTM=?
Syntax	\$ACKTM: (0-255),(0-3600),(0,1) OK
Write Syntax	AT\$ACKTM=<max retry>,<retry period>,<IP reselect>
Write Response	OK
Read Syntax	AT\$ACKTM?
Read Response	\$ACKTM: <max retry>,<retry period >,<IP reselect>
Execute Syntax	N/A
Execute Response	
Unsolicited Response	N/A
Parameter Values	
<max retry>	<p>The maximum number of times an acknowledge message is re-sent to a single friend server. After all retries to the friend server are exhausted, the modem will move on to the next friend server if one exists. If there are no more friend servers available, the modem will start network data activation recovery if the recovery option is selected; otherwise, the message will be discarded.</p> <p>In the case of the default acknowledge wakeup message: The maximum number of wakeup messages the modem will send to each server friend upon receipt of a new IP, or upon expiration of each keep-alive period. Zero indicates no wakeup message should</p>



# AT\$UDPAPI Modem API Address

AT\$UDPAPI	Modem API Address
Command Function	This command allows the user to query/set the API IP address and port number. Any UDP packet received from a local host and addressed to the modem API IP and port will be intercepted and processed as a modem API request. Any UDP packet received from a remote server and addressed to the modem API port will be intercepted and processed as a modem API request.
Syntax Query	AT\$UDPAPI=?
Syntax	\$UDPAPI: "(0-255).(0-255).(0-255).(0-255)",(0-65535) OK
Write Syntax	AT\$UDPAPI="<API IP>",<API port>
Write Response	OK
Read Syntax	AT\$UDPAPI?
Read Response	\$UDPAPI: "<<API IP>>",<API port>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<API IP>	IP address for local API access
<API port >	UDP port number for local and remote API access
Notes	N/A



# FOTA Commands

---

# AT\$FOTACFG Configure Firmware Upgrade

AT\$FOTACFG	Configure Firmware Upgrade
Command Function	This command allows the user to configure the modem Firmware Over The Air (FOTA) Server.
Syntax Query	AT\$FOTACFG=?
Syntax	\$FOTACFG: "host", (0-65535), "username", "password", (0,1), (0-20), (0,1), (0,1), (0,1) OK
Write Syntax	AT\$FOTACFG=<"ftpServerHostname">,<ftpPort>,<"ftpUsername">,<"ftpPassword">,<ftpMode>,<retries>,<reportMode>,<upgradeMode>,<upgradeStatus>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ftpServerHostname>	Either Fully Qualified Domain Name (FQDN) or a dotted-decimal IP address of the FTP server. The FQDN is resolved by DNS immediately prior to opening IP connection to FTP server. The FQDN may be up to a maximum of 63 characters. Default value: none.
<ftpPort>	The TCP port number on the FTP server. Port range: 0 - 65535, Default value: 21
<ftpUsername>	FTP login name on the FTP server. The username may be up to a maximum of 31 characters. Default value: none.
<ftpPassword>	The FTP password for the FTP user. The password may be an empty string if the FTP user does not have a password. The password may be up to a maximum of 31 characters. Default value: none.

<b>AT\$FOTACFG</b>	<b>Configure Firmware Upgrade</b>
<b>&lt;ftpMode&gt;</b>	The FTP mode to use for data connections. FTP data connections may be active or passive. Passive mode is generally better to use with FTP servers located behind firewalls. Values: 0 = active, 1 = passive. Default value: 0 (active mode).
<b>&lt;retries&gt;</b>	This is the maximum number of FTP file resumes to attempt before giving up on original AT\$FOTAGET command. The range of retries is 0 – 20. Default Value: 0.
<b>&lt;reportMode&gt;</b>	The reporting mode is used to control the level of status reporting during the FOTA process. Normal reporting mode sends only critical status updates, extended reporting mode sends informative and critical status updates. The command parameters are: 0 = normal reporting, 1 = extended reporting. Default value: 0 (normal reporting mode).
<b>&lt;upgradeMode&gt;</b>	The system behavior following successful FOTA file transfer to modem. The upgrade Mode may be either Automatic or Manual. Auto mode will immediately initiate FOTA upgrade when file transfer completes. Manual mode will wait after file transfer until an explicit upgrade command is issued (AT\$FOTAUPG). The command line parameters are: 0 = auto, 1 = manual. Default value: 0 (automatic mode).
<b>&lt;upgradeStatus&gt;</b>	Controls the generation of FOTA Finish status. FOTA Finish status is reported after the modem reboots from a FOTA upgrade or as a result of a fatal error. This status is only returned OTA. The command line parameters are 0 = disabled and 1 = enabled. FOTA finish status is disabled by default.
<b>Notes</b>	Refer to Novatel Wireless Application Note ENF000AN002 for more information on FOTA operations

# AT\$FOTAGET Get Firmware Upgrade OTA

AT\$FOTAGET	Get Firmware Upgrade OTA
Command Function	This command will initiate a connection to the FOTA Server to download the FOTA Delta File. The FOTA Server is defined with the \$FOTACFG command.
Syntax Query	AT\$FOTAGET=?
Syntax	\$FOTAGET: "remotefilename" OK
Write Syntax	AT\$FOTAGET=<"remotefilename">
Write Response	OK
Read Syntax	AT\$FOTAGET?
Read Response	\$FOTAGET: <fotaState>,<"remotefilename">,<retriesRemaining>,<appErrorCode>,<errorCode>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<fotaState>	Current FOTA mode indicating if FOTA is in the process of transferring a FOTA file.  0 = IDLE 1 = BUSY
<"remotefilename">	The upgrade package file name.

AT\$FOTAGET	Get Firmware Upgrade OTA
<retriesRemaining>	The number of FTP resumes remaining before terminating file transfer. This number starts with the retries specified in the AT\$FOTACFG command and is decremented for each FOTA restart which occurs.
<appErrorCode>	<p>Status of the last FOTA result.</p> <p>0 = success</p> <p>1 = failed to access package data</p> <p>2 = flash erase failed</p> <p>3 = flash write of package failed</p> <p>6 = package version or signature does not match</p> <p>7 = package version or signature does not match</p> <p>8 = could not install package in flash</p> <p>9 = previous version present and pkg Status pending</p> <p>10 = not enough space to write file</p> <p>11 = flash file open failed</p> <p>12 = flash file read failed or did not read requested size</p> <p>13 = flash file write failed</p> <p>14 = fota file larger than max allowed</p> <p>15 = flash file status failed</p> <p>16 = flash file seek failed</p> <p>17 = flash file close failed</p> <p>18 = failed to get flash sector address</p> <p>19 = flash file erase failed</p> <p>20 = checksum verification failed</p> <p>21 = failed to set update flag</p>
Notes	Refer to Novatel Wireless Application Note ENF000AN002 for more information on FOTA operations

# AT\$FOTAUPG Upgrade Current Firmware

AT\$FOTAUPG	Upgrade Current Firmware
Command Function	This function is used to initiate the FOTA upgrade process. It assumes that a binary delta file exists in the FFS with the name “current_delta.bin”. This file will typically be moved to the FFS via FTP functions or other FOTA specific functions.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$FOTAUPG
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	Refer to Novatel Wireless Application Note ENF000AN002 for more information on FOTA operations
Example	N/A

# FTP Commands

---

# AT\$ATEXEC Execute AT Command File

AT\$ATEXEC	Execute AT Command File
Command Function	This command is used to execute an AT command file that is stored in FFS.
Syntax Query	AT\$ATEXEC =?
Response	\$ATEXEC: "filename", (0-2) OK
Write Syntax	AT\$ATEXEC =<"FILENAME ">,<OPTION>
Response	OK
Read Syntax	AT\$ATEXEC?
Response	\$ATEXEC: <"FILENAME">,<STATUS> OK
Execute Syntax	N/A
Response	N/A
Unsolicited Response	<p>The modem returns two responses after the command to run the script has been issued. The first response is an immediate acknowledgement of the command, either OK (if the command was entered correctly) or ERROR (if the command was not entered correctly). After the script has completed, the modem returns an Unsolicited Result Code (URC) indicating either success or the reason for the error.</p> <p>The following URCs may be returned:</p> <p>\$ATEXEC OK</p> <p>\$ATEXEC FAIL</p> <p>\$ATEXEC FILE OPEN ERROR</p> <p>\$ATEXEC FILE READ ERROR</p> <p>\$ATEXEC AT CMD ERROR, Line n (Where n is the line number of the first error in the script file)</p> <p>\$ATEXEC BUSY ERROR</p>
Parameter Values	
<"FILENAME">	<p>Name of file to execute</p> <p>Maximum length is 15 characters.</p>



<b>AT\$ATEXEC</b>	<b>Execute AT Command File</b>
<b>&lt;OPTION&gt;</b>	AT command execution option 0 = Run To Completion 1 = Stop on Error 2 = Stop on Error and Reset Modem
<b>&lt;STATUS&gt;</b>	Status from Executing File 0 = Ok 1 = Error 2 = Open File Error 3 = File Read Error 4 = AT Command Error 5 = Busy 6 = Command Length Exceeded 7 = Retries Exceeded
<b>Notes</b>	AT\$FTPGET or AT\$FFS can be used to store files into the FFS.

# AT\$FFS Generic Flash File System Access

AT\$FFS	Generic Flash File System Access
Command Function	This command provides generic file read and write functionality to the embedded FFS in the Novatel Wireless modem.
Syntax Query	AT\$FFS=?
Response	\$FFS: (0-5,86),"filename",(0-524287),(0-150),("ASCII-HEX")
Write Syntax	AT\$FFS=<op>,<filename>,<seek>,<length>, <data>
Response	<p>The device response varies by &lt;op&gt;</p> <p><b>Response for Write (&lt;op&gt; = 0):</b></p> <p>OK</p> <p><b>Response for Read (&lt;op&gt; = 1):</b></p> <p>\$FFS:</p> <p>&lt;data&gt;</p> <p>OK</p> <p><b>Response for Delete (&lt;op&gt; = 2):</b></p> <p>OK</p> <p><b>Response for Directory (&lt;op&gt; = 3):</b></p> <p>\$FFS</p> <p>[&lt;filename&gt;]</p> <p>[&lt;filename&gt;]</p> <p>[...]</p> <p>OK</p> <p><b>Response for Directory and size (&lt;op&gt; = 4):</b></p> <p>\$FFS:</p> <p>[&lt;file size&gt; &lt;filename&gt;]</p> <p>[&lt;file size&gt; &lt;filename&gt;]</p> <p>[...]</p>

AT\$FFS	Generic Flash File System Access
	<p><b>Response for Free and used space (&lt;op&gt; = 5):</b>  \$FFS: &lt;free_bytes&gt; Free Bytes, &lt;used_bytes&gt; Used Bytes</p> <p><b>Response for Delete All (&lt;op&gt; = 86):</b>  OK</p>
Read Syntax	N/A
Response	N/A
Execute Syntax	N/A
Response	N/A
Parameter Values	
<op>	FFS Operation 0 = write 1 = read 2 = delete 3 = directory 4 = directory with file size 5 = FFS free space and used space 86 = delete all files
<filename>	The filename in double quotes (i.e. "test.txt") Maximum length is 15 characters. Filename parameter is required for the write (0), read (1), and delete (2) operations.
<seek>	The position in the file to read or write given as a byte offset. Seek parameter is required for the write (0) and read (1), operations. Range: 0 - 524287.
<length>	The number of bytes to read or write. Length parameter is only required for read and write operations. Range: 0 - 150

AT\$FFS	Generic Flash File System Access
<data>	<p>Only applicable to write operations as an input parameter. Also defines the output data format for the read operation.</p> <p>Limited to 150 bytes (300 characters).</p> <p>Data is encoded in ASCII hex (i.e. 0x12, 0x34, 0xab would be entered as "1234ab")</p>
Notes	
Examples	<pre>AT\$FFS=0,"test",0,8,"0102030405060708" OK  AT\$FFS=1,"test",0,8 \$FFS: 0102030405060708 OK  AT\$FFS=3 \$FFS: test OK  AT\$FFS=4 \$FFS: 8 test OK  AT\$FFS=5 \$FFS: 675308 Free Bytes, 76324 Used Bytes OK  AT\$FFS=2,"test" OK  AT\$FFS=86 OK</pre>

# AT\$FTPABORT Aborts Current Data Operation With FTP Server

AT\$FTPABORT	Aborts Current Data Operation with FTP Server
Command Function	Interrupts the current data operation with the FTP server.
Syntax Query	AT\$FTPABORT=?
Response	OK
Write Syntax	N/A
Response	N/A
Read Syntax	AT\$FTPABORT?
Response	ERROR
Execute Syntax	AT\$FTPABORT
Response	OK
Parameter Values	N/A
Notes	If a data operation is not in operation, no action is performed. If a connection to an FTP server is not active, FTP INVALID CLIENT is returned.

# AT\$FTPBLK Change Current FTP BLock Size

AT\$FTPBLK	Change Current FTP Block Size
Command Function	Changes the current FTP block size
Syntax Query	AT\$FTPBLK=?
Response	\$FTPBLK: (128-1500) OK
Write Syntax	AT\$FTPBLK=<blocksize>
Response	OK
Read Syntax	AT\$FTPBLK?
Response	1500
Execute Syntax	N/A
Response	N/A
Parameter Values	
<blocksize>	FTP block size (128-1500)
Notes	The default blocksize is 1500. AT\$FTPBLK should be set prior to the AT\$FTPOPEN for the blocksize to have effect.

# AT\$FTPCFG Configure FTP Parameters

AT\$FTPCFG	Configure FTP parameters
Command Function	Configures FTP parameters required to open connection to FTP Server
Syntax Query	AT\$FTPCFG=?
Syntax	AT\$FTPCFG: "host", (0-65535), "username","password" OK
Write Syntax	AT\$FTPCFG=<host>,<portnum>,<username>,<password>
Write Response	OK
Read Syntax	AT\$FTPCFG?
Read Response	AT\$FTPCFG: <host>, <port>,<username>,<password>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<host>	Fully qualified domain name or dotted-decimal notation IP address of FTP server, character string up to 63 characters
<portnum>	FTP server port number, 0 – 65535
<username>	FTP server user name, character string up to 31 characters
<password>	FTP server password, character string up to 31 characters
Notes	AT\$FTPCFG must be entered initially before opening connection to FTP server. Configuration information will be saved to flash when flash write command is executed and will be re-used on subsequent FTP connections.

# AT\$FTPCHDIR Change Current Working Directory

<b>AT\$FTPCHDIR</b>	<b>Change current working directory</b>
<b>Command Function</b>	Changes the current working directory on the FTP server.
<b>Syntax Query</b>	AT\$FTPCHDIR=?
<b>Syntax</b>	\$FTPDIR: "directory" OK
<b>Write Syntax</b>	AT\$FTPCHDIR=<directory>
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT\$FTPCHDIR?
<b>Read Response</b>	ERROR
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;directory&gt;</b>	Directory name on remote FTP server
<b>Notes</b>	AT\$FTPCHDIR can only be entered after the connection to the FTP server has been established. To navigate up a directory, use the ".." directory notation.



# AT\$FTPCLOSE Closes The Connection To The FTP Server

AT\$FTPCLOSE	Closes the Connection to FTP Server
Command Function	Closes the current connection with the remote FTP server.
Syntax Query	AT\$FTPCLOSE=?
Response	OK
Write Syntax	N/A
Response	N/A
Read Syntax	AT\$FTPCLOSE?
Response	ERROR
Execute Syntax	AT\$FTPCLOSE
Response	OK
Parameter Values	N/A
Notes	This command is only available when a connection to the FTP server is active. If a connection to an FTP server is not active, FTP INVALID CLIENT is returned.

# AT\$FTPDIR Directory Listing

AT\$FTPDIR	Directory Listing
Command Function	Prints a directory listing of the current working directory on the FTP server
Syntax Query	AT\$FTPDIR=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$FTPDIR?
Read Response	OK \$FTPDIR: <current directory information>
Execute Syntax	AT\$FTPDIR
Execute Response	OK <directory listing information>
Unsolicited Response	N/A
Parameter Values	N/A
Notes	AT\$FTPDIR can only be entered after the connection to the FTP server has been established. Directory listing information may be delayed due to the latency of the data connection to the FTP server.

# AT\$FTPGET Retrieve A Remote File

<b>AT\$FTPGET</b>	<b>Retrieve a Remote File</b>
<b>Command Function</b>	Retrieves a remote file from the FTP server for either output on the serial port or storage to the local flash file system.
<b>Syntax Query</b>	AT\$FTPGET=?
<b>Syntax</b>	\$FTPGET: "remotefile","localfile" OK
<b>Write Syntax</b>	AT\$FTPGET=<remotefile>,<localfile>
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT\$FTPGET?
<b>Read Response</b>	\$FTPGET: <remotefile>,(SERIAL, <localfile>),<output>/<available>,<eof>
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;remotefile&gt;</b>	File name on the remote FTP server.
<b>&lt;localfile&gt;</b>	File name to use for storage of the retrieved file in the local flash file system. Note: the local filename length is limited to 15 characters.
<b>&lt;output&gt;</b>	Number of bytes which have been transferred out the serial port
<b>&lt;available&gt;</b>	Number of bytes of file which are available for output to the serial port
<b>&lt;eof&gt;</b>	0 = file currently being transferred 1 = complete file has been transferred to FTP client
<b>Notes</b>	If local file is not specified, the remote file will be maintained in memory buffers until a subsequent FTP read request is performed to output a block of bytes onto the serial port. As the file is transmitted out the serial port, the FTP client will refill the memory buffers with additional file data from the FTP server.

# AT\$FTPOPEN Opens FTP Connection

<b>AT\$FTPOPEN</b>	<b>Opens FTP Connection</b>
<b>Command Function</b>	Opens FTP control connection to FTP server
<b>Syntax Query</b>	AT\$FTPOPEN=?
<b>Syntax</b>	\$FTPOPEN: ("ACTIVE,"PASSIVE") OK
<b>Write Syntax</b>	N/A
<b>Write Response</b>	N/A
<b>Read Syntax</b>	AT\$FTPOPEN?
<b>Read Response</b>	OK \$FTPOPEN: <status>
<b>Execute Syntax</b>	AT\$FTPOPEN="<mode>"
<b>Execute Response</b>	OK <status>
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;mode&gt;</b>	ACTIVE or PASSIVE Mode is an optional parameter. If not specified, the FTP connection will be in the ACTIVE mode.
<b>&lt;status&gt;</b>	FTP CONNECTION OPEN FTP CONNECTION CLOSED FTP STACK ERROR Status will display the state of the control connection with the remote FTP server.
<b>Notes</b>	AT\$FTPOPEN must be entered after FTP configuration information has been entered. If any FTP configuration information has been saved to flash, it will be used to open the connection to the FTP server. After the FTP open completes successfully, FTP CONNECTION OPEN will be printed, otherwise an error string will be printed.

# AT\$FTPPUT Store A Local File On The FTP Server

AT\$FTPPUT	Store a Local File On the FTP Server
Command Function	Stores a local file from the Flash File System onto the remote FTP server.
Syntax Query	AT\$FTPPUT=?
Response	\$FTPPUT:"remotefile","localfile" OK
Write Syntax	AT\$FTPPUT=<remotefile>,<localfile>
Response	OK
Read Syntax	AT\$FTPPUT?
Response	\$FTPPUT:<remotefile>,<localfile>,<totalWrote>/<totalSize>,<eof>
Execute Syntax	N/A
Response	N/A
Parameter Values	
<remotefile>	File name on the remote FTP server.
<localfile>	File name on the local Flash File System.
<totalWrote>	Number of bytes of file which have been written to FTP Server
<totalSize>	Size of file to be transferred to FTP Server (in bytes).
<eof>	0 = file is currently being transferred 1 = complete file has been transferred to FTP Server
Notes	

# AT\$FTPR Outputs Block Of File Data Onto Serial Port

<b>AT\$FTPR</b>	<b>Outputs block of file data onto serial port</b>
<b>Command Function</b>	Outputs the requested number of bytes of a retrieved file from the remote FTP server onto the serial port.
<b>Syntax Query</b>	AT\$FTPR=?
<b>Syntax</b>	\$FTPR: (0-1500) OK
<b>Write Syntax</b>	N/A
<b>Write Response</b>	N/A
<b>Read Syntax</b>	A AT\$FTPR?
<b>Read Response</b>	\$FTPR: <available>
<b>Execute Syntax</b>	AT\$FTPR=<blocksize>
<b>Execute Response</b>	OK
<b>Unsolicited Response</b>	NA
<b>Parameter Values</b>	
<b>&lt;blocksize&gt;</b>	Number of bytes to output to serial port. This number is limited to the current number of bytes of the remote file which have been transferred from the FTP server.
<b>&lt;available&gt;</b>	The number of bytes available for output to the serial port.
<b>Notes</b>	This command is only available after an FTP get operation has been initiated using the serial port as the file destination. It directs buffered file data from the FTP server to be transmitted in blocks out the serial port. This command is repetitively issued until the complete file is transmitted from the FTP server out the serial port.

# AT\$FTPRST Restart The Last FTP GET Operation

AT\$FTPRST	Restart the Last FTP GET Operation
Command Function	Manual restart of an FTP GET file transfer from the last completed point in the file.
Syntax Query	N/A
Response	N/A
Write Syntax	AT\$FTPRST=<offset>
Response	OK
Read Syntax	N/A
Response	N/A
Execute Syntax	N/A
Response	N/A
Parameter Values	
<offset>	Number of bytes into the file to resume file transfer. (Optional)
Notes	<p>AT\$FTPRST will attempt to resume the last incomplete file transfer from the last point in the file successfully read. Offset is not required unless the automatically computed offset is to be overridden. The AT\$FTPRST command requires an RFC3659 compliant FTP server which implements the FTP REST command. AT\$FTPRST is not designed to work over a system restart.</p> <p>The user's current path must contain the file prior to issuing AT\$FTPRST or else the AT\$FTPRST command will fail.</p> <p>The only time it is necessary to send the \$FTPRST command is if a "FTP TIMEOUT" URC is received during a FTP transfer. The "FTP TIMEOUT" is typically caused by the loss of the network data connection for more than the FTP idle timeout, 60 seconds.</p>

# RTC Commands

---



# AT\$RTCALRM Real Time Clock Alarm

AT\$RTCALRM	Real Time Clock Alarm
Command Function	This command handles the setting and querying of the RTC alarm registers. When the alarm feature has been enabled the \$EVENT engine will be invoked upon the going off. If the \$RTCWAKE call is invoked following the alarm feature setup the modem will power back up automatically upon the alarm going off. The actions of these two features are mutually exclusive of each other, so one or the other will occur but not both.
Syntax Query	AT\$RTCALRM=?
Syntax	\$RTCALRM: (0-99),(1-12),(1-31),(0-23),(0-59),(0-59),(0-527040) OK
Write Syntax	AT\$RTCALRM= <rtc_year>,<rtc_month>,<rtc_day>,<rtc_hour>,<rtc_min>,<rtc_sec>,<rtc_alarmTimeinMinutes>
Write Response	OK
Read Syntax	AT\$RTCALRM?
Read Response	\$RTCALRM: <rtc_enabled>,<rtc_year>,<rtc_month>,<rtc_day>,<rtc_hour>,<rtc_min>,<rtc_sec>,<rtc_alarmTimeinMinutes>” OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	Parameters are positional dependent, any parameter may be omitted with the use of the comma (’,’) as a place holder on command line. If a parameter is omitted then the current value in the hardware is used.
< rtc_enabled >	Indicates if alarm is enabled or not. 1= Enabled 0= Disabled
< rtc_year >	The year on which the alarm is being set to trigger. The RTC supports years 2000-2099. The data is entered as a two digit value 0..99.
<rtc_month>	The month on which the alarm is being set to trigger. Values range from 1..12.

<b>AT\$RTCALRM</b>	<b>Real Time Clock Alarm</b>
<b>&lt;rtc_day&gt;</b>	The day on which the alarm is being set to trigger. Values range from 1..31.
<b>&lt;rtc_hour&gt;</b>	The hour on which the alarm is being set to trigger. Values range from 0..24 for 24-Hour mode settings. NOTE: only 24-Hour mode currently supported.
<b>&lt;rtc_min&gt;</b>	The minute on which the alarm is being set to trigger. Values range from 0..59.
<b>&lt;rtc_sec&gt;</b>	The second on which the alarm is being set to trigger. Values range from 0..59.
<b>&lt;rtc_alarmTimeinMinutes&gt;</b>	Periodic Alarm time in minutes. RTC Alarm will be reset at a period specified by this parameter.
<b>Notes</b>	<p>This command is used to set the Alarm time for the RTC. Currently all time is based on 24-Hour time format. The alarm may be cleared using the command AT\$RTCCLRA. This call in conjunction with the use of either the \$EVENT engine or the \$RTCWAKE command the user has a rich feature set of driving other events or waking the system up at a pre-determined time in the future. No checks are made for alarm time not being later than current time.</p> <p>AT\$RTCALRM will not trigger if the alarm time occurs while the unit is resetting.</p>
<b>Examples</b>	<p>Following sets and alarm for 2003, October, 13th at 17:00 Hours at\$rtcalrm=3,10,13,17,0,0 OK</p> <p>Following queries the alarm for current time, and shows that the alarm being; Enabled, for 2003, October 13th at 17:00 hours. at\$rtcalrm? \$RTCALRM: 01, 03, 10, 13, 17, 00, 00 OK</p> <p>Following call unsets alarm followed by displaying alarm time information. at\$rtcclra OK at\$rtcalrm? \$RTCALRM: 00, 03, 10, 13, 17, 00, 00 OK</p>

# AT\$RTCCLRA Real Time Clock Clear Alarm

AT\$RTCCLRA	Real Time Clock Clear Alarm
Command Function	This command allows the modem to clear/disable the active RTC alarm. The alarm interrupt enable is cleared but alarm time not altered.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$RTCCLRA
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	None
Notes	This command will disable the RTC alarm while leaving the value of the last alarm time setting alone.

# AT\$RTCRSET RTC Report Reset State

AT\$RTCRSET	RTC Report Reset State
Command Function	This command reports the reset state of the RTC following a power cycle. The command reports TRUE only if a reset occurred since last power up and last call to check it. So multiple calls will report the current status only.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$RTCRSET?
Execute Response	\$RTCRSET : <reset state> OK
Unsolicited Response	N/A
Parameter Values	

AT\$RTCRSET	RTC Report Reset State
<reset state>	1 - indicates that a RTC reset occurred, 0 - indicates that a RTC reset did NOT occur
Notes	This command returns the current reset state of the RTC since power-up. If multiple calls are made only current reset state is returned.
Examples	<p>Following example shows the check for the RTC being reset since last check of reset and since last power up, with a response of True.</p> <pre>AT\$rtcrset? \$RTCRSET: 1 OK</pre> <p>Following example shows the check for the RTC being reset since last check of reset and since last power up, with a response of False.</p> <pre>AT\$rtcrset? \$RTCRSET: 0 OK</pre>

# AT\$RTCTIME Real Time Clock Time

AT\$RTCTIME	Real Time Clock Time
Command Function	This command handles the setting and querying of the RTC time registers.
Syntax Query	AT\$RTCTIME=?
Syntax	\$RTCTIME: (0-6),(0-99),(1-12),(1-31),(0-23),(0-59),(0-59) OK
Write Syntax	AT\$RTCTIME= <rtc_wkday>,<rtc_year>,<rtc_month>,<rtc_day>,<rtc_hour>,<rtc_min>,<rtc_sec>
Write Response	OK
Read Syntax	AT\$RTCTIME?
Read Response	\$RTCTIME: <rtc_wkday>, <rtc_year>, <rtc_month>, <rtc_day>,<rtc_hour>, <rtc_min>, <rtc_sec>” OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	Parameters are positional dependent, any parameter may be omitted with the use of the comma (',') as a place holder on command line. If a parameter is omitted then the current value in the hardware is used.
< rtc_wkday >	Current week day matching time day being set. The week day values range from 0-6, where; 0 = Sunday 1 = Monday 2 = Tuesday 3 = Wednesday 4 = Thursday 5 = Friday 6 = Saturday
< rtc_year >	The year to which the time is being set. The RTC supports years

<b>AT\$RTCTIME</b>	<b>Real Time Clock Time</b>
	2000-2099. The data is entered as a two digit value 0-99.
<b>&lt;rtc_month&gt;</b>	The month to which the time is being set. Values range from 1-12.
<b>&lt;rtc_day&gt;</b>	The day to which the time is being set. Values range from 1-31.
<b>&lt;rtc_hour&gt;</b>	The hour to which the time is being set. Values range from 0-24 for 24-Hour mode settings. NOTE: only 24-Hour mode currently supported.
<b>&lt;rtc_min&gt;</b>	The minute to which the time is being set. Values range from 0-59.
<b>&lt;rtc_sec&gt;</b>	The second to which the time is being set. Values range from 0-59.
<b>Notes</b>	This command is used to set the time for the RTC. Currently all time is based on 24-Hour time format.
<b>Examples</b>	at\$rtctime? \$RTCTIME: 01, 03, 10, 13, 14, 03, 2 OK  at\$rtctime=? \$RTCTIME: (0..6), (0..99), (1..12), (1..31), (0..23), (0..59), (0..59)  at\$rtctime=1,3,10,13,14,37,50 OK

# AT\$RTCWAKE Real Time Alarm Wake

AT\$RTCWAKE	Real Time Alarm Wake
Command Function	This command attempts to de-register from the network, at the end of a 5 second delay then powers down the modem so only the RTC is running. Upon the RTC alarm going off the modem will re-boot and initialize again. The command relies on the RTC Alarm feature being set prior, if system is to wake up at a preset time in the future.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$RTCWAKE
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	N/A
Notes	The AT\$RTCWAKE command powers down the modem, so only the RTC clock will be running. The modem will power up automatically only if the RTC Alarm feature has been, otherwise modem will remain powered off. See the AT\$RTCALRM command for setup of the RTC alarm.



# Miscellaneous Commands

---

# AT\$AREG Auto Registration

AT\$AREG	Auto Registration
Command Function	This command sets the auto registration state of the modem
Syntax Query	AT\$AREG=?
Syntax	\$AREG: (0-3), (0-4) OK
Write Syntax	AT\$AREG=<state>,<backoff table>
Write Response	OK
Read Syntax	AT\$AREG?
Read Response	If AREG is 0-2 \$AREG: <state> OK If AREG is 3 AREG: 3, 0 PDP RETRY: 15, 15, 15, 15, 60, 60, 120
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	

AT\$AREG	Auto Registration
<state>	<p>0 = Autoreg off</p> <p>1 = Autoreg on</p> <p>2 = Auto GPRS Activation on Power up. (for \$hostif=1 and 2, MT will perform GPRS activation and go into PAD data mode. For \$hostif=0 and 3, MT will perform GPRS activation, but remain in AT command mode)</p> <p>3 = Auto GPRS Activation on Power up. Similar to state 2, but utilizes the \$PDPBOT (PDP activation backoff time tables) to insert delay before retrying PDP activation after a PDP rejection.</p>
<backoff table>	<p>Selects the PDP backoff table to be used:</p> <p>0 = user defined table (see \$PDPBOT for display and modification of this table)</p> <p>1 = Rogers Table. The delay values for this table: 240, 240, 240, 240, 1800, 3600</p> <p>2 = AT&amp;T Table. The delay values for this table: 60, 60, 60, 120, 120, 120, 180</p> <p>3 = Jasper Table. The delay values for this table: 60, 60, 60, 60, 600, 900, 1800, 3600</p> <p>4 = T-Mobile Table. The delay values for this table: 15, 15, 15, 15, 30, 30, 30, 30, 60</p>
Notes	<p>This command sets GSM registration state. When set to 1, upon power on, the modem will automatically register on the GSM network. To set the modem to automatically attach to the GPRS network on power on, see AT%CGAATT command.</p> <p>AT+CGDCONT must be entered and saved before MT is placed in AREG=2 or AREG=3.</p> <p>If PIN is enabled, the modem will not complete the auto registration process until after the PIN has been entered (AT+CPIN).</p> <p>Do not use AT\$AREG=2 or AT\$AREG=3 with autobauding of the serial port and PAD functions. The serial port will not respond to at commands if the modem establishes a connect state before the baud rate has been determined for the serial port.</p> <p>The second parameter of the \$AREG command is only allowed to be entered if the first parameter is 3. For the query, the second parameter is only shown if the first parameter is 3. The PDP RETRY: line shows the PDP backoff times that are currently selected.</p>

# AT\$CREG Network Registration Info

AT\$CREG	Network Registration Info
Command Function	Displays current network registration status.
Syntax Query	AT\$CREG=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$CREG?
Read Response	\$CREG: <status>,<nid>,<bsid> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<Status>	<p>\$CREG status is synthesized from CDMA information and approximates the GSM +CREG command.</p> <p>0 = airplane mode  1 = registered on home network  2 = registration in progress  3 = no service  4 = unknown  5 = registered roaming</p>
<nid>	Network ID
<bsid>	Base Station ID
Notes	N/A

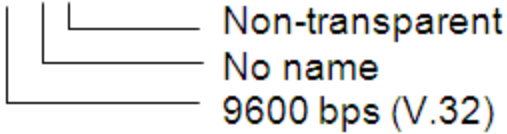
# AT\$NETMON Monitor Network Availability

AT\$NETMON	Monitor Network Availability
Command Function	This command allows the modem to take aggressive network recovery action based upon the results of continuous network monitoring.
Syntax Query	AT\$NETMON=?
Syntax	\$NETMON: (0,5-1440),(0-10),(0-255),(0-3) OK
Write Syntax	AT\$NETMON= <net_unavail_min>,<reset_cnt>,<ping check>,<rst timers>
Write Response	OK
Read Syntax	AT\$NETMON?
Read Response	AT\$NETMON: "<net_unavail_min >,<reset_cnt>,<ping check>,<rst timers>"
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<net_unavail_min>	Number of minutes the network must remain unavailable before current Network Activation is released, and a new Network Activation is attempted. Network availability is valid Network IP (AT\$NETIP).  A value of zero means the Network Activation will never be released via AT\$NETMON.
<reset_cnt>	The number of times the modem will attempt to recover by using a network stack deactivation and re-activation process before using a modem reset to recover.  If the value is 0, then never perform a modem reset.
<ping check>	Number of minutes between modem-initiated ping checks. If no network data has been received within <ping check> minutes, the modem will initiate pings (up to 4 ICMP messages are generated) to the 1st server on the \$FRIEND list.

AT\$NETMON	Monitor Network Availability
	<p>If no ping response is received to any of the 4 ICMP messages, the modem will initiate pings to the next server in the list. If no ping response is returned from any of the \$FRIEND servers, a new IP is obtained via a modem-initiated network de-activation / activation sequence.</p> <p>A value of zero indicates that the modem will never initiate a ping check.</p>
<rst timers>	<p>0 - Reset network monitoring timers upon any activity on the serial port AND use legacy IP reselect for &lt;ping check&gt; recovery</p> <p>1 - Do not reset the network monitoring timers if there is activity on the serial ports</p> <p>2 - Use modem reset for &lt;ping check&gt; recovery</p> <p>3 - Do not reset the network monitoring timers if there is activity on the serial ports AND use modem reset for &lt;ping check&gt; recovery</p>
Notes	<p>This command allows the &lt;net_unavail_min&gt; parameter to be set as low as 5 minutes for backwards compatibility with legacy scripts. However, due to certification requirements, the soonest a \$NETMON recovery action can be performed is 30 minutes</p>

# AT+CBST Select Bearer Service Type

AT+CBST	Select Bearer Service Type
Command Function	This command is used to select the bearer service with data rate and the connection element to be used when data calls are originated.
Syntax Query	AT+CBST=?
Syntax	+CBST: (0-7, 12, 14, 65, 66, 68, 70, 71,75), (0-1), (0-3)
Write Syntax	AT+CBST=<baud rate>,<name>,<ce>
Write Response	OK/ERROR
Read Syntax	AT+CBST?
Read Response	+CBST: 7,0,1
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<baud rate>	<p>0 = autobauding (automatic selection of the speed; this setting is possible in case of 3.1 kHz modem and non-transparent service)</p> <p>1= 300 bps (V.21)</p> <p>2 = 1200 bps (V.22)</p> <p>3 = 1200/75 bps (V.23)</p> <p>4 = 2400 bps (V.22bis)</p> <p>5 = 2400 bps (V.26ter)</p> <p>6 = 4800 bps (V.32) 9600 bps (V.32)</p> <p>12 = 9600 bps (V.34)</p> <p>14 = 14400 bps (V.32) 300 bps (V.110)</p> <p>66 = 1200 bps (V.110)</p> <p>68 = 2400 bps (V.110 or X.31 flag stuffing)</p> <p>70 = 4800 bps (V.110 or X.31 flag stuffing)</p> <p>71 = 9600 bps (V.110 or X.31 flag stuffing)</p> <p>75 = 14400 bps (V.110 or X.31 flag stuffing)</p>

AT+CBST	Select Bearer Service Type
<name>	0 = data circuit asynchronous (UDI or 3.1 kHz modem) 1 = data circuit synchronous (UDI or 3.1 kHz modem)
<ce>	0 = transparent 1 = non-transparent 2 = both, transparent preferred 3 = both, non-transparent preferred
Notes	N/A
Example	<p>AT+CBST=7,0,1</p> 



# AT%CGREG GPRS Extended Registration State



AT%CGREG	GPRS Extended Registration State
Command Function	This command reports extended information about GPRS registration state. %CGREG behaves exactly as +CGREG does. In addition %CGREG supports three states +CGREG does not support.
Syntax Query	AT%CGREG=?
Syntax	%CGREG: (0,3) OK
Write Syntax	AT%CGREG=<mode>
Write Response	OK
Read Syntax	AT%CGREG?
Read Response	%CGREG: <n>,<stat>[,<lac>,<ci>,<act>] OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<mode>	enable or disable extended GPRS registration state reporting 0 = do not report registration state 1 = do report registration state 2 = enable network registration and location information unsolicited result code +CGREG: <stat>[,<lac>,<ci>] 3 = enable network registration, location information, and activated/deactivated PDP context unsolicited result code +CGREG: <stat>[,<lac>,<ci>,<act>].
<state>	0 = not registered 1 = registered to home network 2 = not yet registered, but searching for network to register to 3 = registration denied

AT%CGREG	GPRS Extended Registration State
	4 = unknown state 5 = registered to foreign network (roaming) 6 = limited service (cell might be overloaded) 7 = GSM call active 8 = no cell available 9 = next attempt to update MS
<lac>	string type; two-byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)
<ci>	string type; two-byte cell ID in hexadecimal format
<act>	0 = deactivated 1 = activated
Notes	N/A

# AT+CLCK Facility Lock

AT+CLCK	Facility Lock
Command Function	This command is used to lock, unlock or interrogate a ME or a network facility <fac>. When querying the status of a network service (<mode>=2) the response line for a “not active” case (<status>=0) should be returned only if service is not active for any <class>. It should be possible to abort the command when network facilities are set or interrogated.
Syntax Query	AT+CLCK=?
Syntax	+CLCK: ("SC","AO","OI","OX","AI","IR","AB","AG","AC","FD","PS","PN","PU","PP","PC","PF","FC","FM","MU","MM","AL") OK
Write Syntax	AT+CLCK=<fac>, <mode> [, <passwd> [, <class>]]
Write Response	If <mode><> 2 and command is successful then OK If <mode>=2 and command is successful then +CLCK:<status>[, <class1>[<CR><LF>+CLCK: <status>, class2...]] OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<fac>	“SC” = (SIM PIN 1) “AO” = (Barr All Outgoing Calls) “OI” = (Barr Outgoing International Calls) “OX” = (Barr Outgoing International Calls except Home Country) “AI” = (Barr All Incoming Calls) “IR” = (Barr Incoming Calls when Roaming outside the Home Country) “AB” = (All Barring Services) “AG” = (All Outgoing Barring)

AT+CLCK	Facility Lock
	<p>"AC" = (All incoming Barring)</p> <p>"FD" = (SIM Fixed Dialing Feature)</p> <p>"PC" = (Corporate Personalization, allows personalization to custom corporate group settings)</p> <p>"PP" = (Provider Personalization, allows for personalization to custom service provider defined groups)</p> <p>"PS" = PH-SIM (lock PHone to SIM card) (ME asks password when other than current SIM card inserted; ME may remember certain amount of previously used cards thus not requiring password when they are inserted)</p> <p>"PN" = Network Personalisation (refer GSM 02.22 [33])</p> <p>"PU" = network sUbset Personalisation (refer GSM 02.22 [33])</p> <p>"PF" = lock Phone to the very First inserted SIM card (also referred in the present document as PH-FSIM) (ME asks password when other than the first SIM card is inserted)</p> <p>"FC" = Fail count</p> <p>"FM" = Fail count reset</p> <p>"MU" = Master unlock</p> <p>"MM" = Master unlock menu</p> <p>"AL" = alternating Line service (PIN2)</p>
<mode>	<p>0 = Unlock</p> <p>1 = Lock</p> <p>2 = Query Status</p>
<passwd>	<p>"password"</p>
<class>	<p>1 = voice</p> <p>2 = data</p> <p>4 = fax (fax not supported)</p> <p>7 = all classes (default)</p> <p>8 = short message service</p>

AT+CLCK	Facility Lock
<status>	0 = Off 1 = On
Notes	Quotation marks are optional when entering <passwd>.
Example:	<p>To set Network Personalization on first SIM inserted</p> <pre>AT+CLCK="PF",1,"password","PN"</pre>  <p>       Password        Lock        Lock module to very first SIM        inserted     </p> <p>To enable SIM PIN</p> <pre>AT+CLCK="SC",1,"xxxx"</pre>  <p>       PIN        Enable        SIM PIN     </p>

# AT+CLIP Calling Line Identification Presentation

AT+CLIP	Calling Line Identification Presentation
Command Function	This command refers to the GSM supplementary service CLIP (Calling Line Identification Presentation) that enables a called subscriber to get the Calling Line Identity (CLI) of the calling party when receiving a mobile terminated call. The write command enables or disables the presentation of the CLI at the TE. It has no effect on the execution of the supplementary service CLIP in the network.
Syntax Query	AT+CLIP=?
Syntax	+CLIP: (0,1) OK
Write Syntax	AT+CLIP=<n>
Write Response	+CLIP: <n> or OK or +CME ERROR: <err>
Read Syntax	AT+CLIP?
Read Response	+CLIP: <n>, <m> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Unsolicited Result Code	When CLIP is enabled at the TE (and is permitted by the calling subscriber), an unsolicited result code is returned after every RING (or +CRING: <type>) at a mobile terminating call
Voice call response format:	+CLIP: <number>, <type>,,,,<CLI validity> Data/FAX call response format: +CLIP: <number>, <type>
Parameter Values	
<n>	0 = suppress unsolicited results codes

AT+CLIP	Calling Line Identification Presentation
	1 = display unsolicited result codes
<m>	0 = CLIP not enabled 1 = CLIP enabled 2 = Unknown
<number>	string type phone number of calling address in format specified by <type>
<type>	type of address octet in integer format: 145 when dialing string includes international access code character "+", otherwise 129
<CLI validity>	0 = CLI valid 1 = CLI has been withheld by the originator 3 = CLI is not available due to inter-working problems or limitations of originating network. <number> shall be an empty string ("") and <type> value will not be significant.
Notes	N/A

# AT+CNUM Subscriber Number

AT+CNUM	Subscriber Number
Command Function	This command is used to obtain the MSISDNs related to the subscriber.
Syntax Query	AT+CNUM=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CNUM
Execute Response	+CNUM: "Line1", "xxx xxx xxxx", 145 OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	



# AT+COLP Connected Line Identification


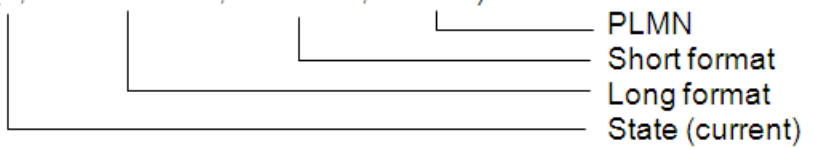
AT+COLP	Connected Line Identification Presentation
Command Function	This command enables a calling subscriber to get the Connected Line Identity (COL) of the called party after setting up a mobile originated call. The command enables or disables the presentation of the COL at the TE. It has no effect on the execution of the supplementary service COLR in the network.
Syntax Query	AT+COLP=?
Syntax	+COLP: (0,1) OK
Write Syntax	AT+COLP= [<n>]
Write Response	OK
Read Syntax	AT+COLP?
Read Response	+COLP: <n>,<m> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<n>	(parameter sets/shows the result code presentation status in the TA) 0 = disable 1 = enable
<m>	(parameter shows the subscriber COLP) 0 = COLP not enabled 1 = COLP enabled 2 = Unknown (e.g. no network, etc.)
Notes	N/A

# AT+COPN Read Operator Names

AT+COPN	Read Operator Names
Command Function	Execute command returns the list of operator names from the ME.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+COPN
Execute Response	+COPN: <numeric1>,<alpha1>[<CR><LF>+COPN: <numeric2>,<alpha2>[...]] OK
Unsolicited Response	N/A
Parameter Values	
<numericn>	string type; operator in numeric format (see +COPS)
<alphan>	string type; operator in long alphanumeric format (see +COPS)
Notes	N/A

# AT+COPS Operator Selection

AT+COPS	Operator Selection
Command Function	<p>Write command forces an attempt to select and register the GSM network operator. &lt;mode&gt; is used to select whether the selection is done automatically by the ME or is forced by this command to operator &lt;oper&gt; (it shall be given in format &lt;format&gt;). If the selected operator is not available, no other operator shall be selected (except &lt;mode&gt; = 4). The selected operator name format shall apply to further read commands (+COPS?) also. &lt;mode&gt;=2 forces an attempt to deregister from the network. The selected mode affects to all further registration (e.g. after &lt;mode&gt;=2, ME shall be unregistered until &lt;mode&gt;=0 or 1 is selected).</p> <p>Read command returns the current mode and the currently selected operator. If no operator is selected, &lt;format&gt; and &lt;oper&gt; are omitted.</p> <p>Test command returns a list of quadruplets, each representing an operator present in the network. Quadruplet consists of an integer indicating the availability of the operator &lt;stat&gt;, long and short alphanumeric format of the name of the operator, and numeric format representation of the operator. Any of the formats may be unavailable and will then be an empty field (,,). The list of operators comes in the following order: Home network, networks referenced in SIM, and other networks.</p>
Syntax Query	AT+COPS=?
Syntax	<p>+COPS: (2, “ “, “ “, “31022”), (3, “ “, “ “, “310380”)</p> <p>OK</p>
Write Syntax	AT+COPS=<mode>
Write Response	<p>[, &lt;format&gt; [, oper&gt;]]</p> <p>OK or +CME ERROR: &lt;err&gt;</p>
Read Syntax	AT+COPS?
Read Response	<p>+COPS: 0</p> <p>OK</p>
Execute Syntax	N/A
Execute Response	N/A

AT+COPS	Operator Selection
Unsolicited Response	N/A
Parameter Values	
<mode>	0 = automatic (<oper> field is ignored) 1 = manual (<oper> field shall be present) 2 = deregister from network 3 = set only <format> (for read command +COPS?), do not attempt registration/deregistration (<oper> field is ignored); this value is not applicable in read command response 4 = manual/automatic (<oper> field shall be present); if manual selection fails, automatic mode (<mode>=0) is entered
<format>	0 = long format alphanumeric <oper> 1 = short format alphanumeric <oper> 2 = numeric <oper>; GSM Location Area Identification Number
<oper>	operator in format as in per <format>
<stat>	0 = Unknown 1 = Available 2 = Current 3 = Forbidden
Notes	
Example	<p>To manually register the modem on a known PLMN:</p> <pre>AT+COPS=1,2,"xxxxx"</pre>  <p>To read operator information:</p> <pre>AT+COPS=? +COPS: (2,"Voicestream","Vstream","31022")</pre> 

# AT+CPIN Enter PIN

AT+CPIN	Enter PIN
Command Function	<p>Set command sends to the ME a password that is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.).</p> <p>If no PIN request is pending, no action is taken towards ME and an error message, +CME ERROR, is returned to TE.</p> <p>If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, &lt;newpin&gt;, is issued to replace the old pin in the SIM.</p>
Syntax Query	AT+CPIN=?
Syntax	OK
Write Syntax	AT+CPIN=<"pin">,<"newpin">]
Write Response	
Read Syntax	AT+CPIN?
Read Response	<p>+CPIN: &lt;code&gt;</p> <p>OK</p> <p>or</p> <p>+CME ERROR: &lt;err&gt;</p>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<code>	<p>READY = ME is not pending for any password</p> <p>SIM PIN = ME is waiting SIM PIN to be given</p> <p>SIM PUK = ME is waiting SIM PUK to be given</p> <p>PH-SIM PIN = ME is waiting phone-to-SIM card password to be given</p> <p>PH-FSIM PIN = ME is waiting phone-to-very first SIM card password to be given</p> <p>PH-FSIM PUK = ME is waiting phone-to-very first SIM card unblocking password to be given</p> <p>SIM PIN2 = ME is waiting SIM PIN2 to be given (this &lt;code&gt; is recommended to be returned only when the last executed command resulted in PIN2 authentication failure (i.e. +CME</p>

AT+CPIN	Enter PIN
	<p>ERROR: 17); if PIN2 is not entered right after the failure, it is recommended that ME does not block its operation)</p> <p>SIM PUK2 = ME is waiting SIM PUK2 to be given (this &lt;code&gt; is recommended to be returned only when the last executed command resulted in PUK2 authentication failure (i.e. +CME ERROR: 18); if PUK2 and new PIN2 are not entered right after the failure, it is recommended that ME does not block its operation)</p> <p>PH-NET PIN = ME is waiting network personalization password to be given</p> <p>PH-NET PUK = ME is waiting network personalization unblocking password to be given</p> <p>PH-NETSUB PIN = ME is waiting network subset personalization password to be given</p> <p>PH-NETSUB PUK = ME is waiting network subset personalization unblocking password to be given</p> <p>PH-SP PIN = ME is waiting service provider personalization password to be given</p> <p>PH-SP PUK = ME is waiting service provider personalization unblocking password to be given</p> <p>PH-CORP PIN = ME is waiting corporate personalization password to be given</p> <p>PH-CORP PUK = ME is waiting corporatepersonalization</p>
<b>Note</b>	<p>Commands which interact with ME that are accepted when ME is pending SIM PIN, SIM PUK, or PH-SIM are: +CGMI, +CGMM, +CGMR, +CGSN, D112; (emergency call), +CFUN, +CPIN, After power on the modem needs 20-25 seconds to initialize and completely read the SIM.</p> <p>* If AT\$AREG=1, and PIN is enabled, the modem will not complete the auto registration process until after the PIN has been entered (AT+CPIN).</p> <p>Quotation marks are optional when entering &lt;pin&gt; or &lt;newpin&gt;.</p>

# AT+CPLS Selection Of Preferred PLMN List

AT+CPLS	Selection of Preferred PLMN List
Command Function	This command is used for selecting/reading the preferred PLMN list type.
Syntax Query	+CPLS=?
Response	+CPLS: (list of supported <list>s) +CME ERROR: <err>
Write Syntax	+CPLS=<list>
Response	+CME ERROR: <err>
Read Syntax	+CPLS?
Response	+CPLS: <list> +CME ERROR: <err>
Execute Syntax	N/A
Response	N/A
Parameter Values	
<list>	<p>0 = User controlled PLMN selector with Access Technology <math>EF_{PLMNwAcT}</math>, if not found in the SIM/UICC then PLMN preferred list <math>EF_{PLMNsel}</math> (this file is only available in SIM card or GSM application selected in UICC)</p> <p>1 = Operator controlled PLMN selector with Access Technology <math>EFO_{PLMNwAcT}</math></p> <p>2 = HPLMN selector with Access Technology <math>EFH_{PLMNwAcT}</math></p>
Notes	
Examples	

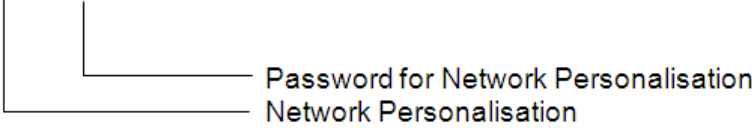
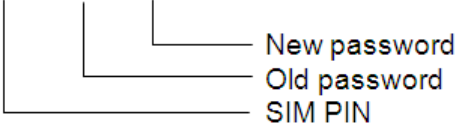
# AT+CPOL Preferred Operator List

AT+CPOL	Preferred Operator List
Command Function	This command is used to list and edit the SIM preferred list of networks.
Syntax Query	AT+CPOL=?
Syntax	+CPOL: (1-n), (0-2) OK
Write Syntax	AT+CPOL=[<index>][, <format>[, <oper>]]
Write Response	OK
Read Syntax	AT+CPOL?
Read Response	+CPOL: <index1>,<format>,<oper1>... <index10>,<format>,<oper10> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<indexn>	integer type; the order number of operator in the SIM preferred operator list
<format>	0 = long format alphanumeric <oper> 1 = short format alphanumeric <oper> 2 = numeric <oper>
<opern>	string type; <format> indicates if the format is alphanumeric or numeric (see +COPS)
Notes	This command is used to edit the SIM preferred list of networks. Execute command writes an entry in the SIM list of preferred operators (EFPLMNsel). If <index> is given but <oper> is left out, entry is deleted. If <oper> is given but <index> is left out, <oper> is put in the next free location. If only <format> is given, the format of the <oper> in the read command is changed.



# AT+CPWD Change Password

AT+CPWD	Change Password
Command Function	This command is used to set a new password for the facility lock function defined by command Facility Lock +CLCK.
Syntax Query	AT+CPWD=?
Syntax	+CPWD: ("SC","AD","OI","OX","AI","IR","AB","AG","AC","P2","PC","PP","PS","PN","PU","PF")  OK
Write Syntax	AT+CPWD = <fac>,[<oldpwd>],<newpwd>
Write Response	OK or +CME ERROR: <err>
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<fac>	"SC" - (SIM PIN 1) "AO" - (Barr All Outgoing Calls) "OI" - (Barr Outgoing International Calls) "OX" - (Barr Outgoing International Calls except Home Country) "AI" - (Barr All Incoming Calls) "IR" - (Barr Incoming Calls when Roaming outside the Home Country) "AB" - (All Barring Services) "AG" - (All Outgoing Barring) "AC" - (All incoming Barring) "P2" - (SIM PIN 2) "PC" - (Corporate Personalization, allows personalization to custom corporate group settings)

AT+CPWD	Change Password
	<p>"PP" - (Provider Personalization, allows for personalization to custom service provider defined groups)</p> <p>"PS" - PH-SIM (lock PHone to SIM card) (ME asks password when other than current SIM card inserted; ME may remember certain amount of previously used cards thus not requiring password when they are inserted)</p> <p>"PF" - lock Phone to the very First inserted SIM card (also referred in the present document as PH-FSIM) (ME asks password when other than the first SIM card is inserted)</p> <p>"PN" - Network Personalization (refer GSM 02.22 [33])</p> <p>"PU" - network sUbset Personalization (refer GSM 02.22 [33])</p>
<oldpwd>	Password specified for the facility. If an old password has not yet been set, <oldpwd> is not entered
<newpwd>	"new password"
Notes	<p>In order to change the password, the applicable facility must be enabled. See AT+CLCK.</p> <p>The length of the personalization password ("PC" to "PU") is 8-16 digits.</p> <p>The password can be changed only if the facility is unlocked.</p> <p>Quotation marks are optional when entering &lt;oldpwd&gt; or &lt;newpwd&gt;.</p>
Example:	<p><b>Enter first password for Network Personalization:</b></p> <p>AT+CPWD="PN",,"xxxx"</p>  <p><b>To change SIM PIN:</b></p> <p>AT+CPWD="SC","xxxx","yyyy"</p> 

# AT+CR -Service Reporting Control

AT+CR	Service Reporting Control
Command Function	This command is used to control the display of intermediate result code (+CR <serv>) status.
Syntax Query	AT+CR=?
Syntax	+CR: (0,1) OK
Write Syntax	AT+CR=<mode>
Write Response	OK
Read Syntax	AT+CR?
Read Response	+CR: 0 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	+CR: <serv>
Parameter Values	
<mode>	0 = disable 1 = enable
<serv>	ASYNCR = asynchronous transparent SYNCR = synchronous transparent REL ASYNCR = asynchronous non- transparent REL SYNCR = synchronous non- transparent GPRS = GPRS data service
NOTES	If enabled, the intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. CONNECT) is transmitted.

# AT+CREG Network Registration Info

AT+CREG	Network Registration Info
Command Function	Write command controls the presentation of an unsolicited result code +CREG: <stat> .  Read command returns the status of result code, which shows whether the network has currently indicated the registration of the ME.
Syntax Query	AT+CREG=?
Syntax	+CREG: (0-2) OK
Write Syntax	AT+CREG=[<n>]
Write Response	OK
Read Syntax	AT+CREG?
Read Response	+CREG: <n>,<stat>[,<lac>,<ci>] OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<n>	0 = disable network registration unsolicited result code 1 = enable network registration unsolicited result code +CREG: <stat> 2 = enable network registration and location information unsolicited result code +CREG: <stat>[,<lac>,<ci>]
<stat>	0 = not registered, ME is not currently searching a new operator to register to 1 = registered, home network 2 = not registered, but ME is currently searching a new operator to register to 3 = registration denied 4 = unknown

AT+CREG	Network Registration Info
	5 = registered, roaming
<lac>	string type; two-byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)
<ci>	string type; two-byte cell ID in hexadecimal format
Notes	N/A

# AT+CRLP Radio Link Protocol Parameters

AT+CRLP	Radio Link Protocol Parameters
Command Function	This command is used to select the radio link protocol parameters.
Syntax Query	AT+CRLP=?
Syntax	+CRLP: (0-61), (0-61), (39-255), (1-255) OK
Write Syntax	AT+CRLP=<iws>,<mws>,<T1>,<N2>
Write Response	OK/ERROR
Read Syntax	AT+CRLP?
Read Response	+CRLP: 61, 61, 48, 6 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<iws>	IWF to MS window size values = 0 to 61 (61 recommended)
<mws>	MS to IWF window size values = 0 to 61 (61 recommended)
<T1>	Acknowledgment timer values = halfrate >380ms (480 recommended) fullrate >600ms (780 recommended)
<N2>	Retransmission attempts values = >0 (6 recommended)
Notes	N/A

# AT+CSQ Signal Quality And Bit Error Rate

AT+CSQ	Signal Quality and Bit Error Rate
Command Function	Execution command returns received signal strength indication <rssi> and channel bit error rate <ber> from the ME.
Syntax Query	AT+CSQ=?
Syntax	+CSQ: 2-31,(99),(99) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT+CSQ
Execute Response	+CSQ: <rssi>,<ber> OK
Unsolicited Response	NA
Parameter Values	
<rssi>	0 = -113 dBm or less 1 = -111 dBm 2-30 = -109... -53 dBm 31 = -51 dBm or greater 99 = not known or not detectable
<ber>	(in percent) 0-7 = as RXQUAL values in the table in GSM 05.08 [20] subclause 8.2.4 99 = not known or not detectable
Notes	N/A

RX Level	Range	
	(min) dBm	(max) dBm
0	< -110	-110
1	-110	-109
2	-109	-108
3	-108	-107
4	-107	-106
5	-106	-105
6	-105	-104
7	-104	-103
8	-103	-102
9	-102	-101
10	-101	-100
11	-100	-99
12	-99	-98
13	-98	-97
14	-97	-96
15	-96	-95
16	-95	-94
17	-94	-93
18	-93	-92
19	-92	-91
20	-91	-90
21	-90	-89
22	-89	-88
23	-88	-87
24	-87	-86
25	-86	-85
26	-85	-84
27	-84	-83
28	-83	-82
29	-82	-81
30	-81	-80
31	-80	-79
32	-79	-78
33	-78	-77
34	-77	-76
35	-76	-75
36	-75	-74



37	-74	-73
38	-73	-72
39	-72	-71
40	-71	-70
41	-70	-69
42	-69	-68
43	-68	-67
44	-67	-66
45	-66	-65
46	-65	-64
47	-64	-63
48	-63	-62
49	-62	-61
50	-61	-60
51	-60	-59
52	-59	-58
53	-58	-57
54	-57	-56
55	-56	-55
56	-55	-54
57	-54	-53
58	-53	-52
59	-52	-51
60	-51	-50
61	-50	-49
62	-49	-48
63	-48	> -48 dBm

Table 15-1 RSSI values

# Event Commands

---

# AT\$ETSAV# Event Timer Save Configuration

AT\$ETSAV#	Event Timer Save Configuration
Command Function	<p>These commands allow the user to set/query a flag that is used to determine whether the event timer value will be persistent through a reset. If the flag is set for the timer, the timer count will be saved roughly once a minute and the saved value will be used as the starting value for the timer following a reset. This is intended to support long-range timers (for example, 3 hours) where resolution of +/-1 minute would be acceptable.</p> <p>If the flag is clear, the timer always starts at zero following an reset.</p> <p>The # sign represents timers 1 through 10 (i.e. ETSAV1).</p>
Syntax Query	AT\$ETSAV#=?
Syntax	\$ETSAV#:(0-1) OK
Write Syntax	AT\$ETSAV#=<flag>
Write Response	OK
Read Syntax	AT\$ETSAV#?
Read Response	\$ETSAV#: <flag>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<flag>	1 =save this event timer value roughly once a minute to flash 0 = restart this event timer at zero following reset (default)
Notes	AT&W must be issued after flag is set to ensure flag retains its status through a reset.
Example	N/A

# AT\$EVCID User Defined Incoming Call Number Event

AT\$EVCID	User defined incoming call number event
Command Function	This command allows the user to define up to 5 separate incoming call number user input events
Command Functional	Novatel Wireless Specific
Group	
Syntax Query	AT\$EVCID=?
Syntax	\$EVCID: (1-5),(0-2),"<ph_num>" OK
Write Syntax	AT\$EVCID=<entry>,<mode>[,<"number">]
Write Response	OK
Read Syntax	AT\$EVCID?
Read Response	\$EVCID: <entry>,<mode>,<"number">
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<entry>	1-5 = Selects which CID entry to modify
<mode>	0 = Disable event generation for incoming call number 1 = Enable event generation for incoming call number and suppress ring indication and respond to network with busy signal. 2 = Enable event generation for incoming call number and do not suppress ring indication.



# AT\$EVDEL Delete Event

AT\$EVDEL	Delete Event
Command Function	This command allows the user to delete items from the user generated event table. Entering only the group number will delete the whole group.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$EVDEL=<group><letter ID>
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	
<group>	event list group number
<letter ID>	letter indicating which element of the group (optional)
Notes	
Example:	<p>AT\$EVDEL=1 Will delete all entries event group 1</p> <p>AT\$EVDEL=1b Will delete only the second entry in event group 1</p>

# AT\$EVDELA Delete Event (All)

AT\$EVDELA	Delete Event (All)
Command Function	This command allows the user to delete all events from the event table.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$EVDELA
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	N/A



This command deletes ALL events from the event table including the default events that control the flashing of the status LEDs. If the default events are deleted, they must be manually recreated or use AT&F to restore the factory configuration.

---

# AT\$EVDEL R Delete A Range Of Event Groups

AT\$EVDEL R	Delete a Range of Event Groups
Command Function	This command deletes a range of event groups.
Syntax Query	AT\$EVDEL R=?
Syntax	\$EVDEL R: (0-255),(0-255) OK
Write Syntax	AT\$EVDEL R=<start>,<stop>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<start>	First group index in range to be deleted
<stop>	Last group index in range to be deleted.
Notes	N/A



# AT\$EVENT User Defined Input/Output

AT\$EVENT	User Defined Input/Output																																																						
Command Function	This command allows the user to customize the modem’s input and output capabilities. Any combination of input events can be monitored to trigger any combination of output events.																																																						
Syntax Query	AT\$EVENT=?																																																						
Syntax	\$EVENT: (0-255),(0-3),(0-255),(-2147483647-2147483647),(-2147483647-2147483647),(-2147483647-2147483647)																																																						
Write Syntax	AT\$EVENT=<event group>,<event type>,<event category>,<parm1>,<parm2>,<parm3>																																																						
Write Response	OK																																																						
Read Syntax	AT\$EVENT?																																																						
Read Response	<div>\$EVENT:&lt;evgp&gt;,&lt;evtyp&gt;,&lt;evcat&gt;,&lt;p1&gt;,&lt;p2&gt;,&lt;p3&gt;</div> <table><thead><tr><th>evgp</th><th>evtyp</th><th>evcat</th><th>p1</th><th>p2</th><th>p3</th></tr></thead><tbody><tr><td>1A</td><td>0</td><td>9</td><td>2</td><td>4</td><td></td></tr><tr><td>1B</td><td>3</td><td>37</td><td>1</td><td>0</td><td>0</td></tr><tr><td>2A</td><td>0</td><td>9</td><td>5</td><td>5</td><td></td></tr><tr><td>2B</td><td>3</td><td>21</td><td>0</td><td>0</td><td>0</td></tr><tr><td>3A</td><td>0</td><td>9</td><td>0</td><td>0</td><td></td></tr><tr><td>3B</td><td>3</td><td>13</td><td>0</td><td>0</td><td>0</td></tr><tr><td>4A</td><td>0</td><td>9</td><td>1</td><td>1</td><td></td></tr><tr><td>4B</td><td>3</td><td>21</td><td>0</td><td>0</td><td>0</td></tr></tbody></table>	evgp	evtyp	evcat	p1	p2	p3	1A	0	9	2	4		1B	3	37	1	0	0	2A	0	9	5	5		2B	3	21	0	0	0	3A	0	9	0	0		3B	3	13	0	0	0	4A	0	9	1	1		4B	3	21	0	0	0
evgp	evtyp	evcat	p1	p2	p3																																																		
1A	0	9	2	4																																																			
1B	3	37	1	0	0																																																		
2A	0	9	5	5																																																			
2B	3	21	0	0	0																																																		
3A	0	9	0	0																																																			
3B	3	13	0	0	0																																																		
4A	0	9	1	1																																																			
4B	3	21	0	0	0																																																		
Execute Syntax	N/A																																																						
Execute Response	N/A																																																						
Unsolicited Response	N/A																																																						
Parameter Values																																																							
<event group>	<div>This parameter defines the group number of a group of events and the order they are executed. Events are grouped together to control execution sequence. A group number has to have at least one input event and one output event. Multiple input events within a group number would be treated as a logical AND condition. Multiple output events within a group number would be executed individually in a sequential manner.</div> <div>Valid values for group number are: 0 thru 255.</div> <div>For additional details see the Event Tables section of this manual.</div>																																																						

AT\$EVENT	User Defined Input/Output
<event type>	<p>This parameter defines the type of event: Input or Output. An Input event can be defined as: Transition, Occurrence, or Input. The output event is executed when input event conditions are met.</p> <p>For additional details see the Event Tables section of this manual.</p>
<event category> , <parm1>, <parm2>, <parm3>	<p>These parameters define the actual Input or Output Event number and their valid range for &lt;parm1&gt; and &lt;parm2&gt;.</p> <p>The &lt;parm3&gt; parameter is only used for output events 40, 41, 42 and 52; it is ignored if entered for an input event or any other output events.</p> <p>For additional details see the Event Tables section of this manual.</p>
<b>Notes</b>	<p>A maximum of 600 events (input and output) are supported.</p> <p>User variable values are automatically saved to flash and explicit user intervention to save the values is not required. AT&amp;W does not save user variables to flash. At the end of each event engine cycle, if any user variable has been changed the user variable values are automatically saved to flash at that time (so you can make multiple changes to user variables inside event groups without worrying about writing to flash too often). Changing a user variable via \$EVTEST also causes the user variable values to be saved to flash.</p>

# AT\$EVGQRY Event Group Query

AT\$EVGQRY	Event Group Query
Command Function	Allows user to query the contents of a single event group (same output format as \$EVENT?, but limited to a single event group).
Syntax Query	AT\$EVGQRY=?
Syntax	AT\$EVGQRY: (0-255) OK
Write Syntax	AT\$EVGQRY=<event group>
Write Response	<div> \$EVGQRY: <div> <div>evgp</div> <div>evtyp</div> <div>evcat</div> <div>p1</div> <div>p2</div> <div>p3</div> </div> <div> <div>1A</div> <div>0</div> <div>27</div> <div>1</div> <div>1</div> <div>0</div> </div> <div> <div>1B</div> <div>3</div> <div>22</div> <div>0</div> <div>0</div> <div>0</div> </div> </div> OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<event group>	<p>This parameter defines the group number of a group of events and the order they are executed. Events are grouped together to control execution sequence. A group number has to have at least one input event and one output event. Multiple input events within a group number would be treated as a logical AND condition. Multiple output events within a group number would be executed individually in a sequential manner.</p> <p>Valid values for group number are: 0 thru 255.</p>
Notes	

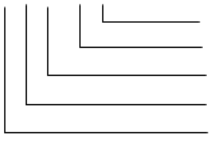
# AT\$EVNTRY Event Count Query

AT\$EVNTRY	Event Count Query
Command Function	This command queries how many events have been used and how many are left.
Syntax Query	AT\$EVNTRY=?
Syntax	ERROR
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$EVNTRY?
Read Response	\$EVNTRY: <used>,<left>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<used>	Number of events that have been used
<left>	Number of events available for new entries
Notes	

# AT\$EVTEST Generate Test Input Event

AT\$EVTEST	Generate Test Input Event
Command Function	This command allows the user to generate any input event. This is useful for testing the user event table.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$EVTEST=<event>,<state>
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	
<event>	input event number
<state>	input event test state
Notes	User variable values are automatically saved to flash and explicit user intervention to save the values is not required. AT&W does not save user variables to flash. At the end of each event engine cycle, if any user variable has been changed the user variable values are automatically saved to flash at that time (so you can make multiple changes to user variables inside event groups without worrying about writing to flash too often). Changing a user variable via \$EVTEST also causes the user variable values to be saved to flash.

# AT\$EVTIM# User Defined Input Event Timers

AT\$EVTIM#	User Defined Input Event Timers
Command Function	This command allows the user to define up to 10 separate periodic input events in 1 second increments. The # sign represents timers 1 through 10 (i.e. AT\$EVTIM1).
Syntax Query	AT\$EVTIM#=?
Syntax	\$EVTIM#: (0-604800) OK
Write Syntax	AT\$EVTIM#=<rate>
Write Response	OK
Read Syntax	AT\$EVTIM#?
Read Response	\$EVTIM#: <rate>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<rate>	number of seconds between each generated input event.
Notes	
Example	<p>These commands will cause the example in AT\$EVENT to trigger every 60 seconds.</p> <p>AT\$EVTIM1=60</p> <p>AT\$EVENT=1,1,12,1,1</p>  <p>Ending range of 1 (high) Starting range of 1 (high) Activate event timer 1 Input event Eventgroup 1</p>

# AT\$EVTIMQRY Event Counter

AT\$EVTIMQRY	Event Counter
Command Function	This command shows the current count for the event counter of the timer specified indicated by the argument.
Syntax Query	AT\$EVTIMQRY=?
Syntax	\$EVTIMQRY: (1-10) OK
Write Syntax	AT\$EVTIMQRY=<timer_index>
Write Response	\$EVTIMQRY:<timer_index>=<count> OK
Read Syntax	AT\$EVTIMQRY?
Read Response	ERROR
Execute Syntax	AT\$EVTIMQRY=10
Execute Response	\$EVTIMQRY: 10=0 OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	AT\$EVTIMQRY=x will respond with ERROR if X timer has not been set (0).

# AT\$EVTOFF Event Engine Disable

AT\$EVTOFF	Event Engine Disable
Command Function	The \$EVTOFF command gives the user the ability to disable the event engine. For example, this would be a good command to run prior to a software upgrade.
Syntax Query	AT\$EVTOFF=?
Syntax	\$EVTOFF:(0-1) OK
Write Syntax	AT\$EVTOFF=<state>
Write Response	OK
Read Syntax	AT\$EVTOFF?
Read Response	\$EVTOFF: <state>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<state>	0 = event engine enabled (default) 1 = event engine disabled
Notes	AT\$EVTOFF state is saved with AT&W
Example	N/A



# AT\$EVTQRY Query The State Or Value Of The Specified Input Event

AT\$EVTQRY	Query the State or Value of the Specified Input Event
Command Function	This command allows the user to query the state or value of the input event number
Syntax Query	AT\$EVTQRY=?
Syntax	\$EVTQRY: (0 - <max input event>) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$EVTQRY=<input event>
Execute Response	\$EVTQRY: <input event> = <state> (blnit=<updateFlag>)
Unsolicited Response	N/A
Parameter Values	
<max input event>	Maximum input event # supported by the current firmware build (see \$EVENT for the current maximum input event value).
<input event>	Range: 0 to <max input event> Selects which input event to query
Notes	
Example:	AT\$EVTQRY=29 /* query input event 29 (Invalid GPS) \$EVTQRY: 29=1436 /* 1436 seconds of consecutive invalid GPS data OK

# AT\$STOATEV Store AT Command Events

AT\$STOATEV	Store AT Command Events
Command Function	This commands allows the user to store AT command output events. The AT command is executed upon the triggering of the associated input event.
Syntax Query	AT\$STOATEV=?
Syntax	\$\$STOATEV: (1-35),<AT commands> OK
Write Syntax	AT\$STOATEV = <1-35>, < AT command >
Write Response	OK
Read Syntax	AT\$ STOATEV?
Read Response	\$STOATEV: AT Event# AT Ccmds 1 2 ... ... 35 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	

<b>AT\$STOATEV</b>	<b>Store AT Command Events</b>
<b>&lt;1-35 &gt;</b>	AT event index.
<b>&lt;AT command&gt;</b>	<p>AT command associated with the AT event index. The AT command is not checked for validity.</p> <p>This parameter is limited to a maximum of 141 characters.</p>
<b>Notes</b>	<p>This command is used in conjunction with the Dynamic Input Output event (AT\$EVENT). The output event associated with this command is event 44. When output event 44 is defined in the event table, Parm1 defines which index to refer to.</p> <p>The AT command associated with the index is executed. The use of Dynamic Event Scripting using AT\$EVENT or AT\$EVDEL as a stored AT Command Event can lead to unpredictable operation and is not recommended. When storing command to dial a voice call, a “v” replaces the “;” at the end of the dial string..(i.e., atd17195551212v)</p>

# AT\$USRVAL User Value

AT\$USRVAL	User Value
Command Function	Allows the user to store a value in flash memory which can later be retrieved.
Syntax Query	AT\$USRVAL=?
Syntax	\$USRVAL: (0-FFFFFFFF) OK
Write Syntax	AT\$USRVAL=<hex value>
Write Response	OK
Read Syntax	AT\$USRVAL?
Read Response	\$USRVAL:(hex value) OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<hexval>	(0-FFFFFFFF)
Notes:	N/A

# Miscellaneous Commands

---

# AT\$ICCID Integrated Circuit Card ID

AT\$ICCID	Integrated Circuit Card ID
Command Function	This command allows the user to retrieve the Integrated Circuit Card Identification (ICCID) from the SIM.
Syntax Query	AT\$ICCID=?
Syntax	OK
Write Syntax	N/A
Write Response	OK
Read Syntax	AT\$ICCID?
Read Response	\$ICCID: <iccid> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	N/A
Notes:	A SIM must be inserted into the module and initialized in order to read the ICCID of the SIM

# AT\$IGNDBNC Debounce Ignition Hardware Line For The Specified Amount Of Time

AT\$IGNDBNC	Debounce Ignition Hardware Line for the Specified Amount of Time
Command Function	This command allows a user to set ignition debounce time used for the event engine. The ignition line has to be valid for the specified amount of time before the event: GPIO-8 in the event engine will be triggered.
Syntax Query	AT\$IGNDBNC=?
Syntax	\$IGNDBNC: (0-4), OK
Write Syntax Write Response	AT\$IGNDBNC=<debounceTimeout>
Read Syntax Read Response	AT\$IGNDBNC? \$IGNDBNC: 0 OK
Execute Syntax Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<debounceTimeout>	0 - 4 seconds. This field specifies the debounce timeout value.
Notes	<p>For older hardware, regardless of the AT\$IGNDBNC setting or the AT\$IODBNC=9 setting, if the ignition signal has gone from logic zero to a logic one for longer than 1 second, the unit will be reset 7 seconds later.</p> <p>For newer hardware, the modem reset interval will follow the \$IGNDBNC setting as long as \$IGNDBNC is greater than 0. Regardless of the \$IGNDBNC setting, the modem will not be reset if the ignition on interval is less than 1 second.</p> <p>\$IODBNC is affected by this command. Changes made affect GPIO8 in \$IGNDBNC? Writes made by \$IGNDBNC will be seen by \$IODBNC?</p>

# AT\$MDSTAT Query Modem Status

AT\$MDSTAT	Query Modem Status
Command Function	This command allows the user to display many modem status parameters with a single command.
Syntax Query	AT\$MDSTAT=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$MDSTAT?
Read Response	\$DEVTYPE: 0,9142 \$PKG: 50 OEM_MODEM +CPIN: READY HPLMN: 310,410 +CREG: 1, CB90, 290F %CGREG: 1, CB90, 290F +COPS: 310,410 ARFCN: 198 BAND: 850 +CSQ: 14,0 +CGACT: 1,0 \$NETIP: "000.000.000.000", "000.000.000.000", "000.000.000.000" DREG_NW: 0001 DREG_ME: 0005 DT_CAUSE: CAFF DT_TYPE: 0004 \$LUPREJ: 0,0 \$RAUREJ: 0,0 +CEER: 0,1,1,255,no error \$CGEER: no PDP reject cause TCP ERROR: 0 PAD DISC: 0 API DISC: 5 OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<\$DEVTYPE>	see AT\$DEVTYPE? command



AT\$MDSTAT	Query Modem Status
<\$PKG>	see AT\$PKG command
<+CPIN>	see AT+CPIN? command
<HPLMN>	Country code and Network code from SIM
<+CREG>	see AT+CREG? command
<%CGREG>	see AT%CGREG? command
<+COPS>	see AT+COPS? command (numeric only)
<+CSQ>	see AT+CSQ command
<+CGACT>	see AT+CGACT? command
<\$NETIP>	see AT\$NETIP? command
<DREG_NW>	DREG_NW values (Deregistration - Network) FFFF = not set = no service 1 = limited service
<DREG_ME>	DREG_ME values (Deregistration - ME) 0 = not set 1 = GPRS detach 2 = IMSI detach 3 = Combined detach 4 = SIM removed 5 = Power off 6 = GPRS disabled 7 = Limited service 8 = Soft power off
<DT_CAUSE>	see table in notes section below
<DT_TYPE>	DT_TYPE (Detach type) 1 = GPRS detach 2 = IMSI detach 3 = Combined detach 4 = SIM removed 5 = Power off 6 = GPRS disabled 7 = Limited service 8 = Soft power off
<\$LUPREJ>	see AT\$LUPREG? command
<\$RAUREJ>	see AT\$RAUREG? command
<+CEER>	see AT+CEER command
<TCP ERROR>	TCP ERROR values 0 = no error stored 1 = normal closure 2 = unexpected RST

AT\$MDSTAT	Query Modem Status
	3 = unexpected SYN 4 = received FIN 5 = timeout establishing connection 6 = failure establishing connection 7 = timeout in close 8 = timeout on established connection 9 = RST on established connection 10 = ICMP rec'd: no route to host 11 = ICMP rec'd: connection refused 12 = ICMP rec'd: frag req, DF set 13 = no route found for dest 14 = interface down or other failure 15 = internal stack failure
<PAD DISC>	0 = no reason stored 1 = server timeout 2 = PPP caused 3 = host caused 4 = connection timeout 5 = caused by AT cmd
<API DISC>	0 = no reason stored 4 = connection timeout 5 = caused by AT cmd 6 = bad msg format 7 = connect fail
Notes	DT_CAUSE values (Detach cause) 0402 IMSI unknown in HLR 0403 Illegal MS 0404 IMSI unknown in VLR 0405 IMEI not accepted 0406 Illegal ME 040b PLMN not allowed 040c Location Area not allowed 040d Roaming not allowed in this location area 0411 Network failure 0416 Congestion 0420 Service option not supported 0421 Requested service option not subscribed 0422 Service option temporarily out of order 0426 Call cannot be identified 0430 Retry upon entry into a new cell (mapped 0x0430..0x043f -> 0x0430) 045f Semantically incorrect message 0460 Invalid mandatory information 0461 Message type non-existent or not implemented 0462 Message type not compatible with the protocol state

AT\$MDSTAT	Query Modem Status
	0463 Information element non-existent or not implemented 0464 Conditional IE error 0465 Message not compatible with the protocol state 046f Protocol error, unspecified c400 No error, successful operation (MM) c480 MS is not registered or deregistration started c481 Time-out in MM during establishment c482 Cell does not support call reestablishment c483 Preemptive release, e.g. MO-MT clash in MM c484 Reject, not in idle mode (MMR_PLMN_IND) c488 AUTHENTICATION REJECT received c489 A valid SIM is not present
Notes	c4ff No error cause (MM) 0a02 IMSI unknown in HLR 0a03 Illegal MS 0a06 Illegal ME 0a07 GPRS services not allowed 0a08 GPRS services and non-GPRS services not allowed 0a09 MS identity cannot be derived by the network 0a0a Implicitly detached 0a0b PLMN not allowed 0a0c Location Area not allowed 0a0d Roaming not allowed in this location area 0a0e GPRS services not allowed in this PLMN 0a10 MSC temporarily not reachable 0a11 Network failure 0a16 Congestion 0a30 Retry upon entry into a new cell (- 0x0A3F) 0a5f Semantically incorrect message 0a60 Invalid mandatory information 0a61 Message type non-existent or not implemented 0a62 Message type not compatible with the protocol state 0a63 Information element non-existent or not implemented 0a64 Conditional IE error 0a65 Message not compatible with the protocol state 0a6f Protocol error, unspecified 4a07 GPRS services not allowed (MS MM originated) 4a0a Implicitly detached (MS MM originated) 4a6f Protocol error, unspecified (MS MM originated) 8aff Network send message without cause information element ca00 No error, successful operation (GMM) ca80 attach_attempt counter over or equal 5 ca81 attach_attempt counter under 5 ca88 AUTHENTICATION REJECT received ca89 reserved for GACI ca8a reserved for GACI ca8b reserved for GACI, no service available

AT\$MDSTAT	Query Modem Status
	ca8c reserved for GACI caff No error cause (GMM)

# AT\$OFF Power Off Command

AT\$OFF	Power Off Command
Command Function	This command allows the user to perform a software-controlled shutdown. The modem gracefully deregisters from the network before powering down so it may take a few seconds before current consumption decreases.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$OFF
Execute Response	None, modem powers down
Unsolicited Response	N/A
Parameter Values	None
Notes	

# AT%CSTAT Unsolicited SIM Status

<b>AT%CSTAT</b>	<b>Unsolicited SIM status</b>
<b>Command Function</b>	Enable/disable unsolicited status reports from SIM processes
<b>Syntax Query</b>	AT%CSTAT=?
<b>Syntax</b>	%CSTAT: (0,1)
<b>Write Syntax</b>	AT%CSTAT=<mode>
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT%CSTAT?
<b>Read Response</b>	%CSTAT: <mode> OK
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;mode&gt;</b>	0 = disabled 1 = enabled
<b>Notes</b>	
<b>Example:</b>	<p>AT%CSTAT=1</p> <p>After power on, the following unsolicited results codes will be delivered to the SIM as the processes are have been initialized and are initialized.</p> <p>%CSTAT: EONS, 0 - EONS not ready</p> <p>%CSTAT: PHB, 1 - Phonebook ready</p> <p>%CSTAT: SMS, 1 - SMS Ready</p> <p>%CSTAT: RDY, 1 - All SIM functions ready</p>

# AT%EM Engineering Mode

AT%EM	Engineering Mode
Command Function	This command allows the user to view engineering mode functions including Serving cell and neighboring cell information
Syntax Query	AT%EM=?
Syntax	%EM: (2-3),(1-13) OK
Write Syntax	AT%EM=<mode>,<type>
Write Response	OK
Read Syntax	AT%EM?
Read Response	Error
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
< mode >	2= AT Command 3 =PCO
<type>	See Engineering Mode Document
Notes	Please see the Engineering Mode Manual Technical Note GSM0000TN012 for complete details of this command.

# AT%MEPD MEPD Configuration Data

AT%MEPD	MEPD Configuration Data
Command Function	This command allows the user to read the current values of the MEPD configuration data. This configuration data is used for SIM personalization. The data is entered using a special application to bind the MEPD data to the modem. This AT command can only query the contents of the data, not change it.
Syntax Query	AT%MEPD=?
Syntax	%MEPD: ("MAX","ALE","RFM","RFA","RSM","RSA","TMF","ETF","AIF", "NPL","CPL","PPL")  OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$MEPD=<type>
Execute Response	%MEPD: <data per "type">  OK
Unsolicited Response	N/A



AT%MEPD	MEPD Configuration Data
Parameter Values	
<type>	<ASCII string> specifying MEPD data type “MAX” - Max value of failure counter “ALE” - Current value of failure counter “RFM” - Failure counter RESET fail max value “RFA” - Failure counter RESET fail current value “RSM” - Failure counter RESET success value “RSA” - Failure counter RESET success current value “TMF” - Timer flag “ETF” - ETSI flag “AIF” - AIRTEL flag “NPL” - Network personalization lock “CPL” - Corporate personalization lock “PPL” - Provider personalization lock
Notes:	“NPL” MEPD data replaces AT+CLCKCFG. “CPL” MEPD data replaces AT+CLCKCP. “PPL” MEPD data replaces AT+CLCKSP.

# AT%SIMIND SIM Status Indication

AT%SIMIND	SIM Status Indication
Command Function	Enable/disable reporting of unsolicited SIM status indications for SIM removal and SIM insertion.
Syntax Query	AT%SIMIND=?
Syntax	%SIMIND: (0,1) OK
Write Syntax	AT%SIMIND=<mode>
Write Response	OK
Read Syntax	AT%SIMIND?
Read Response	%SIMIND: <mode> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A

AT%SIMIND	SIM Status Indication
Parameter Values	
<mode>	<p>0 = reporting disabled (default)</p> <p>1 = reporting enabled</p>
Notes	<p>Unsolicited indications use the following format: “%SIMREM: 1” indicates that the SIM has been removed, and “%SIMINS: 1” indicates that the SIM has been inserted.</p> <p>SIM removal and insertion checks can be performed using either software or hardware methods as described under the AT\$SIMDTC AT command.</p> <p>Software SIM detection is dependent on the current setting of the phone/SIM functionality (AT+CFUN). If phone/SIM functionality is disabled (AT+CFUN=0) then software SIM detection is disabled as well (i.e. %SIMREM, %SIMINS URCs are not generated). Software SIM detection is fully functional when AT+CFUN=1.</p> <p>Hardware SIM detection is partially dependent on the current setting of the phone/SIM functionality (AT+CFUN). If phone/SIM functionality is disabled (AT+CFUN=0) then hardware SIM removal detection is disabled as well (i.e. %SIMREM URC is not generated). Hardware SIM insert detection is only dependent on the setting of AT\$SIMDTC.</p> <p>Phone/SIM functionality is performed automatically under the control of the AT\$AREG command. When AT\$AREG=1 or 2 the modem will automatically enable phone/SIM functionality (as well as register). However when AT\$AREG=0 phone/SIM functionality is disabled and the behavior described above regarding SIM detection and URC generation applies.</p> <p>Another feature of SIM insert detection is that the modem will automatically register on the network if AT\$AREG=1 2 or 3.</p>

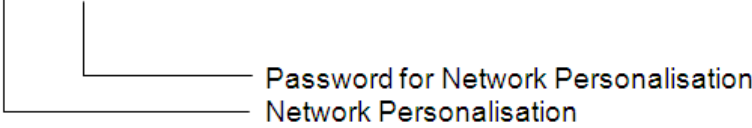
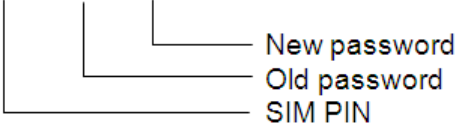
# AT%SLEEP Select Level Of Sleep Mode

AT%SLEEP	Select level of sleep mode
Command Function	This command allows the user to select the level of sleep the modem will enter during periods of inactivity.
Syntax Query	AT%SLEEP=?
Syntax	%SLEEP: (0-4) OK
Write Syntax	AT%SLEEP=<mode>
Write Response	OK
Read Syntax	AT%SLEEP?
Read Response	%SLEEP: <mode> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A

AT%SLEEP	Select level of sleep mode
Parameter Values	
< mode >	<p>0 = no sleep</p> <p>1= Small</p> <p>2 = Big</p> <p>3 = Big + Deep</p> <p>4 = Small+ Big +Deep</p> <p>No Sleep: all sections of the modem will remained powered on and ready for use.</p> <p>Small: All functions are active and perform normally. Some peripherals are in sleepstate.</p> <p>Big: The radio and peripherals are asleep. The UART is awake and able to receivedata on the serial port. The radio will wakeup periodically check for pages form thewireless Network.</p> <p>Deep: only the 32 MHZ clock and a small portion of the DSP are running, all othersections of the module are in a sleep state. The UART is asleep, but will wakeup with the first character received (this character will be lost). The modem willwakeup periodically to check for incoming pages form the wireless carrier.</p>
Notes	<p>If %SLEEP &lt;mode&gt; of 3 or 4 is selected, and the modem has entered Deep sleep, the UART will miss the first character that is sent over the serial port. This first character will wake up the UART and subsequent characters will be accepted by the UART. Default setting is 2</p>

# AT+CPWD Change Password

AT+CPWD	Change Password
Command Function	This command is used to set a new password for the facility lock function defined by command Facility Lock +CLCK.
Syntax Query	AT+CPWD=?
Syntax	+CPWD: ("SC","AD","OI","OX","AI","IR","AB","AG","AC","P2","PC","PP","PS","PN","PU","PF")  OK
Write Syntax	AT+CPWD = <fac>,[<oldpwd>],<newpwd>
Write Response	OK or +CME ERROR: <err>
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<fac>	"SC" - (SIM PIN 1) "AO" - (Barr All Outgoing Calls) "OI" - (Barr Outgoing International Calls) "OX" - (Barr Outgoing International Calls except Home Country) "AI" - (Barr All Incoming Calls) "IR" - (Barr Incoming Calls when Roaming outside the Home Country) "AB" - (All Barring Services) "AG" - (All Outgoing Barring) "AC" - (All incoming Barring) "P2" - (SIM PIN 2) "PC" - (Corporate Personalization, allows personalization to custom corporate group settings)

AT+CPWD	Change Password
	<p>"PP" - (Provider Personalization, allows for personalization to custom service provider defined groups)</p> <p>"PS" - PH-SIM (lock PHone to SIM card) (ME asks password when other than current SIM card inserted; ME may remember certain amount of previously used cards thus not requiring password when they are inserted)</p> <p>"PF" - lock Phone to the very First inserted SIM card (also referred in the present document as PH-FSIM) (ME asks password when other than the first SIM card is inserted)</p> <p>"PN" - Network Personalization (refer GSM 02.22 [33])</p> <p>"PU" - network sUbset Personalization (refer GSM 02.22 [33])</p>
<oldpwd>	Password specified for the facility. If an old password has not yet been set, <oldpwd> is not entered
<newpwd>	"new password"
<b>Notes</b>	<p>In order to change the password, the applicable facility must be enabled. See AT+CLCK.</p> <p>The length of the personalization password ("PC" to "PU") is 8-16 digits.</p> <p>The password can be changed only if the facility is unlocked.</p> <p>Quotation marks are optional when entering &lt;oldpwd&gt; or &lt;newpwd&gt;.</p>
<b>Example:</b>	<p><b>Enter first password for Network Personalization:</b></p> <p>AT+CPWD="PN",,"xxxx"</p>  <p><b>To change SIM PIN:</b></p> <p>AT+CPWD="SC","xxxx","yyyy"</p> 

# Battery Commands

---



The backup battery commands only apply to MT 3000 Series devices that contain a backup battery. Do not attempt to use these commands on devices without backup batteries.

## AT\$OBDBAT Enable/Disable Backup Battery

AT\$OBDBAT	Enable/Disable Backup Battery
Command Function	This command is used to enable/disable the internal backup battery. If this is disabled the unit will power off as soon as main power is removed.
Syntax Query	AT\$OBDBAT=?
Syntax	\$OBDBAT: (0-1) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$OBDBAT?
Read Response	\$OBDBAT: <status>,<voltage> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<status>	0 = Internal Battery is Disabled 1 = Internal Battery is Enabled (default value)

<b>AT\$OBDBAT</b>	<b>Enable/Disable Backup Battery</b>
<b>&lt;voltage&gt;</b>	Internal battery voltage, displayed in millivolts.
<b>Notes</b>	<p>Products that do not have a battery installed will return the response of ERROR when AT\$OBDBAT is issued.</p> <p>The displayed voltage reading is only meaningful when running on battery power. When external power is available, the displayed voltage will reflect the charging voltage.</p> <p>The device will shut down if the internal backup battery voltage drops to 3.00 V</p>
<b>Example</b>	<p>AT\$OBDBAT?</p> <p>\$OBDBAT: 1,4753</p> <p>OK</p> <p>This example shows the read operation and response for a device where the internal backup battery is enabled and the voltage reading is 4.753 V.</p>

# AT\$OBDBBT Backup Battery Timer

AT\$OBDBBT	Backup Battery Timer
Command Function	This command is used to configure the length of time that the unit will run on internal battery power after main power is removed.
Syntax Query	AT\$OBDBBT=?
Syntax	\$OBDBBT: (30-6000)
Write Syntax	AT\$OBDBBT=<time>
Write Response	OK
Read Syntax	AT\$OBDBBT?
Read Response	\$OBDBBT: <time>,<time_remaining>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<time>	Time (in seconds) to remain running after main power has been removed Range: 30-6000 Default: 300
<time_remaining>	Time (in seconds) remaining before shutting down. This value is calculated by subtracting the elapsed time since the loss of main power from the run time specified by this command.
Notes	
Example	

# AT\$OBDBQS Backup Battery Quick Shutdown

AT\$OBDBQS	Backup Battery Quick Shutdown
Command Function	This command is designed to be used before shipping or storing the unit to preserve the power in the internal battery.
Syntax Query	AT\$OBDBQS=?
Syntax	\$OBDBQS: (0-1) OK
Write Syntax	AT\$OBDBQS=<status>
Write Response	OK
Read Syntax	AT\$OBDBQS?
Read Response	\$OBDBQS: <status> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<status>	0 = Backup battery quick shutdown is disabled (default) 1 = Backup battery quick shutdown is enabled
Notes	
Example	

# OBD Commands

---

The backup battery commands only apply to MT 3000 Series devices that contain a backup battery. Do not attempt to use these commands on devices without backup batteries.

## AT\$OBDACL Acceleration Thresholds

AT\$OBDACL	OBD 2 Acceleration Thresholds
Command Function	This command is used to set the three acceleration thresholds.
Syntax Query	AT\$OBDACL=?
Syntax	\$OBDACL: (1-3),(0-4000),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDACL=<ALERT>,<THRHL D>,<SET TIME>,<CLR TIME>
Write Response	OK
Read Syntax	AT\$OBDACL?
Read Response	\$OBDACL: <THR LD>,<SET TIME>,<CLR TIME><THR LD>,<SET TIME>,<CLR TIME><THR LD>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ALERT>	Acceleration alert number
<THRHL D>	Acceleration in milli Gs. 0 is the default value and is used to disable that threshold.
<SET TIME>	Time above threshold to set alert in seconds
<CLR TIME>	Time below threshold to clear alert in seconds
Notes	
Examples	

# AT\$OBDADN Set Down Accelerometer Threshold

AT\$OBDADN	OBD2 Set Down Accelerometer threshold
Command Function	This command is used to set the 'down' accelerometer threshold.
Syntax Query	AT\$OBDADN=?
Syntax	\$OBDADN: (1),(0-4000),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDADN=<ALERT>,<THRHL D>,<SET TIME>,<CLR TIME>
Write Response	OK or ERROR
Read Syntax	AT\$OBDADN?
Read Response	\$OBDADN: <THRHL D>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ALERT>	Acceleration alert number (must be 1)
<THRHL D>	Acceleration in milli Gs 0 is the default value and is used to disable that threshold.
<SET TIME>	Time above threshold to set alert in seconds (default 1)
<CLR TIME>	Time below threshold to clear alert in seconds (default 2)
Notes	N/A

# AT\$OBDADT Auto Discovery Timer

AT\$OBDADT	OBD2 Auto Discovery Timer
Command Function	This command is used to set the OBD2 auto discovery timer.
Syntax Query	AT\$OBDADT=?
Syntax	\$ OBDADT: (0-65535) OK
Write Syntax	AT\$ OBDADT =<DISCOVERY TIMER>
Write Response	OK
Read Syntax	AT\$ OBDADT?
Read Response	\$ OBDADT: < DISCOVERY TIMER >,< DISCOVERY TIME REMAINING > OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<DISCOVERY TIMER>	OBD2 Auto Discovery Timer 0 - Auto Discovery Timer Disabled 1-65535 Time in seconds
<DISCOVERY TIME REMAINING>	Time remaining on OBD2 Auto Discovery Timer 0-65535 Time in seconds
Notes	N/A



# AT\$OBDALT Set Left Turn Accelerometer Threshold

AT\$OBDALT	OBD2 Set Left Turn Accelerometer Threshold
Command Function	This command is used to set the two left turn accelerometer thresholds.
Syntax Query	AT\$OBDALT=?
Syntax	\$OBDALT: (1-2),(0-4000),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDALT=<ALERT>,<THRHL>,<SET TIME>,<CLR TIME>
Write Response	OK or ERROR
Read Syntax	AT\$OBDALT?
Read Response	\$OBDALT: <THRHL>,<SET TIME>,<CLR TIME>,<THRHL>,<SET TIME>,<CLRTIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ALERT>	Acceleration alert number
<THRHL>	Acceleration in milli Gs 0 is the default value and is used to disable that threshold.
<SET TIME>	Time above threshold to set alert in seconds (default 1)
<CLR TIME>	Time below threshold to clear alert in seconds (default 2)
Notes	N/A

# AT\$OBDAM Set Any Motion Parameters

AT\$OBDAM	Set Any Motion Parameters
Command Function	This command allows the user to set the 'any motion' parameters of the accelerometer. The 'any motion' setting allows users to trigger an event when the accelerometer senses motion in any axis.
Syntax Query	AT\$OBDAM=?
Syntax	\$OBDAM: (0-1),(0-255),(0-3),(0-64800) OK
Write Syntax	AT\$OBDAM= <enable>,<threshold>,<count>,<holdtime>
Write Response	OK
Read Syntax	AT\$OBDAM?
Read Response	\$OBDAM: <enable>,<threshold>,<count>,<holdtime>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<enable>	0 = Disable the 'any motion' feature 1 = Enable the 'any motion' feature (default)
<threshold>	Accelerometer 'any motion' threshold. This value represents the level of movement required to be considered 'any motion.' Lower values are more sensitive to motion. The <threshold> values are raw hardware units ( <u>not</u> mili-G's).  Range: 0 - 255 (Default value = 10)

AT\$OBDAM	Set Any Motion Parameters
<count>	Accelerometer 'any motion' count Range: 0 - 3 (Default value = 3)
<holdtime>	Number of seconds of no motion before the 'any motion' event is cleared. Range: 0 - 64800 (Default value = 180)
Notes	None yet.

# AT\$OBDART Set Right Turn Threshold

AT\$OBDART	OBD2 Set Right Turn Threshold
Command Function	This command is used to set the two right turn accelerometer thresholds.
Syntax Query	AT\$OBDART=?
Syntax	\$OBDART: (1-2),(0-4000),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDART=<ALERT>,<THRHL D>,<SET TIME>,<CLR TIME>
Write Response	OK or ERROR
Read Syntax	AT\$OBDART?
Read Response	\$OBDART: <THR LD>,<SET TIME>,<CLR TIME>,<THR LD>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ALERT>	Acceleration alert number
<THRHL D>	Acceleration in milli Gs 0 is the default value and is used to disable that threshold.
<SET TIME>	Time above threshold to set alert in seconds (default 1)
<CLR TIME>	Time below threshold to clear alert in seconds (default 2)
Notes	N/A

# AT\$OBDAUP OBD2 Set Up Accelerometer Threshold

AT\$OBDAUP	OBD2 Set Up Accelerometer Threshold
Command Function	This command is used to set the 'up' accelerometer threshold.
Syntax Query	AT\$OBDAUP=?
Syntax	\$OBDAUP: (1),(0-4000),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDAUP=<ALERT>,<THRHL D>,<SET TIME>,<CLR TIME>
Write Response	OK or ERROR
Read Syntax	AT\$OBDAUP?
Read Response	\$OBDAUP: <THRHL D>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ALERT>	Acceleration alert number (must be 1)
<THRHL D>	Acceleration in milli Gs 0 is the default value and is used to disable that threshold.
<SET TIME>	Time above threshold to set alert in seconds (default 1)
<CLR TIME>	Time below threshold to clear alert in seconds (default 2)
Notes	N/A

# AT\$OBDBAT Enable/Disable Backup Battery

AT\$OBDBAT	Enable/Disable Backup Battery
Command Function	This command is used to enable/disable the internal backup battery. If this is disabled the unit will power off as soon as main power is removed.
Syntax Query	AT\$OBDBAT=?
Syntax	\$OBDBAT: (0-1) OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$OBDBAT?
Read Response	\$OBDBAT: <status>,<voltage> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<status>	0 = Internal Battery is Disabled 1 = Internal Battery is Enabled (default value)

<b>AT\$OBDBAT</b>	<b>Enable/Disable Backup Battery</b>
<b>&lt;voltage&gt;</b>	Internal battery voltage, displayed in millivolts.
<b>Notes</b>	<p>Products that do not have a battery installed will return the response of ERROR when AT\$OBDBAT is issued.</p> <p>The displayed voltage reading is only meaningful when running on battery power. When external power is available, the displayed voltage will reflect the charging voltage.</p> <p>The device will shut down if the internal backup battery voltage drops to 3.00 V</p>
<b>Example</b>	<p>AT\$OBDBAT?</p> <p>\$OBDBAT: 1,4753</p> <p>OK</p> <p>This example shows the read operation and response for a device where the internal backup battery is enabled and the voltage reading is 4.753 V.</p>

# AT\$OBDBBT Backup Battery Timer

AT\$OBDBBT	Backup Battery Timer
Command Function	This command is used to configure the length of time that the unit will run on internal battery power after main power is removed.
Syntax Query	AT\$OBDBBT=?
Syntax	\$OBDBBT: (30-6000)
Write Syntax	AT\$OBDBBT=<time>
Write Response	OK
Read Syntax	AT\$OBDBBT?
Read Response	\$OBDBBT: <time>,<time_remaining>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<time>	Time (in seconds) to remain running after main power has been removed Range: 30-6000 Default: 300
<time_remaining>	Time (in seconds) remaining before shutting down. This value is calculated by subtracting the elapsed time since the loss of main power from the run time specified by this command.
Notes	
Example	



# AT\$OBDBQS Backup Battery Quick Shutdown

AT\$OBDBQS	Backup Battery Quick Shutdown
Command Function	This command is designed to be used before shipping or storing the unit to preserve the power in the internal battery.
Syntax Query	AT\$OBDBQS=?
Syntax	\$OBDBQS: (0-1) OK
Write Syntax	AT\$OBDBQS=<status>
Write Response	OK
Read Syntax	AT\$OBDBQS?
Read Response	\$OBDBQS: <status> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<status>	0 = Backup battery quick shutdown is disabled (default) 1 = Backup battery quick shutdown is enabled
Notes	
Example	

# AT\$OBDCUT Clear The OBD2 User Trip Odometer

AT\$OBDCUT	Clear the OBD2 User Trip Odometer
Command Function	This command is used to set the User trip odometer to zero. This is used in conjunction with Input Event 192 - OBD User Trip Odometer.
Syntax Query	AT\$OBDCUT=?
Response	OK
Write Syntax	N/A
Response	N/A
Read Syntax	N/A
Response	N/A
Execute Syntax	AT\$OBDCUT
Response	OK
Parameter Values	N/A
Notes	N/A
Example	AT\$STOATEV=1,AT\$OBDCUT // send stored AT event to reset trip distance AT\$EVENT=20,0,192,3000,2147483647 //Trigger trip distance at 3000 meters AT\$EVENT=20,3,41,2,540016710 // send acknowledged UDP message AT\$EVENT=20,3,44,1,0 // send stored at command tin index 1

# AT\$OBDDCL Deceleration Thresholds

AT\$OBDDCL	OBD2 Deceleration Thresholds
Command Function	This command is used to set the three deceleration thresholds.
Syntax Query	AT\$OBDDCL=?
Syntax	\$OBDDCL: (1-3),(0-4000),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDDCL=<ALERT>,<THRHL D>,<SET TIME>,<CLR TIME>
Write Response	OK
Read Syntax	AT\$OBDDCL?
Read Response	\$OBDDCL: <THRLD>,<SET TIME>,<CLR TIME><THRLD>,<SET TIME>,<CLR TIME><THRLD>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ALERT>	Deceleration alert number
<THRHL D>	Deceleration in milli Gs 0 is the default value and is used to disable that threshold.
<SET TIME>	Time above threshold to set alert in seconds
<CLR TIME>	Time below threshold to clear alert in seconds
Notes	
Examples	

# AT\$OBDDSC Discovery Configuration

AT\$OBDDSC	OBD 2 Discovery Configuration
Command Function	This command is used to set the OBD2 protocol discovery method
Syntax Query	AT\$OBDDSC=?
Syntax	\$OBDDSC: (0-7, 255) OK
Write Syntax	AT\$OBDDSC=<PROTOCOL>
Write Response	OK
Read Syntax	AT\$ OBDDSC?
Read Response	\$OBDDSC:< PROTOCOL> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<PROTOCOL>	OBD2 Protocol Discovery 0 – ISO 15765 250 kHz 11 bit 1 – ISO 15765 500 kHz 11 bit 2 – ISO 15765 250 kHz 29 bit 3 – ISO 15765 500 kHz 29 bit 4 – J1850 PWM 5 – J1850 VPW 6 – ISO 9141 2 7 – ISO 14230 255 – Auto Discovery
Notes	
Examples	

# AT\$OBDECT Engine Coolant Temperature Threshold

AT\$OBDECT	OBD2 Engine Coolant Temperature Threshold
Command Function	This command is used to get or set the Engine Coolant Temperature Threshold.
Syntax Query	AT\$OBDECT=?
Syntax	\$OBDECT: (0-255),(30-1000),(30-1000) OK
Write Syntax	AT\$ OBDECT =<value>, <set time>, <clear time>
Write Response	OK
Read Syntax	AT\$ OBDECT?
Read Response	\$ OBDECT: <value>, <set time>, <clear time> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<value>	0 = threshold is disabled 1 = -39 degrees Celcius 255 = 215 degrees Celcius
<set time>	Time above threshold in seconds before event is set
<clear time>	Time below threshold in seconds before event is cleared
Notes	N/A

# AT\$OBDEES Excessive Engine Speed Thresholds

AT\$OBDEES	OBD2 Excessive Engine Speed Thresholds
Command Function	This command is used to set the three excessive engine speed thresholds.
Syntax Query	AT\$OBDEES=?
Syntax	\$OBDEES: (1-3),(0-65535),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDEES=<ALERT>,<THRHL D>,<SET TIME>,<CLR TIME>
Write Response	OK
Read Syntax	AT\$OBDEES?
Read Response	\$OBDEES: <THR LD>,<SET TIME>,<CLR TIME><THR LD>,<SET TIME>,<CLR TIME><THR LD>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ALERT>	Excessive engine speed alert number
<THRHL D>	Engine speed in ¼ RPM 0 is the default setting and is used to disable that threshold
<SET TIME>	Time above threshold to set alert in seconds
<CLR TIME>	Time below threshold to clear alert in seconds
Notes	
Examples	

# AT\$OBDFAC Set Thresholds To Factory Defaults

AT\$OBDFAC	OBD2 Set Thresholds to Factory Defaults
Command Function	This command is used to set all of the OBD2 thresholds to factory default values.
Syntax Query	AT\$OBDFAC=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$OBDFAC
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	AT\$OBDFAC resets all aux processor based settings including the accelerometer configuration
Examples	

# AT\$OBDGSP Use OBD Speed In Place Of GPS Speed

AT\$OBDGSP	Use OBD Speed in place of GPS Speed
Command Function	This command is used to select GPS or OBD generated speed in binary output messages – Bit Field Table 0 bit 12
Syntax Query	AT\$OBDGSP=?
Syntax	\$OBDGSP: (0-1) OK
Write Syntax	AT\$OBDGSP =<USE OBD SPEED>
Write Response	OK
Read Syntax	AT\$OBDGSP?
Read Response	\$OBDGSP: <USE OBD SPEED> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<USE OBD SPEED>	Use OBD Speed 0 – Use GPS speed 1 – Use OBD speed
Notes	



# AT\$OBDIDL Idle Speed Threshold

AT\$OBDIDL	OBD2 Idle Speed Threshold
Command Function	This command is used to set the idle speed threshold.
Syntax Query	AT\$OBDIDL=?
Syntax	\$OBDIDL: (0-255),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDIDL=<THRHL>,<SET TIME>,<CLR TIME>
Write Response	OK
Read Syntax	AT\$OBDIDL?
Read Response	\$OBDIDL: <THRHL>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<THRHL>	Idle speed in KPH
<SET TIME>	Time above threshold to set alert in seconds
<CLR TIME>	Time below threshold to clear alert in seconds
Notes	When the threshold is set to zero the event is disabled.
Examples	

# AT\$OBDIGN OBD2 Ignition Off Configuration

AT\$OBDIGN	OBD2 Ignition Off Configuration
Command Function	This command is used to configure ignition off detection.
Syntax Query	AT\$OBDIGN=?
Syntax	\$OBDIGN: (0-600),(0-1) OK
Write Syntax	AT\$ OBDIGN =<OBD OFF>,< IGN OFF >
Write Response	OK
Read Syntax	AT\$ OBDIGN?
Read Response	\$ OBDIGN: < OBD OFF >, < IGN OFF > OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
< OBD OFF >	OBD2 Off Time 0-600 Time in seconds after vehicle and engine speed are zero before dropping OBD communications with the ECU.
< IGN OFF >	0 – Ignition off when vehicle and engine speed are zero. 1 – Ignition off after OBD2 off time expires
Notes	The recommended setting for hybrids and stop/start vehicles is 180,1. A longer time can be used safely if the ECU stops communicating after the key is removed. There is a power consumption trade off for ECUs that continue transmitting after the key is removed. The default setting and recommended setting for all other vehicles is 60,0.
Examples	

# AT\$OBDLBL Low Battery Level Threshold

AT\$OBDLBL	OBD2 Low Battery Level Threshold
Command Function	This command is used to set the low battery level threshold.
Syntax Query	AT\$OBDLBL=?
Syntax	\$OBDLBL: (0-25500),(150-1000),(150-1000) OK
Write Syntax	AT\$OBDLBL=<THRHL>,<SET TIME>,<CLR TIME>
Write Response	OK
Read Syntax	AT\$OBDLBL?
Read Response	\$OBDLBL: <THRHL>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<THRHL>	Low battery level threshold in millivolts
<SET TIME>	Time below threshold to set alert in seconds
<CLR TIME>	Time above threshold to clear alert in seconds
Notes	When the threshold is set to zero the event is disabled. The typical component tolerance is +/- 4.5%
Examples	

# AT\$OBDLED OBD2 LED Timer

AT\$OBDLED	OBD2 LED Timer
Command Function	This command is used to set the length of time that the LEDs will blink after a power on reset.
Syntax Query	AT\$OBDLED=?
Syntax	\$ OBDLED: (0-240) OK
Write Syntax	AT\$ OBDLED =<LED TIMER>
Write Response	OK
Read Syntax	AT\$ OBDLED?
Read Response	\$ OBDLED: < LED TIMER >< LED TIME REMAINING > OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<LED TIMER>	OBD2 LED Timer 0 - LED Timer Disabled (LEDs will always blink) 1-240 Time in minutes that LEDs will blink
<LED TIME REMAINING>	Time remaining on OBD2 LED Timer 0-240 Time in minutes
Notes	

# AT\$OBDLFL Low Fuel Level Threshold

AT\$OBDLFL	OBD2 Low Fuel Level Threshold
Command Function	This command is used to set the low fuel level threshold.
Syntax Query	AT\$OBDLFL=?
Syntax	\$OBDLFL: (0-100),(1-1000),(1-1000) OK
Write Syntax	AT\$OBDLFL=<THRHL D>,<SET TIME>,<CLR TIME>
Write Response	OK
Read Syntax	AT\$OBDLFL?
Read Response	\$OBDLFL: <THRHL D>,<SET TIME>,<CLR TIME>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<THRHL D>	Low fuel level threshold in percent
<SET TIME>	Time below threshold to set alert in seconds
<CLR TIME>	Time above threshold to clear alert in seconds
Notes	When the threshold is set to zero the event is disabled.
Examples	

# AT\$OBDSAV Save OBDII Thresholds To Memory

AT\$OBDSAV	Save OBD2 Thresholds to memory
Command Function	This command is used to save all of the OBD2 thresholds to flash memory.
Syntax Query	AT\$OBDSAV=?
Syntax	OK
Write Syntax	N/A
Write Response	N/A
Read Syntax	N/A
Read Response	N/A
Execute Syntax	AT\$OBDSAV
Execute Response	OK
Unsolicited Response	N/A
Parameter Values	N/A
Notes	If AT\$OBDSAV is not sent, any changes made to OBD or accelerometer commands are maintained through a reset (AT\$RESET), but are lost if the power is cycled.

# AT\$OBDSPD Vehicle Speed Thresholds

AT\$OBDSPD	OBD2 Vehicle Speed Thresholds
Command Function	This command is used to set the three excessive vehicle speed thresholds.
Syntax Query	AT\$OBDSPD=?
Syntax	\$OBDSPD: (1-3),(0-255),(0-1000),(0-255) OK
Write Syntax	AT\$OBDSPD=<ALERT>,<THRHLD>,<SET TIME>,<CLR THRLD>
Write Response	OK
Read Syntax	AT\$OBDSPD?
Read Response	\$OBDSPD: <THRLD>,<SET TIME>,<CLR THRHLD><THRLD>,<SET TIME>,<CLR THRHLD><THRLD>,<SET TIME>,<CLR THRHLD>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ALERT>	Excessive vehicle speed alert number
<THRHLD>	Vehicle speed in KPH
<SET TIME>	Time above threshold to set alert in seconds
<CLR THRLD>	Vehicle speed in KPH
Notes	When the set and clear thresholds are set to zero the event is disabled.
Examples	

# AT\$OBDTYP Protocol Type

AT\$OBDTYP	OBD2 Protocol Type
Command Function	This command is used to query the OBD2 protocol type.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$OBDTYP?
Read Response	\$OBDTYP: <OBD TYPE>,<OBD COMM > OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<OBD Type>	OBD2 Protocol Type 0 = ISO 15765 250 kHz 11 bit 1 = ISO 15765 500 kHz 11 bit 2 = ISO 15765 250 kHz 29 bit 3 = ISO 15765 500 kHz 29 bit 4 = J1850 PWM 5 = J1850 VPW 6 = ISO 9141 2 7 = ISO 14230 255 = Unknown
<OBD COMM>	OBD2 Communication Status 0 – Not Active 1 – Active
Notes	
Examples	





# AT\$OBDVER Auxiliary Processor

AT\$OBDVER	OBD2 Auxiliary Processor
Command Function	This command is used to query the software version of the auxiliary processor.
Syntax Query	N/A
Syntax	N/A
Write Syntax	N/A
Write Response	N/A
Read Syntax	AT\$OBDVER?
Read Response	\$OBDVER: <SW VER> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<SW Ver>	Auxiliary processor software version
Notes	
Examples	

# GPS Commands

---

# AT\$ALTOSI Set And Query GPS Overspeed Interval

AT\$ALTOSI	Set and Query GPS Overspeed Interval
Command Function	This command allows the user to define the criteria for a GPS overspeed event. A GPS overspeed event occurs when the minimum speed that is defined by the <speed> parameter is maintained for a specific duration of time.
Syntax Query	AT\$ALTOSI=?
Syntax	\$ALTOSI: (0 - 65535),(0-65535),(0-1) OK
Write Syntax	AT\$ALTOSI=<speed>,<interval>,<sticky>
Write Response	OK
Read Syntax	AT\$ALTOSI?
Read Response	\$ALTOSI: <speed>,<interval>,<status>,<max_speed>,<duration> OK
Execute Syntax	AT\$ALTOSI
Execute Response	ERROR
Unsolicited Response	N/A
Parameter Values	
<speed>	Speed, in knots, must be met and/or exceeded to trigger the GPS overspeed event.
<interval>	Number of consecutive seconds for which <speed> must be maintained to trigger the GPS overspeed event.
<sticky>	Optional parameter to make overspeed parameters persistent. If 1, then speed/interval are written to flash immediately (no AT&W required). Default = 0.
<status>	If 1, then <max_speed> and <duration> represent a GPS overspeed interval that is currently active. If 0, they represent the previous GPS overspeed interval.

<b>AT\$ALTOSI</b>	<b>Set and Query GPS Overspeed Interval</b>
<b>&lt;max_speed&gt;</b>	The highest speed (in knots) that was attained in the current or previous GPS overspeed interval.
<b>&lt;duration&gt;</b>	Number of consecutive seconds that the speed was at or above <speed>.
<b>Notes</b>	If <speed> is set to zero, the GPS overspeed event is disabled.

# AT\$EXCACC Excessive Acceleration

AT\$EXCACC	Excessive Acceleration
Command Function	This command is used to configure the excessive acceleration event. Input event 198
Syntax Query	AT\$EXCACC=?
Syntax	\$EXCACC: (0-200),(1-20),(1-20) OK
Write Syntax	AT\$EXCACC=<THRESH>,<SET TIME >,<CLR TIME >
Write Response	OK
Read Syntax	AT\$EXCACC?
Read Response	\$EXCACC: <THRESH>,<SET TIME >,<CLR TIME> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<THRESH>	0 = Excessive Acceleration Event Disabled 1-200 = Acceleration Threshold (in Knots * 10)
<SET TIME>	1-20 = Number of seconds above threshold to set event
<CLR TIME>	1-20 = Number of seconds below threshold to clear event
Notes	A value of 100 for threshold equals 10 knots per second. This function uses GPS to determine acceleration.

# AT\$EXCDEC Excessive Deceleration

AT\$EXCDEC	Excessive Deceleration
Command Function	This command is used to configure the excessive deceleration event. Input event 199.
Syntax Query	AT\$EXCDEC=?
Syntax	\$EXCDEC: (0-200),(1-20),(1-20) OK
Write Syntax	AT\$EXCDEC=<THRESH>,<SET TIME >,<CLR TIME >
Write Response	OK
Read Syntax	AT\$EXCDEC?
Read Response	\$EXCDEC: <THRESH>,<SET TIME >,<CLR TIME> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<THRESH>	0 – Excessive Deceleration Event Disabled 1-200 – Deceleration Threshold (in Knots * 10)
<SET TIME>	1-20 – Number of seconds above threshold to set event
<CLR TIME>	1-20 – Number of seconds below threshold to clear event
Notes	A value of 100 for threshold equals 10 knots per second. This function uses GPS to determine deceleration.

# AT\$GEOFNC Geo Fencing A Circular Area

AT\$GEOFNC	Geo Fencing a Circular Area
Command Function	This command allows a user to send a GPS message when the device moves in or out of a geographical area.
Syntax Query	AT\$GEOFNC=?
Syntax	\$GEOFNC: (1-25),(0-1000000),(-90.0 - +90.0),(-180.0 - +180.0) OK
Write Syntax	AT\$GEOFNC=<fenceNum> <radius>,<latitude>,<longitude>
Write Response	OK
Read Syntax	AT\$GEOFNC?
Read Response	\$GEOFNC: <fenceNum>,<radius>,<latitude>,<longitude> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<fenceNum>	Defines the fence number
<radius>	Defines radius of the circle from given Latitude and Longitude coordinates (in meters)
<latitude>	Defines the latitude for the center point of a circle
<longitude>	Defines the longitude for the center point of a circle
Notes	<p>An AT\$EVENT command has to be set to send a GPS message to the remote host when entering or exiting the fenced area.</p> <p>Although this command accepts latitude/longitude parameters with up to 15 characters, internally the value is stored as a C float type which has less precision (but requires half the storage size). The float type is capable of storing accuracy commensurate with the GPS receiver's capability, but the queried latitude/longitude values of the AT\$GEOFNC command may differ from the input parameters due to this precision limitation.</p>



# AT\$GFDBNC Set Geofence Debounce Count

AT\$GFDBNC	Set Geofence Debounce Count
Command Function	This command allows the user to set the number of consecutive geofence positions required to trigger an 'inside geofence' or 'outside geofence' event. It prevents a false reading when the device is on the threshold of the geofence.
Syntax Query	AT\$GFDBNC=?
Syntax	\$GFDBNC: (0-250),(0-250) OK
Write Syntax	AT\$GFDBNC=<out_cnt>,<in_cnt>
Write Response	OK
Read Syntax	AT\$GFDBNC?
Read Response	\$GFDBNC: <out_cnt>, <in_cnt> OK
Execute Syntax	N/A
Execute Response	
Unsolicited Response	N/A
Parameter Values	
<out_cnt>	Consecutive GPS position reports outside a geofence required to trigger 'O' condition for geofence input event (see \$EVENT)
<in_cnt>	Consecutive GPS position reports inside a geofence required to trigger 'I' condition for geofence input event (see \$EVENT)
Notes	The GPS reporting interval varies depending on the product. for the MT-Gx and MTxxxx products, the updates are sent every one second.

# AT\$GFDEL Delete A Range Of Geo-Fences

AT\$GFDEL	Delete a Range of Geo-Fences
Command Function	This command deletes a range of geo-fences.
Syntax Query	AT\$GFDEL=?
Syntax	\$GFDEL: (1-25),(1-25) OK
Write Syntax	AT\$GFDEL=<start>,<stop>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<start>	First geo-fence index in range to be deleted
<stop>	Last geo-fence index in range to be deleted.
Notes	N/A

# AT\$GPSCMD GPS Command

AT\$GPSCMD	GPS Command
Command Function	This command allows the user to configure the state of the GPS module.
Syntax Query	AT\$GPSCMD=?
Syntax	\$GPSCMD: (0-3) OK
Write Syntax	AT\$GPSCMD=<cmd>
Write Response	OK
Read Syntax	AT\$GPSCMD?
Read Response	\$GPSCMD: <cmd> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<cmd>	0 - Disables the GPS 1 - Cold start 2 - Hot start 3 - Stop the current GPS fix
Notes	<p>0 - GPS is in an idle state</p> <p>1 - Commands GPS to begin acquisition from a cold start.</p> <p>2 - Hot start can only be accomplished if it has valid time, ephemeris, almanac and position data.</p> <p>3 - Some Novatel Wireless products do not tracking GPS, and is defined as GPS fix stop (for power consumption)</p> <p>After a power up or reset, the modem will attempt an assisted cold start. This is defined as the modem supplying the GPS receiver any valid time, ephemeris, almanac, and position data that the modem might have stored.</p>

# AT\$GPSFD Restore GPS Filter Defaults

AT\$GPSFD	Restore GPS Filter Defaults
Command Function	<p>This command restores GPS filter defaults for the \$GPSQUAL, \$GPSFLT, and \$GPSRST commands without impacting the rest of the system configuration.</p> <p>This command is intended to be used after a software upgrade to take advantage of new filter settings without having to perform a full AT&amp;F.</p> <p>This command accepts one parameter (a 'sticky' flag). If the sticky flag is set, the GPS filter defaults will be persistent. If the sticky flag is not set, the GPS filter defaults will not be maintained past the next modem reset.</p>
Syntax Query	AT\$GPSFD=?
Syntax	\$GPSFD: (0-1) OK
Write Syntax	AT\$GPSFD=<sticky>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<sticky>	0 = The GPS modem defaults will not be maintained past the next modem reset. 1 = The GPS modem defaults will be persistent.
Notes	

# AT\$GPSFLT GPS Speed Filter

AT\$GPSFLT	GPS Speed Filter
Command Function	<p>At times the GPS chipset used by this device will report non-zero speeds when the device is not moving. Normally, the positions are accurate but the false speeds cause errors in the generation of the GPS idle, distance and odometer features. This filter is usually able to detect these false motions and clamp the reported speed to 0.0 knots while still reporting valid position data.</p> <p>Under normal circumstances, the default values should provide acceptable GPS performance for most applications. Please contact Novatel Wireless customer support if you feel the filter settings need to be changed for your application.</p>
Syntax Query	AT\$GPSFLT=?
Syntax	<p>If the \$GPSFLT debug flag is not set for expanded AT command response, the response will be as follows:</p> <p>\$GPSFLT: (0-2),(0-255),(0-180),(0-255),(0-255),(0-180),(0-180),(0-255),(0-255)</p> <p>OK</p> <p>If the \$GPSFLT debug flag is set for expanded AT command response, the response will be as follows:</p> <p>\$GPSFLT: md,tr,hdgD,tiAc,n4aAc,tiHdg,n4aHdg,pDop,dbg,unc,mot,ignB,tAdj</p> <p>OK</p>
Write Syntax	AT\$GPSFLT=<md>,<tr>,<hdgD>,<tiAc>,<n4aAc>,<tiHdg>,<n4aHdg>,<pDop>,<dbg>,<unc>,<mot>,<ignB>,<tAdj>
Write Response	OK
Read Syntax	AT\$GPSFLT?
Read Response	<p>AT\$GPSFLT: &lt;md&gt;,&lt;tr&gt;,&lt;hdgD&gt;,&lt;tiAc&gt;,&lt;n4aAc&gt;,&lt;tiHdg&gt;,&lt;n4aHdg&gt;,&lt;pDop&gt;,&lt;dbg&gt;,&lt;unc&gt;,&lt;mot&gt;,&lt;ignB&gt;,&lt;tAdj&gt;</p> <p>OK</p>
Execute Syntax	N/A

AT\$GPSFLT	GPS Speed Filter
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<md>	<p>0 = filter is disabled</p> <p>1 = filter is enabled</p> <p>2 = automatic (default). Filter determines whether device is in parked mode or driving mode by determining the number of seconds the device has been idle. If in parked mode, filter is enabled. If in driving mode, filter is disabled. This improves the performance of the GPS idle, distance, and odometer features when coming off stop signs and red lights, while still stopping most of the false speed-related events when the device is parked.</p>
<tr>	<p>0-255 = Trust threshold.</p> <p>With each GPS report, this filter uses the other filter settings to assess a confidence level to determine if indicated motion seems valid. This confidence level is either incremented or reset with each report. The confidence level is converted into a trust factor which is compared against this threshold value. If the trust factor is less than this threshold and the device is in the parked motion state, the speed is clamped to 0.0 knots. If the trust factor is above or equal to this threshold, the speed from the \$GPRMC is allowed through and the device transitions into the driving state.</p> <p>Default is 16.</p>
<hdgD>	<p>0-180 = Heading delta threshold.</p> <p>This filter calculates the heading from the two most recent position reports and compares it to the heading provided in the \$GPRMC sentence. If the delta between the two headings is greater than this threshold (in degrees), the confidence level is reset to zero.</p> <p>Default is 30 degrees.</p>
<tiAc>	<p>0-255 = TI acceleration threshold.</p> <p>This filter calculates the velocity change from the reported \$GPRMC velocity in the two most recent position reports. If the reported</p>

AT\$GPSFLT	GPS Speed Filter
	<p>velocity change is greater than this threshold (in knots/sec), the confidence level is reset to zero.</p> <p>Default is 10 knots/second.</p>
<n4aAc>	<p>0-255 = Novatel Wireless acceleration threshold.</p> <p>This filter calculates the velocity change from the distance between the two most recent position locations and based on the time delta. If the calculated velocity change is greater than this threshold (in knots/sec), the confidence level is reset to zero.</p> <p>Default is 10 knots/second.</p>
<tiHdg>	<p>0-180 = TI heading change threshold.</p> <p>This filter calculates the heading change from the reported \$GPRMC heading in the two most recent position reports. If the heading change is greater than this threshold (in degrees/second), the confidence level is reset to zero.</p> <p>Default is 30 degrees/second.</p>
<n4aHdg>	<p>0-180 = Novatel Wireless heading change threshold.</p> <p>This filter calculates the heading using the two most recent position locations and based on the time delta. If the difference between the two most-recent heading calculations is greater than this threshold (in degrees/second), the confidence level is reset to zero.</p> <p>Default is 30 degrees/second.</p>
<pDop>	<p>Obsolete. This value is no longer used. The field is maintained for backwards compatibility.</p>
<dbg>	<p>Bit mask made up of the following bit definitions:</p> <p>1 = Display all filter actions to serial port. If \$GPSQUAL or \$GPSFLT filters take any action the change or invalidate the GPS report, setting this bit will allow the code to display the action that was taken.</p>

AT\$GPSFLT	GPS Speed Filter
	<p>2 = Display runtime filter info to serial port. Allows code to display calculations/variables used by the filter.</p> <p>4 = Display geofence timing debug info.</p> <p>8 = System test flag.</p> <p>16 = GPS log flag. Enables code to log raw GPS data to a file in flash for post-mortem analysis for certain filtering events.</p> <p>32 = GPS message flag. Enabled code to send a message over the air and to the serial port, indicating that an abnormal GPS event has been detected and logged.</p> <p>64 = Raw NMEA flag. Display raw NMEA input on the serial port.</p> <p>128 = Expand \$GPSFLT=? and \$GPSQUAL=? Responses to provide a verbose explanation of each parameter.</p>
<unc>	<p>0-255 = Position uncertainty threshold.</p> <p>If internal position uncertainty value is greater than this value, the confidence level is reset to zero.</p> <p>Default is 75.</p>
<mot>	<p>0-999 = Motion transition threshold (in seconds).</p> <p>If device has been idle (no velocity) for this number of seconds, transition from driving mode to parked mode.</p> <p>Default is 120 seconds.</p>
<ignB>	<p>0-255 = Ignition bias.</p>



AT\$GPSFLT	GPS Speed Filter
	<p>For devices that are connected to the ignition via the white wire, the code can detect when the ignition is turned on/off and adjust the trust threshold accordingly. (Vehicles with the ignition off would only be moving if being towed. Vehicles with the ignition on will probably be driving if not moving already.)</p> <p>For devices that are not connected to the ignition, this value should be set to 0.</p> <p>Default is 6.</p>
<tAdj>	<p>0 = Do not adjust RTC time if RTC time disagrees with GPS time.</p> <p>1 = Adjust RTC time if RTC time and GPS time differ by more than 5 seconds.</p> <p>Default is 1.</p>
Notes	<p>There have also been cases where slow Time To First Fix (TTFF) reports have been attributed to discrepancies between the RTC time and the GPS time. When GPS filtering is enabled, the code ensures the RTC time is always with +/-5 seconds of the GPS time. This time sync feature is disabled by setting \$GPSFLT=0.</p> <p>If GPS filtering is modified or disabled, performance degradation may result.</p> <p>With the implementation of this filter, the \$ODOCFG command is now obsolete. For backwards compatibility, the \$ODOCFG command will still be accepted, but the code will take no action on its parameters.</p>

# AT\$GPSLCL Configure Sending Of GPS Message To The Serial Port

AT\$GPSLCL	Configure Sending of GPS Message to the Serial Port
Command Function	This command allows the user to configure sending of GPS data on the serial port.
Syntax Query	AT\$GPSLCL=?
Syntax	\$GPSLCL: (0-1),(0-127) OK
Write Syntax	AT\$GPSLCL=<option>,<nmeaMsgs>
Write Response	OK
Read Syntax	AT\$GPSLCL?
Read Response	\$GPSLCL: <option>,<nmeaMsgs> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	

AT\$GPSLCL	Configure Sending of GPS Message to the Serial Port												
<option>	<p>0 - Disable sending of GPS data to the local port when the device is in AT command mode (Default)</p> <p>1 - Enable sending of GPS NMEA ASCII data to the local port when the device is in AT command mode</p>												
<nmeaMsgs>	<p>This field is the bit-wise OR of the type of messages desired. The user has following message options to select from.</p> <p>Decimal Format</p> <table> <thead> <tr> <th>User Selectable</th><th>Type of NMEA Message</th></tr> </thead> <tbody> <tr> <td>1</td><td>GGA</td></tr> <tr> <td>4</td><td>GSA</td></tr> <tr> <td>8</td><td>GSV</td></tr> <tr> <td>16</td><td>RMC</td></tr> <tr> <td>64</td><td>PENFG</td></tr> </tbody> </table>	User Selectable	Type of NMEA Message	1	GGA	4	GSA	8	GSV	16	RMC	64	PENFG
User Selectable	Type of NMEA Message												
1	GGA												
4	GSA												
8	GSV												
16	RMC												
64	PENFG												
Notes	is used for debug purpose as directed by Novatel Wireless Technical Support Personnel. It is not a standard NMEA message.												

# AT\$GPSLNA Enable/Disable Internal LNA

AT\$GPSLNA	Enable/Disable Internal LNA
Command Function	This command is used to enable and disable the internal Low Noise Amplifier (LNA)
Syntax Query	\$GPSLNA=?
Syntax	\$GPSLNA: (0-2) OK
Write Syntax	\$GPSLNA=<cfg>
Write Response	OK
Read Syntax	\$GPSLNA?
Read Response	\$GPSLNA: =<cfg>,<actual> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<cfg>	2 = Automatic (default) 0 and 1 are for debug purposes only. 0 = Internal LNA enabled 1 = Internal LNA disabled
<actual>	0 = Internal LNA enabled 1 = internal LNA disabled
Notes	

# AT\$GPSOSI Set And Query GPS Overspeed Interval

AT\$GPSOSI	Set and Query GPS Overspeed Interval
Command Function	This command allows the user to define the criteria for a GPS overspeed event. A GPS overspeed event occurs when the minimum speed that is defined by the <speed> parameter is maintained for a specific duration of time.
Syntax Query	AT\$GPSOSI=?
Syntax	\$GPSOSI: (0-255),(0-65536),(0-1) OK
Write Syntax	AT\$GPSOSI=<speed>,<interval>,<sticky>
Write Response	OK
Read Syntax	AT\$GPSOSI?
Read Response	\$GPSOSI: <speed>, <interval>, <status>, <max_speed>, <duration> OK
Execute Syntax	AT\$GPSOSI
Execute Response	ERROR
Unsolicited Response	N/A
Parameter Values	
<speed>	Speed, in knots, must be met and/or exceeded to trigger the GPS overspeed event.
<interval>	Number of consecutive seconds for which <speed> must be maintained to trigger the GPS overspeed event.
<sticky>	Optional parameter to make overspeed parameters persistent. If 1, then speed/interval are written to flash immediately (no AT&W required). Default = 0.
<status>	If 1, then <max_speed> and <duration> represent a GPS overspeed interval that is currently active. If 0, they represent the previous GPS overspeed interval.

<b>AT\$GPSOSI</b>	<b>Set and Query GPS Overspeed Interval</b>
<b>&lt;max_speed&gt;</b>	The highest speed (in knots) that was attained in the current or previous GPS overspeed interval.
<b>&lt;duration&gt;</b>	Number of consecutive seconds that the speed was at or above <speed>.
<b>Notes</b>	If <speed> is set to zero, the GPS overspeed event is disabled.

# AT\$GPSQUAL GPS Quality Filters

AT\$GPSQUAL	GPS Quality Filters
Command Function	This command allows the user to define extra criteria for the event engine to use before it reports a position fix as valid.
Syntax Query	AT\$GPSQUAL=?
Syntax	If the \$GPSFLT debug flag is not set for expanded AT command response, the response will be as follows:  \$GPSQUAL: (0-255),(0-255),(0-30)  OK
Write Syntax	AT\$GPSQUAL=<flg>,<hdop>,<sats>
Write Response	OK
Read Syntax	AT\$GPSQUAL?
Read Response	\$GPSQUAL:<flg>,<hdop>,<sats>
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<flg>	<p>Bit mask made up of the following bit definitions:</p> <p>1 = Mark GPS report invalid if \$GPGSA fix type is 2 (2D fix). This bit is provided for backwards compatibility with legacy products. It has not been shown to improve performance with this product.</p> <p>2 = Mark GPS report invalid if the report is based on a propagated fix.</p> <p>4 = Request POSITION EXTENDED report (in place of the basic POSITION report) from GPS chipset. This report includes additional info that the basic POSITION report does not.</p> <p>8 = Request MEASUREMENT EXTENDED report. This report includes information about satellite speeds which can be used in filtering.</p> <p>Default is 12 (request both POSITION EXTENDED and MEASUREMENT EXTENDED reports).</p>
<hdop>	<p>0 = Ignore HDOP when filtering. (default)</p> <p>1-255 = Mark GPS report invalid if HDOP value from \$GPGSA</p>

AT\$GPSQUAL	GPS Quality Filters
	<p>sentence is less than or equal to this indicated HDOP limit.</p> <p>This field is provided for backwards compatibility with legacy products. It has not been shown to improve performance with this product.</p>
<sats>	<p>0 (default) = Disregard # of satellites during filtering.</p> <p>1-30 = Mark GPS report invalid if the # of satellites in reported solution (from \$GPGLA sentence) is below this value.</p>
Notes	<p>The units of the uncertainty threshold should not be taken literally. For example, a position uncertainty threshold of 100 meters does not guarantee that the actual location will be within 100 meters of the actual position.</p> <p>Please consult with Novatel Wireless technical support personnel before changing uncertainty thresholds.</p>
Example:	



# AT\$GPSRD Read Current GPS ASCII Data

AT\$GPSRD	Read Current GPS ASCII data												
Command Function	This command allows a user to read current NMEA format GPS data.												
Syntax Query	AT\$GPSRD=?												
Syntax	\$GPSRD: [(0-7F),(0-127)],(0-1) OK												
Write Syntax	N/A												
Write Response	N/A												
Read Syntax	AT\$GPSRD=<nmeaMsgs>,<decimal>												
Read Response	"\$GPG....." OK												
Execute Syntax	N/A												
Execute Response	N/A												
Unsolicited Response	NA												
Parameter Values	The output NMEA sentence depends on whether the <nmeaMsgs> parameter is entered in Hex or Decimal format. By default, the <decimal> parameter is not required and <nmeaMsgs> parameter has to be entered as HEX value without the preceding "0x" characters as outlined in Hex Format table below.												
<nmeaMsgs>	<p>This field is the sum of the type of NMEA messages desired. A user has the following message options to select from. Maximum value for &lt;nmeaMsgs&gt; in this case would be 7F in Hex format or 127 in decimal format.</p> <p>Hex Format</p> <table> <thead> <tr> <th>User Selectable</th><th>Type of NMEA Message</th></tr> </thead> <tbody> <tr> <td>0x01</td><td>GGA</td></tr> <tr> <td>0x04</td><td>GSA</td></tr> <tr> <td>0x08</td><td>GSV</td></tr> <tr> <td>0x10</td><td>RMC</td></tr> <tr> <td>0x40</td><td>PENFG</td></tr> </tbody> </table>	User Selectable	Type of NMEA Message	0x01	GGA	0x04	GSA	0x08	GSV	0x10	RMC	0x40	PENFG
User Selectable	Type of NMEA Message												
0x01	GGA												
0x04	GSA												
0x08	GSV												
0x10	RMC												
0x40	PENFG												

AT\$GPSRD	Read Current GPS ASCII data												
	<p>Decimal Format</p> <table> <tr> <th>User Selectable</th><th>Type of NMEA Message</th></tr> <tr> <td>1</td><td>GGA</td></tr> <tr> <td>4</td><td>GSA</td></tr> <tr> <td>8</td><td>GSV</td></tr> <tr> <td>16</td><td>RMC</td></tr> <tr> <td>64</td><td>PENFG</td></tr> </table>	User Selectable	Type of NMEA Message	1	GGA	4	GSA	8	GSV	16	RMC	64	PENFG
User Selectable	Type of NMEA Message												
1	GGA												
4	GSA												
8	GSV												
16	RMC												
64	PENFG												
<decimal>	<p>1 = &lt;nmeaMsg&gt; value has to be sum of User Selectable values from decimal table format</p> <p>0 = select values out of hex table format</p>												
Notes	The \$PENFG (Proprietary ENFora Gps) is used for debug purpose as directed by Novatel Wireless Technical Support Personnel. It is not a standard NMEA message.												

# AT\$GPSRST Set And Query GPS Reset Interval

AT\$GPSRST	Set and Query GPS Reset Interval
Command Function	<p>This command allows the user to specify the duration of a continuous GPS no lock condition after which the GPS chip will be reset.</p> <p>The GPS will often take several minutes to get a lock when power has been cycled to the device. However, if valid RTC time is available, then the lock should be acquired more quickly. The second parameter allows the user to cut down the time without a lock before resetting the GPS chip when outside of the cold start window.</p>
Syntax Query	AT\$GPSRST=?
Syntax	\$GPSRST: (0-255),(0-255) OK
Write Syntax	AT\$GPSRST=<coldStartInterval>,<warmStartInterval>
Write Response	OK
Read Syntax	AT\$GPSRST?
Read Response	\$GPSRST: <coldStartInterval>,<warmStartInterval> <filtCnt> OK
Execute Syntax	AT\$GPSRST
Execute Response	ERROR
Unsolicited Response	N/A
Parameter Values	
<coldStartInterval>	When RTC time is not valid (year < 2010), this is the time (in tens of minutes) of GPS outage after which to reset the GPS chip and resume positioning.

AT\$GPSRST	Set and Query GPS Reset Interval
<warmStartInterval>	When RTC time is valid (year >= 2010) and this value is zero, then coldStartInterval is used as defined above. When RTC time is valid (year >= 2010) and this value is greater than zero, this is the time (in minutes) of GPS outage after which to reset the GPS chip and resume positioning.
Notes	If <coldStartInterval> is set to 0, the GPS chip will not be reset after a GPS outage of any duration.
Example	AT\$GPSRST=1,2 Code will allow 10 minutes to acquire a GPS lock before resetting the GPS chip following a power cycle (RTC time not valid). Once a lock has been acquired (RTC time automatically set when a lock has been acquired), the code will allow two minutes of 'no GPS lock' time before resetting the GPS chip. Since RTC time is maintained through an ignition reset, the two minute limit would be in effect following an ignition reset.

# AT\$GPSVAL GPS Speed Validation

AT\$GPSVAL	GPS Speed Validation
Command Function	This command is used to turn GPS speed filtering on and off.
Syntax Query	AT\$GPSVAL=?
Syntax	\$ GPSVAL: (0-1),(0-1) OK
Write Syntax	AT\$ GPSVAL =<MODE>,<ACC MOTION>
Write Response	OK
Read Syntax	AT\$ GPSVAL?
Read Response	\$ GPSVAL: <MODE>,< ACC MOTION > OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<MODE>	0 - Use default for GPS Speed filter 1 - Disable GPS Speed filter
<ACC MOTION>	0 - Use accelerometer to determine motion 1 - Do not use accelerometer to determine motion This parameter is not available to all MT Products.  This field is to enable the use of the accelerometer to assist the GPS filter in determining motion. This value is not relevant if <MODE> = 1.
Notes	The GPS speed filter here is the same as the GPS speed filter in \$GPSFLT.
Examples	

# AT\$ODOCFG Thresholds For Odometer/Speed Filtering

AT\$ODOCFG	Thresholds for Odometer/Speed Filtering
Command Function	<p>This command allows the user to set/query the thresholds used to filter odometer drift and false speed event reports.</p> <p>In the current GPS implementation, the velocity for a stationary device is often reported as a non-zero value for brief periods. To prevent unwanted odometer updates and spurious speed-related events firing, the speed is filtered following every GPS report where the speed drops to 0.0. Before distance calculations or non-zero speeds will be considered valid, the thresholds of this command must be met. Once met, subsequent speeds are not subject to these thresholds until the speed drops to 0.0 again.</p>
Syntax Query	AT\$ODOCFG=?
Syntax	\$ODOCFG:(20-255,0-255) OK
Write Syntax	AT\$ODOCFG=<speed_threshold>,<count_threshold>
Write Response	OK
Read Syntax	AT\$ODOCFG?
Read Response	\$ODOCFG: <speed_threshold>,<count_threshold>
Execute Syntax	N/A
Execute Response	
Unsolicited Response	N/A
Parameter Values	
<speed_threshold>	Speed (in tenths of knots) required to consider device is actually moving (default of 80 = 8.0 knots) when device is considered in a stopped state
<count_threshold>	Number of consecutive speed threshold crossings required to assume device is actually moving (count is incremented or cleared on each report of a GPS NMEA sentence group). Default is 3.
Notes	N/A
Example	N/A

# AT\$ODOMETER GPS Trip Odometer

AT\$ODOMETER	GPS Trip Odometer
Command Function	The \$ODOMETER command records how far the vehicle has traveled total, or in one trip. The user can reset the odometer at the beginning of a new trip. This is identical to the \$TODOM feature, but allows the user to reset this odometer without resetting the other odometer.
Syntax Query	AT\$ODOMETER=?
Syntax	\$ODOMETER: (0-4000000000)
Write Syntax	AT\$ODOMETER=1234 (where 1234 is distance in meters)
Write Response	OK
Read Syntax	AT\$ODOMETER?
Read Response	\$ODOMETER xxxx (xxxx=distance traveled in meters)
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	N/A
Notes	<p>The user is able to set a seed value for the Trip Odometer starting at 0 but not higher than the maximum value of 4000000000.</p> <p>The AT&amp;F command will not reset the odometer value to 0.</p> <p>The Virtual Odometer reading would be a 4-byte value starting from 0 to 4000000000 (maximum of approximately 2500000 miles before it rolls over to 0)</p> <p>The unit for Virtual Odometer shall be in METERS.</p> <p>The Virtual Odometer history shall be updated every second</p> <p>The Virtual Odometer history shall be saved once a minute in modem's memory. This value shall be retained through an internal or external reset and can be read upon the next power up or during run time mode. The delta distance traveled between the minute marks could be lost due to an unexpected external or non-modem originated reset. However, the total distance traveled till the prior minute would still be preserved.</p>

# AT\$PLYCLR Clear Polygonal Geofence

AT\$PLYCLR	Clear Polygonal Geofence
Command Function	This command allows a user to delete all the points for the indicated polygonal geofence (see \$PLYFN#).
Syntax Query	AT\$PLYCLR=?
Syntax	\$PLYCLR: (0-24) OK
Write Syntax	AT\$PLYCLR=<id>
Write Response	OK
Read Syntax	N/A
Read Response	N/A
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<id>	0-24: identifier of geographical polygon (see \$PLYFN#)
Notes	



# AT\$PLYFN# Geo Fencing A Polygonal Area

AT\$PLYFN#	Geo Fencing a Polygonal Area
Command Function	<p>This command allows a user to define up to 25 separate polygonal geographical areas (# can be any number from 0 to 24). The event engine (see AT\$EVENT) can be set up to send a message when the device moves in or out of the geographical area defined by the polygon.</p> <p>Each command defines one of 26 possible vertices or corners. The line segments of the polygon are generated by connecting the non-zero vertices in sequence (for example, point 0 is connected to point 1, which is connected to point 2, etc.). The polygon can be generated in either a clockwise or counterclockwise sequence (see Notes section below for additional details). You can specify your polygon with less than 26 vertices, but the first and last points of the polygon still must be identical</p> <p>The query returns all non-zero locations defined for the polygon as well as all (0,0) vertex locations that serve as a polygon terminator.</p>
Syntax Query	AT\$PLYFN#=?
Syntax	\$PLYFN#: (0-25),(-90.0 - +90.0),(-180.0 - +180.0) OK
Write Syntax	AT\$PLYFN#=<idx>,<latitude>,<longitude>
Write Response	OK
Read Syntax	AT\$PLYFN#?
Read Response	\$PLYFN#: PtIdx Latitude Longitude <idx> <latitude> <longitude> OK
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<idx>	0-25: index for this vertex of the polygon

AT\$PLYFN#	Geo Fencing a Polygonal Area
<latitude>	Defines the latitude for this vertex of the polygon in decimal degrees (for example, 32 degrees 30 minutes 0 seconds would be represented as 32.5 degrees since 30 minutes is exactly 1/2 of a degree). The latitude must be specified in 15 characters (including minus sign and decimal point) or less. This is the same representation for latitude as used in the AT\$GEOFNC command.
<longitude>	Defines the longitude for this vertex of the polygon in decimal degrees (for example, -96 degrees 45 minutes 0 seconds would be represented as -96.75 degrees since 45 minutes is exactly 3/4 of a degree). The longitude must be specified in 15 characters (including minus sign and decimal point) or less. This is the same representation for longitude as used in the AT\$GEOFNC command.
<b>Notes</b>	<p>In general, it is always a good idea to verify the integrity of your polygon description with a mapping tool such as Google Earth. The most common mistake with polygons is to mistype one of the fractional digits in one of the coordinates. When this happens, the polygon you've created with your mapping tool is not the polygon you've entered into this command and you will not get your desired results.</p> <p>The code implements the pnpoly algorithm. The pnpoly algorithm is copyright © 1970-2003, Wm. Randolph Franklin.</p> <p>Regardless of how many points you specify for your polygon, all 26 points are fed to the algorithm. Due to the mathematical nature of this algorithm, the polygon will not work if vertices of the same polygon lie on opposite sides of the 180 degree longitude divide.</p> <p>Although this command accepts latitude/longitude parameters with up to 15 characters, internally the value is stored as a C float type which has less precision (but requires half the storage size). The float type is capable of storing accuracy commensurate with the GPS receiver's capability, but the queried latitude/longitude values of the AT\$PLYFN# command may differ from the input parameters due to this precision limitation.</p>
<b>Example</b>	<p>The following commands create a crude diamond-shaped polygon #9 just west of the Novatel Wireless offices in Richardson, Texas:</p> <pre> AT\$PLYFN9=1,32.995498,-96.722064 AT\$PLYFN9=2,33.000392,-96.715028 AT\$PLYFN9=3,33.008747,-96.722466 AT\$PLYFN9=4,33.001330,-96.732982 AT\$PLYFN9=5,32.995498,-96.722064 </pre>

AT\$PLYFN#	Geo Fencing a Polygonal Area																					
	<p>Here's the query response for that polygon definition:</p> <p>AT\$PLYFN9?</p> <p>\$PLYFN9: PtIdx   Latitude   Longitude</p> <table><tr><td>0</td><td>0.0000000</td><td>0.0000000</td></tr><tr><td>1</td><td>32.9954987</td><td>-96.7220612</td></tr><tr><td>2</td><td>33.0003929</td><td>-96.7150269</td></tr><tr><td>3</td><td>33.0087471</td><td>-96.7224655</td></tr><tr><td>4</td><td>33.0013313</td><td>-96.7329788</td></tr><tr><td>5</td><td>32.9954987</td><td>-96.7220612</td></tr><tr><td>6</td><td>0.0000000</td><td>0.0000000</td></tr></table> <p>OK</p>	0	0.0000000	0.0000000	1	32.9954987	-96.7220612	2	33.0003929	-96.7150269	3	33.0087471	-96.7224655	4	33.0013313	-96.7329788	5	32.9954987	-96.7220612	6	0.0000000	0.0000000
0	0.0000000	0.0000000																				
1	32.9954987	-96.7220612																				
2	33.0003929	-96.7150269																				
3	33.0087471	-96.7224655																				
4	33.0013313	-96.7329788																				
5	32.9954987	-96.7220612																				
6	0.0000000	0.0000000																				

# AT\$PWRSAPV Enable Power Save Mode

AT\$PWRSAPV	Enable Power Save Mode
Command Function	This command allows a user to put the device in low power mode at the <timeout> interval after the Ignition line drops. The ignition line has to be connected per the user manual for this feature to work properly. A user has the capability of getting a notification when the device entering low power mode or returns to normal operating mode.
Syntax Query	AT\$PWRSAPV=?
Syntax	\$PWRSAPV: (0-1),(0-65535),(0-1) OK
Write Syntax	AT\$PWRSAPV=<ign>,<timeout>,<reg>
Write Response	OK
Read Syntax	AT\$PWRSAPV?
Read Response	\$PWRSAPV: 0,0,0 OK
Execute Syntax Execute Response	N/A
Unsolicited Response	N/A
Parameter Values	
<ign>	0 - disable the Ignition feature 1 - enter low power mode after Ignition signal went low and timeout has expired
<timeout>	0 - 65535 seconds. Timeout value after which the unit will enter low power mode. Unit will work in normal mode until the timeout has expired.
<reg>	0 - remain registered with network during low power mode 1 - reset modem when entering normal power mode
Notes	An AT\$EVENT command has to be set to send a GPS message to the remote host when entering or exiting power save mode.  The modem Ignition (switched power) Input must be connected to the vehicles ignition line for this function to work.

# AT\$TODOM Virtual Trip Odometer

AT\$TODOM	Virtual Trip Odometer
Command Function	The \$TODOM command records how far the vehicle has traveled. This is identical to the \$ODOMETER feature, but allows the user to reset this trip odometer without resetting the other odometer.
Syntax Query	AT\$TODOM=?
Syntax	\$TODOM:(0-40000000000) OK
Write Syntax	AT\$TODOM=1234 (where 1234 is distance in meters)
Write Response	OK
Read Syntax	AT\$TODOM?
Read Response	\$TODOM: xxxx (xxxx=distance traveled in meters)
Execute Syntax	N/A
Execute Response	N/A
Unsolicited Response	N/A

<b>AT\$TODOM</b>	<b>Virtual Trip Odometer</b>
<b>Parameter Values</b>	N/A
<b>Notes</b>	<p>The user is able to set a seed value for the Trip Odometer starting at 0 but not higher than the maximum value of 4000000000.</p> <p>The AT&amp;F command will not reset the odometer value to 0. (see example below)</p> <p>The Trip Odometer reading would be a 4-byte value starting from 0 to 4000000000 (maximum of approximately 2500000 miles before it rolls over to 0)</p> <p>The unit for Trip Odometer shall be in meters.</p> <p>The Trip Odometer history shall be updated every second.</p> <p>The Trip Odometer history shall be saved once a minute in modem's memory. This value shall be retained through an internal or external reset and can be read upon the next power up or during run time mode. The delta distance traveled between the minute marks could be lost due to an unexpected reset. However, the total distance traveled till the prior minute would still be preserved.</p> <p>The \$ODOMETER value can trigger the event engine via input event 70. The \$TODOM value can trigger the event engine via input event 91.</p>
<b>Example</b>	<p>Reset Trip Odometer to 0:</p> <p>\$TODOM=0</p>

# AT\$GPSDIS Disable GPS Functionality

<b>AT\$GPSDIS</b>	<b>Disable GPS Functionality</b>
<b>Command Function</b>	This command is used to Enable/Disable GPS functionality
<b>Syntax Query</b>	AT\$GPSDIS=?
<b>Syntax</b>	\$GPSDIS: (0-1) OK
<b>Write Syntax</b>	AT\$ GPSDIS =<MODE>
<b>Write Response</b>	OK
<b>Read Syntax</b>	AT\$ GPSDIS?
<b>Read Response</b>	\$ GPSDIS: <MODE> OK
<b>Execute Syntax</b>	N/A
<b>Execute Response</b>	N/A
<b>Unsolicited Response</b>	N/A
<b>Parameter Values</b>	
<b>&lt;MODE&gt;</b>	0 - GPS Functionality enabled 1 - GPS Functionality disabled
<b>Notes</b>	Command automatically saves the new value to Flash memory. \$GPSCMD will return an error when \$GPSDIS=1.

# Event Tables

---



# Event Engine

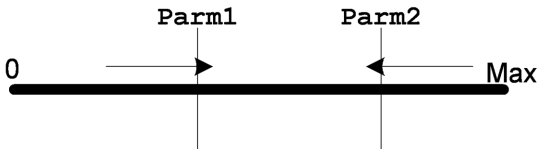
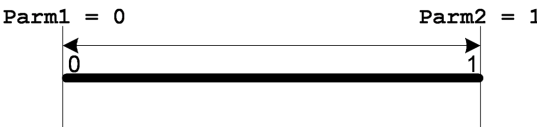
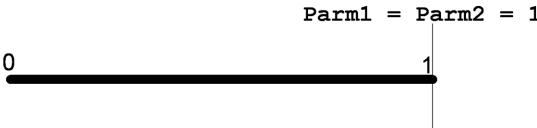
The Novatel Wireless Event Engine is a proprietary state machine that can be initiated by one or many triggering input events (which can be logically “ANDed” and/or “ORed”) to generate one or many pre-defined outputs. The Event Engine allows simple, fast development and deployment into end solutions without the need of proprietary development platforms or embedded applications.


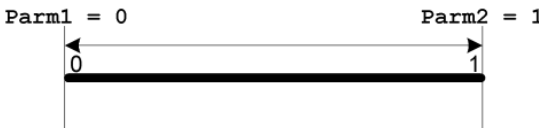
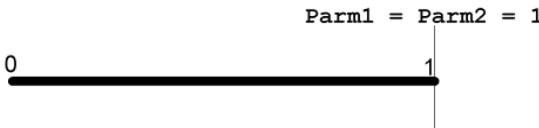
## Event Category

The <event category> parameter defines the actual Input or Output Event number and their valid range for <parm1> and <parm2>.

## Event Type

The <event type> parameter defines the type of event: Input or Output. An Input event can be defined as: Transition, Occurrence, or Input. The Output event is executed when input event conditions are met.

Value	Type of event	Description
0	Transition Trigger	<p>A transition Trigger is defined as an input condition, defined by &lt;event category&gt;, whose value was previously &lt;parm1&gt; or less is now greater than &lt;parm1&gt; and less than &lt;parm2&gt; or was greater or equal to &lt;parm2&gt; is now less than &lt;parm2&gt; but greater than &lt;parm1&gt;. The output event would be executed when an input &lt;event category&gt; requirements are satisfied or transition to the value set by &lt;parm1&gt; and &lt;parm2&gt; when they are equal. &lt;parm1&gt; should be the min value and &lt;parm2&gt; should be the max value.</p> <p><b>Example 1:</b></p>  <p>An output event will be executed when the value of an input event exceeds &lt;Parm1&gt; (previously it was &lt;Parm1&gt; or less) or decreases to a value less than &lt;Parm2&gt; (previously it was &lt;Parm2&gt; or greater).</p> <p><b>Example 2:</b></p>  <p>An output event will be executed when the value of an input event is 0 (previously it was anything else but 0) and &lt;Parm1&gt; along with &lt;Parm2&gt; is set to 0.</p>
		<p><b>Example 3:</b></p>  <p>An output event will be executed when the value of an input event is 1 (previously it was anything else but 1) and &lt;Parm1&gt; along with &lt;Parm2&gt; is set to 1.</p>
1	Occurrence Trigger	<p>An Occurrence Trigger is defined as an input condition, defined by &lt;event category&gt;, whose current value is greater than or equal to &lt;parm1&gt; and less than or equal to &lt;parm2&gt;.</p>

Value	Type of event	Description
		<p>The output event would be executed when an input &lt;event category&gt; requirements are satisfied or transition to the value set by &lt;parm1&gt; and &lt;parm2&gt; when they are equal. &lt;parm1&gt; should be the min value and &lt;parm2&gt; should be the max value.</p> <p><b>Example 1:</b></p>  <p>An output event will be executed when the current value of an input event is between &lt;Parm1&gt; and &lt;Parm2&gt; including boundary conditions.</p> <p><b>Example 2:</b></p>  <p>An output event will be executed when the value of the input event changes from 0 to 1 or vice-versa.</p>
		<p><b>Example 3:</b></p>  <p>An output event will be executed when the value of the input event is 1 and &lt;Parm1&gt; along with &lt;Parm2&gt; is set to 1.</p>
2	Input Trigger	<p>An Input Trigger is defined as an input condition, defined by &lt;event category&gt;, that should be used as a logical AND condition to another input condition defined as Transition Trigger or an Occurrence Trigger.</p> <p>An Output event is not triggered when Input Trigger condition is valid. The input event, defined as Input Trigger, is valid when within the event range defined by &lt;parm1&gt; and &lt;parm2&gt; or when &lt;parm1&gt; and &lt;parm2&gt; are equal.</p>

Value	Type of event	Description
3	Output	<p>An Output event is executed when all input event conditions (defined as Transition Trigger, Occurrence Trigger, or Input Trigger) for that particular &lt;event group&gt; are met.</p> <p><i>Output Event Note: ASCII messages sent by the Event Engine have a maximum length of 250 characters (not including the optional header). Any ASCII messages exceeding this length are truncated.</i></p>

# Input Event Table

The following table defines the values for <event category>, <parm1> and <parm2> parameter for input events defined as a Transition Trigger, Occurrence Trigger, or Input Trigger.

Event Category	Parm1	Parm2	Description
0 - 7	N/A	N/A	Reserved
8	1	1	Modem power up indication
9	0 to 5	0 to 5	Modem GSM registration (see AT+CREG command description for GSM registration status information)
10	0 to 8	0 to 8	Modem GPRS registration (see AT%CGREG command description for GPRS registration status information)
11	0 or 1	0 or 1	Receipt of IP address. 0 = No IP address 1 = Valid IP address obtained
12	1	1	Timer 1 (set by AT\$EVTIM1)
13	1	1	Timer 2 (set by AT\$EVTIM2)
14	1	1	Timer 3 (set by AT\$EVTIM3)
15	1	1	Timer 4 (set by AT\$EVTIM4)
16	0 to 1000000	1000000	GPS Distance (unit of measurement is: meters)  This input event has been replaced by the AT\$ODOMETER (input category 70) or AT\$TODOM (input Category 91) input events for more accurate data on newer devices and scripts. The event remains valid for legacy applications.
17	0 to 250	250	Current Velocity (unit of measurement is: Knots)
18 - 20	N/A	N/A	Reserved
21	0 or 1	0 or 1	Geo Fence #1. See AT\$GEOFNC command for details on setting a circular geo-fence 0 = Leaving Geofence area 1 = Entering Geofence area
22	0 or 1	0 or 1	Geo Fence #2
23	0 or 1	0 or 1	Geo Fence #3
24	0 or 1	0 or 1	Geo Fence #4
25	0 or 1	0 or 1	Geo Fence #5
26	0 or 1	0 or 1	MT Power Save Event

Event Category	Parm1	Parm2	Description
			0 = Exit Power Save Mode 1 = Enter Power Save Mode
27	0 or 1	0 or 1	GPS Status 0 = Invalid GPS data 1 = Valid GPS data
28	1	1	**RTC Alarm Input
29	0 to 1000000	1000000	Invalid GPS data for a period of time (unit of measurement is: seconds)
30	0 to 1000000	1000000	Unit staying Idle in one place (unit of measurement is: seconds)
31	0 or 1	0 or 1	Geo Fence #6. See AT\$GEOFNC command for details on setting a circular geo-fence 0 = Leaving Geofence area 1 = Entering Geofence area
32	0 or 1	0 or 1	Geo Fence #7
33	0 or 1	0 or 1	Geo Fence #8
34	0 or 1	0 or 1	Geo Fence #9
35	0 or 1	0 or 1	Geo Fence #10
36	0 or 1	0 or 1	Geo Fence #11
37	0 or 1	0 or 1	Geo Fence #12
38	0 or 1	0 or 1	Geo Fence #13
39	0 or 1	0 or 1	Geo Fence #14
40	0 or 1	0 or 1	Geo Fence #15
41	0 or 1	0 or 1	Geo Fence #16
42	0 or 1	0 or 1	Geo Fence #17
43	0 or 1	0 or 1	Geo Fence #18
44	0 or 1	0 or 1	Geo Fence #19
45	0 or 1	0 or 1	Geo Fence #20
46	0 or 1	0 or 1	Geo Fence #21
47	0 or 1	0 or 1	Geo Fence #22
48	0 or 1	0 or 1	Geo Fence #23
49	0 or 1	0 or 1	Geo Fence #24
50	0 or 1	0 or 1	Geo Fence #25
51	0	0	**Input Event Counter. This event will occur when a counter reaches the maximum number of a selected Input event count.
52	0 or 1	0 or 1	New SMS indication.

Event Category	Parm1	Parm2	Description
			0 = SMS message read from SIM 1 = New SMS message received
53	0 to -1	0 to -1	Current Input Event Counter count that can be used as an AND condition with other input events
54	0 or 1	0 or 1	Has the user programmed any geo-fence? Normally this can be found by sending AT\$GEOFNC? command and verifying it manually based on the response sent by the device  0 = geo-fence does not exist 1 = at least one geo fence was created
55 - 56	N/A	N/A	Reserved
57	0-2147483647	0-2147483647	Messages to be sent Over-The Air (OTA) Exist
58 - 59	N/A	N/A	Reserved
60	0 - 9999	0 - 9999	Number of Unsent Messages (\$msglogrd count)
61	0 - 100	0 - 100	Memory full percentage (\$msglogrd)
62	0 or 1	0 or 1	Motion Status  0 = Stopped 1 = Moving
63	0 or 1	0 or 1	Power Source  0 = main power not applied 1 = main power applied
64-65	N/A	N/A	Reserved
66	1	1	Timer 5 (set by AT\$EVTIM5)
67	1	1	Timer 6 (set by AT\$EVTIM6)
68	1	1	Timer 7 (set by AT\$EVTIM7)
69	1	1	Timer 8 (set by AT\$EVTIM8)
70	0-2147483647	0-2147483647	Current \$ODOMETER value
71	N/A	N/A	Reserved
72	0-1	0-1	GPS Overspeed  0 = A GPS overspeed interval has ended 1 = A GPS overspeed interval has begun
73 - 90	N/A	N/A	Reserved
91	0	2147483647	Trip odometer (distance in meters)
92 - 99	N/A	N/A	Reserved
100	-2147483648	-2147483648	User variable 0

Event Category	Parm1	Parm2	Description
	to 2147483647	to 2147483647	
101	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 1
102	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 2
103	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 3
104	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 4
105	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 5
106	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 6
107	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 7
108	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 8
109	-2147483648 to 2147483647	-2147483648 to 2147483647	User variable 9
110	N/A	N/A	Reserved
111	0 or 1	0 or 1	GSM_JAMMING_STATE Current state of the GSM jamming detection algorithm. Cleared = 0 Jammed = 1
112 - 118	N/A	N/A	Reserved
119	0 or 1	0 or 1	0= An alternate GPS overspeed interval has ended 1= An alternate GPS overspeed interval has begun
120	0 or 1	0 or 1	Polygon Geofence #0. See \$ATPLYFN# for details on setting a polygonal geofence. 0 = Leaving Geofence area



Event Category	Parm1	Parm2	Description
			1 = Entering Geofence area
121	0 or 1	0 or 1	Polygon Geofence #1
122	0 or 1	0 or 1	Polygon Geofence #2
123	0 or 1	0 or 1	Polygon Geofence #3
124	0 or 1	0 or 1	Polygon Geofence #4
125	0 or 1	0 or 1	Polygon Geofence #5
126	0 or 1	0 or 1	Polygon Geofence #6
127	0 or 1	0 or 1	Polygon Geofence #7
128	0 or 1	0 or 1	Polygon Geofence #8
129	0 or 1	0 or 1	Polygon Geofence #9
130	0 - 2147483647	0 - 2147483647	<p>Bit-mapped value indicating if/why GPS data is being invalidated via \$GPSQUAL filtering:</p> <p>0 = data is good</p> <p>1 = delay interval in progress due to earlier detection of bad uncertainty, heading change, speed, distance and/or acceleration</p> <p>2 = velocity fix flag invalid</p> <p>4 = uncertainty value &gt; threshold</p> <p>8 = \$GPGSA fix type not 3D</p> <p>16 = \$GPGSA HDOP &lt; threshold</p> <p>32 = GPS date invalid</p> <p>64 = GPS time interval suspect</p> <p>128 = speed &gt; threshold</p> <p>256 = acceleration over one sec &gt; threshold</p> <p>512 = heading change over one sec &gt; threshold</p> <p>1024 = # of satellites being tracked &lt; threshold</p> <p>2048 = distance over one sec &gt; threshold</p>
131	N/A	N/A	Reserved
132	0 or 1	0 or 1	Polygon Geofence #10
133	0 or 1	0 or 1	Polygon Geofence #11
134	0 or 1	0 or 1	Polygon Geofence #12
135	0 or 1	0 or 1	Polygon Geofence #13
136	0 or 1	0 or 1	Polygon Geofence #14

Event Category	Parm1	Parm2	Description
137	0 or 1	0 or 1	Polygon Geofence #15
138	0 or 1	0 or 1	Polygon Geofence #16
139	0 or 1	0 or 1	Polygon Geofence #17
140	0 or 1	0 or 1	Polygon Geofence #18
141	0 or 1	0 or 1	Polygon Geofence #19
142	0 or 1	0 or 1	Polygon Geofence #20
143	0 or 1	0 or 1	Polygon Geofence #21
144	0 or 1	0 or 1	Polygon Geofence #22
145	0 or 1	0 or 1	Polygon Geofence #23
146	0 or 1	0 or 1	Polygon Geofence #24
147	1	1	This event is triggered at the completion of a FOTA upgrade after the modem has rebooted with the new firmware (old firmware if the upgrade failed).
148 - 159	N/A	N/A	Reserved
160			<p>Accelerometer direction calibration complete</p> <p>The following Bit mask were added to Message 2 to enable sending OBD2 information:</p> <p>0x00000100 - Accelerometer X, Y, Z values</p> <p>ASCII - 3 values of 5 digits each, values are milliGs for X, Y, Z</p> <p>Binary - 3 values of 2 bytes each (signed), values are milliGs for X, Y, Z</p>
161	0 or 1	0 or 1	<p>OBDII Acceleration Threshold 1</p> <p>0 = Cleared</p> <p>1 = Set</p>
162	0 or 1	0 or 1	OBDII Acceleration Threshold 2
163	0 or 1	0 or 1	OBDII Acceleration Threshold 3
164	0 or 1	0 or 1	OBDII Deceleration Threshold 1
165	0 or 1	0 or 1	OBDII Deceleration Threshold 2
166	0 or 1	0 or 1	OBDII Deceleration Threshold 3
167	0 or 1	0 or 1	OBDII Engine Speed Threshold 1
168	0 or 1	0 or 1	OBDII Engine Speed Threshold 2
169	0 or 1	0 or 1	OBDII Engine Speed Threshold 3
170	0 or 1	0 or 1	OBDII Low Fuel Indication
171	0 or 1	0 or 1	OBDII Engine Idle

Event Category	Parm1	Parm2	Description
172	0 or 1	0 or 1	OBDII Speed Threshold 1
173	0 or 1	0 or 1	OBDII Speed Threshold 2
174	0 or 1	0 or 1	OBDII Speed Threshold 3
175	0 or 1	0 or 1	OBDII Low Battery Indication
176	0 or 1	0 or 1	OBDII Malfunction Indicator Light
177	0 or 1	0 or 1	OBDII Low Power Mode (Modem Off)
178	0 or 1	0 or 1	OBDII Ignition
183	1	1	Timer 9 (set by AT\$EVTIM9)
184	1	1	Timer 10 (set by AT\$EVTIM10)
185	0 or 1	0 or 1	OBD Protocol Discovered
186	0 or 1	0 or 1	OBD Auto-discovery time out
187-191	N/A	N/A	Reserved
192	1 to 2147483647	1 to 2147483647	OBD Trip Odometer (distance in meters) The event will fire when the trip odometer is in between the settings of param 1 and param 2.
193-197	N/A	N/A	Reserved
198	0 or 1	0 or 1	Excessive Acceleration
199	0 or 1	0 or 1	Excessive Deceleration
200	0 or 1	0 to 43200	Triggered when RTC reaches the target check in time (set by AT\$CHKIN)
201	0 or 1	0 or 1	Engine Coolant Temperature above threshold (set by AT\$OBDECT) 1 = above threshold 0 = below threshold
202-204	N/A	N/A	Reserved
205	0 or 1	0 or 1	OBDII Right turn threshold 1
206	0 or 1	0 or 1	OBDII Right turn threshold 2
207	0 or 1	0 or 1	OBDII Left turn threshold 1
208	0 or 1	0 or 1	OBDII Left turn threshold 2
209	0 or 1	0 or 1	OBDII Up threshold 1
210	0 or 1	0 or 1	OBDII Down threshold 1

# Output Event Table

The below table defines the values for <event category>, <parm1> and <parm2> parameter for output events defined as Output.

Event Category	Parm1	Parm2	Description
0 - 10	N/A	N/A	Reserved
11	0	0	Set GPIO #4 configured as Output to Low (0)
12 - 14	N/A	N/A	Reserved
15	0	0	Set GPIO #8 configured as Output to Low (0)
16 - 18	N/A	N/A	Reserved
19	0	0	Set GPIO #4 configured as Output to High (1)
20 - 22	0	0	Reserved
23	0	0	Set GPIO #8 configured as Output to High (1)
24 - 26	N/A	N/A	Reserved
27	0	0	Toggle GPIO #4 configured as Output
28 - 30	N/A	N/A	Reserved
31	0	0	Toggle GPIO #8 configured as Output
32 - 34	N/A	N/A	Reserved
35	<a href="#">See GPIO Flash Table</a>		Flash GPIO #4 configured as Output (GPS LED)
36 - 38	N/A	N/A	Reserved
39	<a href="#">See GPIO Flash Table</a>		Flash GPIO #8 configured as Output (GSM LED)
40	0 to 214783647	<a href="#">See Bit-Field Table</a>	Generate and transmit one UDP Message to first IP address listed in \$FRIEND command and port number listed in \$UDPAPI command based on Parm1 and Parm2 values
41			Generate and transmit a UDP message with Acknowledge. This message is controlled by \$ACKTM command for number of retries sent. This message has to be acknowledged to avoid sending of retries.
42			Generate and transmit one UDP Message to all IP address listed in \$FRIEND command and port number listed in \$UDPAPI command based on Parm1 and Parm2 values
43	1 - 8	0	Resets the timer (Timer #1 - Timer #8) specified by Parm1 to the time (in seconds) specified by Parm2. Parm2, when set to 0, resets the timer to the time last set by \$EVTIMx command or previous output event 43 execution.

Event Cat-egory	Parm1	Parm2	Description
			A value other than 0 would set the timer to expire at the new specified interval (e.g. xx,3,43,1,180 would set timer 1 to expire in 180 seconds). When used with a value other than 0, this is equivalent to invoking \$EVTIMx directly from the event engine and subsequent AT&F commands will save the new value to flash.
44	1 – 25	0	Execute AT command stored at index number of the \$STOATEV command. Parm1 identifies the index number.
45	0 to 2147483647	<a href="#">See Bit-Field Table</a>	Sends data over SMS to All SMS destination addresses configured via \$SMSDA command. (For select \$SMSDA entries, see event categories 54-58)
46	N/A	N/A	Reserved
47	0	0 to -1	Input Event Counter
48	0	0 to -1	Input Event Counter reset to value stated by parm2
49	1 – 25	0 - 1000000	Set geo-fence specified by parm1 to current latitude & longitude with radius specified by parm2
50	0 – 57	0 to -1	Emulate AT\$EVTEST command viaevent engine. Parm1 is the input event number while Parm2 is the value to emulate for the input event
51	N/A	N/A	Reserved
52	0 to -1	<a href="#">See Bit-Field Table</a>	Generate and transmit one TCP/IP Message to IP address & port number listed by \$FRIEND command based on Parm1 and Parm2 values
53	0 – 99	0 – 8	Sets periodic RTC alarm in minutes, hours, days, or months.  Parm1 indicates the frequency with which to generate the message.  Parm2 indicates the unit with which to generate the message.  For example:  Parm1 Parm2 Result 11 RTC Alarm occurs every minute 12 RTC Alarm occurs every hour 14 RTC Alarm occurs every day 18 RTC Alarm occurs every month
54	0 to	<a href="#">See Bit-</a>	Sends data over SMS to the first indexed SMS des-

Event Category	Parm1	Parm2	Description
	2147483647	<a href="#">Field Table</a>	termination address configured via \$SMSDA command.
55	0 to 2147483647		Sends data over SMS to the second indexed SMS destination address configured via \$SMSDA command.
56	0 to 2147483647		Sends data over SMS to the third indexed SMS destination address configured via \$SMSDA command.
57	0 to 2147483647		Sends data over SMS to the fourth indexed SMS destination address configured via \$SMSDA command.
58	0 to 2147483647		Sends data over SMS to the fifth indexed SMS destination address configured via \$SMSDA command.
59	N/A	N/A	Reserved
60	0 to -1	<a href="#">See Bit-Field Table</a>	Generate and transmit message to main serial port based on Parm1 and Parm2 values in ASCII format only.
61 - 124	N/A	N/A	Reserved
125	0 - 9	- 2147483648 to 2147483647	Sets user variable indicated by parm1 to value of parm2 (for example, if parm1 is 7 and parm2 is 50, this output event would set user variable 7 to 50)
126	0 - 9	- 2147483648 to 2147483647	Increments user variable indicated by parm1 by value of parm2 (for example, if parm1 is 4, parm2 is 100, and user variable 4 was 200 prior to this event, user variable 4 would be incremented to 300 by this event)
127	0 - 9	- 2147483648 to 2147483647	Decrements user variable indicated by parm1 by value of parm2 (for example, if parm1 is 9, parm2 is 10, and user variable 9 was 50 prior to this event, user variable 9 would be decremented to 40 by this event)
128	0 - 9	- 2147483648 to 2147483647	Copies value of a system variable into user variable indicated by parm1. Parm2 is used as an index to determine the system variable that will be copied (see User Variable Index Table).
129 - 146	N/A	N/A	Reserved
147	0	1	Save circular GPS AI2 buffer to /cst/ai2log in FFS (used to debug unexpected GPS behavior).
148	0 to 214783647	<a href="#">See Bit-Field Table</a>	Generate and Transmit TCP message to IP address & port listed in \$FRIEND
149	0 to	<a href="#">See Bit</a>	Generate and Transmit UDP message to IP first address

Event Category	Parm1	Parm2	Description
	214783647	<a href="#">Field Table</a>	listed in \$FRIEND, port listed in \$UDPAPI
150	0 to 214783647	<a href="#">See Bit Field Table</a>	Generate and Transmit UDP message to IP address listed in \$FRIEND requiring ACK, port listed in \$UDPAPI
151	0 to 214783647	<a href="#">See Bit Field Table</a>	Generate and Transmit UDP message to IP all addresses listed in \$FRIEND requiring ACK, port listed in \$UDPAPI
152	0	0	Send UDP message to the check-in servers specified in the \$FRIEND list. This event sends a wakeup style message to every server in the friends list with usage=4.
153-200	N/A	N/A	Reserved
201	0 to 1	0 to 1	Main Power Removed 0 = main power applied 1 = main power not applied

# User Variable Index Table

This table is used only with Output Event 128

Parm2	System Variable Copied to User Variable
	<p>(For example, AT\$EVENT=99,3,128,3,9 would copy value of Input Event 9 (GSM registration status) into User Variable 3).</p> <p>NOTE: All the following system variables are not supported by all devices. Ensure your device supports the system variable before attempting to use it with user variables.</p> <p>For Serving Cell and Neighbor Cell values, see GSM0000GN012 - Engineering Mode Manual for details of the %EM command.</p>
-500	Hardware ID
-499 to -474	Reserved
-473	Copies Neighbor Cell 5 signal strength. Equivalent to AT%EM=2,3
-472	Copies Neighbor Cell 5 absolute radio frequency channel number (ARFCN). Equivalent to AT%EM=2,3
-471	Copies Neighbor Cell 5 cell ID. Equivalent to AT%EM=2,3
-470	Copies Neighbor Cell 5 location area code. Equivalent to AT%EM=2,3
-469 to -464	Reserved
-463	Copies Neighbor Cell 4 signal strength. Equivalent to AT%EM=2,3
-462	Copies Neighbor Cell 4 absolute radio frequency channel number (ARFCN). Equivalent to AT%EM=2,3
-461	Copies Neighbor Cell 4 cell ID. Equivalent to AT%EM=2,3
-460	Copies Neighbor Cell 4 location area code. Equivalent to AT%EM=2,3
-459 to -454	Reserved
-453	Copies Neighbor Cell 3 signal strength. Equivalent to AT%EM=2,3
-452	Copies Neighbor Cell 3 absolute radio frequency channel number (ARFCN). Equivalent to AT%EM=2,3
-451	Copies Neighbor Cell 3 cell ID. Equivalent to AT%EM=2,3



-450	Copies Neighbor Cell 3 location area code. Equivalent to AT%EM=2,3
-449 to -444	Reserved
-443	Copies Neighbor Cell 2 signal strength. Equivalent to AT%EM=2,3
-442	Copies Neighbor Cell 2 absolute radio frequency channel number (ARFCN). Equivalent to AT%EM=2,3
-441	Copies Neighbor Cell 2 cell ID. Equivalent to AT%EM=2,3
-440	Copies Neighbor Cell 2 location area code. Equivalent to AT%EM=2,3
-439 to -434	Reserved
-433	Copies Neighbor Cell 1 signal strength. Equivalent to AT%EM=2,3
-432	Copies Neighbor Cell 1 absolute radio frequency channel number (ARFCN). Equivalent to AT%EM=2,3
-431	Copies Neighbor Cell 1 cell ID. Equivalent to AT%EM=2,3
-430	Copies Neighbor Cell 1 location area code. Equivalent to AT%EM=2,3
-429 to -424	Reserved
-423	Copies Neighbor Cell 0 signal strength. Equivalent to AT%EM=2,3
-422	Copies Neighbor Cell 0 absolute radio frequency channel number (ARFCN). Equivalent to AT%EM=2,3
-421	Copies Neighbor Cell 0 cell ID. Equivalent to AT%EM=2,3
-420	Copies Neighbor Cell 0 location area code. Equivalent to AT%EM=2,3
-419 to -407	Reserved
-406	Copies Serving Cell timing advance. Equivalent to AT%EM=2,1
-405	Copies Serving Cell signal strength. Equivalent to AT%EM=2,1
-404	Copies Serving Cell absolute radio frequency channel number (ARFCN). Equivalent to AT%EM=2,1
-403	Copies Serving Cell cell ID. Equivalent to AT%EM=2,1
-402	Copies Serving Cell location area code. Equivalent to AT%EM=2,1
-401	Copies Serving Cell MNC (0x00MMNNCC, where MM, NN, and CC are the hex values of the ASCII representations of the MNC). Equivalent to AT%EM=2,4

-400	Copies Serving Cell MCC (0x00MMCCcc, where MM, CC, and cc are the hex values of the ASCII representations of the MCC) . Equivalent to AT%EM=2,4
-399 to -303	Reserved
-302	Copies Software version (for example, if version is 1.1.1.8, value would be 0x00001118)
-301	Copies product ID
-300	Copies \$usrval value
-299 to -53	Reserved
-52	Vehicle speed = LSB = 1 kph
-51	LSB = 1/4 RPM (a value of 4000 is 1000 RPM)
-50	Engine Coolant Temperature
-49 to -42	Reserved
-41	<p>Copies GPIO value status where LSB represents GPIO0. For example: 0x00165432</p> <p>2=binary 0010 (so GPIO1=1; GPIO0, GPIO2, GPIO3=0)</p> <p>3=binary 0011 (so GPIO4,GPIO5=1; GPIO6,GPIO7=0)</p> <p>4=binary 0100 (so GPIO10=1; GPIO8,GPIO9,GPIO11=0)</p> <p>5=binary 0101 (so GPIO12,GPIO14=1; GPIO13,GPIO15=0)</p> <p>6=binary 0110 (so GPIO17,GPIO18=1; GPIO16,GPIO19=0)</p> <p>1=binary 0001 (so GPIO20=1)</p> <p>Note: GPIO numbers &gt;8 are not supported on the MT-G<math>\mu</math></p>
-40	<p>Copies GPIO direction status where LSB represents GPIO0 (1=input,0-output). For example: 0x00165432</p> <p>2=binary 0010 (so GPIO1=input; GPIO0, GPIO2, GPIO3= outputs)</p> <p>3=binary 0011 (so GPIO4,GPIO5=inputs; GPIO6,GPIO7=outputs)</p> <p>4=binary 0100 (so GPIO10=input; GPIO8,GPIO9,GPIO11=outputs)</p> <p>5=binary 0101 (so GPIO12,GPIO14=inputs; GPIO13,GPIO15=outputs)</p> <p>6=binary 0110 (so GPIO17,GPIO18=inputs; GPIO16,GPIO19=outputs)</p> <p>1=binary 0001 (so GPIO20=input)</p> <p>Note: GPIO numbers &gt;8 are not supported on the MT-G<math>\mu</math></p>

-39 to -22	Reserved
-21	Copies current RTC time: 0x00HHMMSS where HH = hour (0-23), MM = minute (0-59), SS = second (0-59)
-20	Copies current RTC date: 0x00YYMMDD where YY = last two digits of year (00-99), MM = month (1-12), DD = day of month (1-31)
-19 to -9	Reserved
-8	Copies current count of event timer 8 in seconds (equivalent to \$EVTIMQRY=8)
-7	Copies current count of event timer 7 in seconds (equivalent to \$EVTIMQRY=7)
-6	Copies current count of event timer 6 in seconds (equivalent to \$EVTIMQRY=6)
-5	Copies current count of event timer 5 in seconds (equivalent to \$EVTIMQRY=5)
-4	Copies current count of event timer 4 in seconds (equivalent to \$EVTIMQRY=4)
-3	Copies current count of event timer 3 in seconds (equivalent to \$EVTIMQRY=3)
-2	Copies current count of event timer 2 in seconds (equivalent to \$EVTIMQRY=2)
-1	Copies current count of event timer 1 in seconds (equivalent to \$EVTIMQRY=1)
0	Copies value of Input Event 0 (GPIO1). 0 = Low 1 = High
1	Copies value of Input Event 1 (GPIO2). 0 = Low 1 = High
2	Copies value of Input Event 2 (GPIO3). 0 = Low 1 = High
3	Copies value of Input Event 3 (GPIO4). 0 = Low 1 = High

4	Copies value of Input Event 4 (GPIO5). 0 = Low 1 = High
5	Copies value of Input Event 5 (GPIO6). 0 = Low 1 = High
6	Copies value of Input Event 6 (GPIO7). 0 = Low 1 = High
7	Copies value of Input Event 7 (GPIO8). 0 = Low 1 = High
8	Copies value of Input Event 8 (modem power up indication). Always 1.
9	Copies value of Input Event 9 (modem GSM registration). See AT+CREG command description for GSM registration status information.
10	Copies value of Input Event 10 (modem GPRS registration). See AT%CGREG command for GPRS registration status information.
11	Copies value of Input Event 11 (Receipt of IP address). 0 = No IP address 1 = Valid IP address obtained
12	Copies value of Input Event 12 (Timer 1 status). 0 = Timer not expired 1 = Timer expired
13	Copies value of Input Event 13 (Timer 2 status). 0 = Timer not expired 1 = Timer expired
14	Copies value of Input Event 14 (Timer 3 status). 0 = Timer not expired 1 = Timer expired
15	Copies value of Input Event 15 (Timer 4 status).

	0 = Timer not expired 1 = Timer expired
16	Copies value of Input Event 16 (GPS distance in meters)
17	Copies value of Input Event 17 (Maximum velocity in knots)
18	Copies value of Input Event 18 (ADC1 status)
19 to 20	Reserved
21	Copies value of Input Event 21 (Geofence #1) 0 = Leaving geofence area 1 = Entering geofence area
22	Copies value of Input Event 22 (Geofence #2) 0 = Leaving geofence area 1 = Entering geofence area
23	Copies value of Input Event 23 (Geofence #3) 0 = Leaving geofence area 1 = Entering geofence area
24	Copies value of Input Event 24 (Geofence #4) 0 = Leaving geofence area 1 = Entering geofence area
25	Copies value of Input Event 25 (Geofence #5) 0 = Leaving geofence area 1 = Entering geofence area
26	Copies value of Input Event 26 (MT Power Save Event) 0 = Exit Power Save Mode 1 = Enter Power Save Mode
27	Copies value of Input Event 27 (GPS status) 0 = Invalid GPS data 1 = Valid GPS data
28	Copies value of Input Event 28 (RTC Alarm Input)
29	Copies value of Input Event 29 (Invalid GPS data for a period of seconds)
30	Copies value of Input Event 30 (Unit staying Idle in one place for a period of

	seconds)
31	Copies value of Input Event 31 (Geofence #6) 0 = Leaving geofence area 1 = Entering geofence area
32	Copies value of Input Event 32 (Geofence #7) 0 = Leaving geofence area 1 = Entering geofence area
33	Copies value of Input Event 33 (Geofence #8) 0 = Leaving geofence area 1 = Entering geofence area
34	Copies value of Input Event 34 (Geofence #9) 0 = Leaving geofence area 1 = Entering geofence area
35	Copies value of Input Event 35 (Geofence #10) 0 = Leaving geofence area 1 = Entering geofence area
36	Copies value of Input Event 36 (Geofence #11) 0 = Leaving geofence area 1 = Entering geofence area
37	Copies value of Input Event 37 (Geofence #12) 0 = Leaving geofence area 1 = Entering geofence area
38	Copies value of Input Event 38 (Geofence #13) 0 = Leaving geofence area 1 = Entering geofence area
39	Copies value of Input Event 39 (Geofence #14) 0 = Leaving geofence area 1 = Entering geofence area
40	Copies value of Input Event 40 (Geofence #15) 0 = Leaving geofence area 1 = Entering geofence area

41	Copies value of Input Event 41 (Geofence #16) 0 = Leaving geofence area 1 = Entering geofence area
42	Copies value of Input Event 42 (Geofence #17) 0 = Leaving geofence area 1 = Entering geofence area
43	Copies value of Input Event 43 (Geofence #18) 0 = Leaving geofence area 1 = Entering geofence area
44	Copies value of Input Event 44 (Geofence #19) 0 = Leaving geofence area 1 = Entering geofence area
45	Copies value of Input Event 45 (Geofence #20) 0 = Leaving geofence area 1 = Entering geofence area
46	Copies value of Input Event 46 (Geofence #21) 0 = Leaving geofence area 1 = Entering geofence area
47	Copies value of Input Event 47 (Geofence #22) 0 = Leaving geofence area 1 = Entering geofence area
48	Copies value of Input Event 48 (Geofence #23) 0 = Leaving geofence area 1 = Entering geofence area
49	Copies value of Input Event 49 (Geofence #24) 0 = Leaving geofence area 1 = Entering geofence area
50	Copies value of Input Event 50 (Geofence #25) 0 = Leaving geofence area 1 = Entering geofence area

51	Copies value of Input Event 51 (Input Event Counter)
52	Copies value of Input Event 52 (New SMS indication) 0 = SMS message read from SIM 1 = New SMS message received
53	Copies value of Input Event 53 (Current Input Event Counter count that can be used as an AND condition with other input events)
54	Copies value of Input Event 54 (Does any geofence exist?) 0 = geofence does not exist 1 = at least one geofence was created
55 to 64	Reserved
65	Copies value of Input Event 64 (Receipt of incoming call with Call Identifier matching one of the numbers configured via the \$EVCID command)
66	Copies value of Input Event 66 (Timer 5 status). 0 = Timer not expired 1 = Timer expired
67	Copies value of Input Event 67 (Timer 6 status). 0 = Timer not expired 1 = Timer expired
68	Copies value of Input Event 68 (Timer 7 status). 0 = Timer not expired 1 = Timer expired
69	Copies value of Input Event 69 (Timer 8 status). 0 = Timer not expired 1 = Timer expired
70	Copies value of Input Event 70 (Odometer in meters)
71	Reserved
72	Copies value of Input Event 72 (GPS overspeed) 0 = interval has ended 1 = interval has begin
73 to 85	Reserved



86 to 99	Reserved
100	Copies value of Input Event 100 (User variable 0)
101	Copies value of Input Event 101 (User variable 1)
102	Copies value of Input Event 102 (User variable 2)
103	Copies value of Input Event 103 (User variable 3)
104	Copies value of Input Event 104 (User variable 4)
105	Copies value of Input Event 105 (User variable 5)
106	Copies value of Input Event 106 (User variable 6)
107	Copies value of Input Event 107 (User variable 7)
108	Copies value of Input Event 108 (User variable 8)
109	Copies value of Input Event 109 (User variable 9)
110-191	Reserved
192	Copies value of Input Event 192 (OBD Trip odometer in meters)

# GPIO Flash Table

## Parm1

Bits 16 – 31 determine the low signal state while bits 0 – 15 determine the high signal state. A value of 0 for bits 16 – 31 indicates the GPIO will remain in low signal state for the same amount of time as the high signal state (50% duty cycle). The high or low states are measured in multiples of  $\frac{1}{4}$  seconds. The toggle count is set by Parm2

## Parm2

The flashing GPIO event will cause the GPIO output state to toggle at time 0 to the opposite state prior to starting the GPIO output flash event processing. This counts as toggle #1. An even number of toggle count will force a final state which is the same as the initial state. An odd number of toggle count will force the final state to be opposite of the initial GPIO output condition. 0 = toggle forever.



Warning:  
Flashing GPIO 3 on the MT 3000 will damage the device.

---

# Bit Field Tables

## Bit-Field Table Selection

Use the table below to determine which of the four bit-field tables (0-3) to use for the Parm2 value.

Bit 31	Bit 30	Description
0	0	Table selector 0. Format message based on Parm2 values using Message Format Table 0 (legacy format)
0	1	Reserved
1	0	Table selector 2. Format message based on Parm2 values using Message Format Table 2 This table is for User Variables.
1	1	Reserved

## Bit-Field Table 0 – Legacy (0,0)

The Parm2 value is obtained as a result of selecting individual bit-fields from the table below.

Bit	Description
Bit 0:	1 = send all data generated as a result of this table in Binary format 0 = send all data generated as a result of this table in ASCII format
Bit 1:	1 = add parm1 data to UDP message (4 - bytes in Binary format, 11 - bytes of data in ASCII format) 0 = do not add parm1 data to outbound UDP message
Bit 2:	1 = add \$MDMID value (22 - bytes of ASCII data - irrespective of Bit- 0 setting) 0 = do not add \$MDMID value
Bit 3:	1 = add GPIO data and direction (2 bytes binary or 6 bytes ASCII) * 0 = do not add GPIO data *GPIO 8 data and direction will not be reported for this product. OBD ignition state will be reported in its place.
Bit 4:	Peak Engine Speed (LSB=1/4 RPM) The reported peak engine speed is the peak from the last time that the engine speed exceeded the Excessive Engine Speed 1 threshold.
Bit 5:	1 = add ADC-2 value (2 bytes binary or 5 bytes ASCII) 0 = do not add ADC-2 value
Bit 6:	1 = Message is stored in non-volatile memory until it can be sent, regardless of network status

	0 = Code checks network status before storing message in non-volatile memory. If it appears that the message can be sent out immediately (network status is clear and message queue has few or no messages pending), the message is stored in non-volatile message queue until it can be sent. Otherwise, the message is deleted.
Bit 7:	1 = add input <event category> number (1 - byte in binary format, 3 - bytes in ASCII format) 0 = do not add input <event category> number
Bit 8:	1 = add GPS data (3 - bytes of Date information in Binary format or up to 80 - bytes of \$GPGGA NMEA message if Bit-0 is set to 0) 0 = do not add this particular field of GPS data
Bit 9:	1 = add 1-byte of GPS STATUS information in Binary 0 = do not add this particular field of GPS data  NOTE: The values for the GPS status are: 0 - no GPS fix 1 - valid GPS fix 9 - data is last valid GPS fix (only used if bit 19 is 1)
Bit 10:	1 = add GPS data (3 - bytes of Latitude information in Binary format or up to 80 - bytes of \$GPGSA NMEA message if Bit-0 is set to 0) 0 = do not add this particular field of GPS data
Bit 11:	1 = add GPS data (4 - bytes of Longitude information in Binary format or up to 80 - bytes of \$GPGSA NMEA message if Bit-0 is set to 0) 0 = do not add this particular field of GPS data
Bit 12:	1 = add GPS data (2 - bytes of Velocity information in Binary format or up to 80 - bytes of \$GPRMC NMEA message if Bit-0 is set to 0) 0 = do not add this particular field of GPS data
Bit 13:	1 = add 2-bytes of GPS HEADING information in Binary 0 = do not add this particular field of GPS data
Bit 14:	1 = add GPS data (3 - bytes of Time information in Binary format or 0 bytes if Bit-0 is set to 0) 0 = do not add this particular field of GPS data
Bit 15:	1 = add GPS data (3 - bytes of Altitude information in Binary format or 0 bytes if Bit-0 is set to 0) 0 = do not add this particular field of GPS data
Bit 16:	1 = add GPS data (1 - byte of Number Of Satellites In View information in Binary format or 0 bytes if Bit-0 is set to 0) 0 = do not add this particular field of GPS data
BIT 17:	1 = Disable sending message when in Low Power (\$PWRSAPV) Mode 0 = Enable sending message when in Low Power (\$PWRSAPV) Mode
Bit 18:	1 = send this OTA message via SMS when GPRS services is not available 0 = send this OTA message via GPRS only
Bits 19:	1 = send Last Valid GPS data if current data is invalid 0 = send current GPS data - valid or invalid  NOTE: If the msg format is ASCII, this bit is 1 and the GPS fix is not valid, the GPS status field in the RMC message will be '9', indicating that the data is from the last valid GPS fix. If the msg format is binary, see bit 9.

Bit 20:	<p>1 = add GPS Odometer reading (4 - bytes of Odometer information in Binary format or 11 - bytes if Bit-0 is set to 0)</p> <p>0 = do not add this particular field of GPS data</p>
Bit 21:	<p>1 = add RTC time (6 - bytes of RTC time in Binary format or 13 - bytes if Bit-0 is set to 0)</p> <p>0 = do not add RTC time with GPS data</p>
Bit 22:	<p>1 = Replace/append modem ID field with 10-byte modem ID (including one leading and one ending space character) if bit-0 is set to 0. Replace/append it with 8-bytes long modem ID value if bit-0 is set to 1 (no leading or ending space characters in binary mode). (NOTE: bit-22 setting overrides bit-2 setting)</p> <p>0 = send the modem ID as defined by Bit-2</p>
Bit 23:	Reserved
Bit 24:	<p>1 = add GPS overspeed data (6 - bytes of Overspeed information in Binary format or 6 to 18 - bytes if Bit-0 is set to 0).</p> <p>Binary format: xxyyzz: xx is speed specified by AT\$GPSOSI (unit: knots); yy is the maximum speed incurred during the interval (unit: knots, 1/10 knot accuracy); zz is the interval duration (unit: seconds);</p> <p>ASCII format: " x y z": space delineated, length of each field varies with its value</p> <p>0 = do not add this particular field of GPS data</p>
Bit 25:	<p>1= Add cell information as follows: (See GSM0000TN012 - Engineering Mode Manual for details of the %EM AT command)</p> <p>If Binary format (Bit0=1) is selected, please refer to the "Bit 25 Binary Format" table</p> <p>If ASCII format (Bit0=0) is selected, please refer to the "Bit 25 Binary Format" table</p> <p>0 = Do not add PCELL data</p>
Bit 26:	<p>1 = add Alternate GPS overspeed data (6 - bytes of Overspeed information in Binary format or 6 to 18 - bytes if Bit-0 is set to 0).</p> <p>Binary format: xxyyzz: xx is speed specified by AT\$GPSOSI (unit: knots); yy is the maximum speed incurred during the interval (unit: knots, 1/10 knot accuracy); zz is the interval duration (unit: seconds);</p> <p>ASCII format: " x y z": space delineated, length of each field varies with its value</p> <p>0 = do not add this particular field of GPS data</p>
Bit 27:	<p>OBD2 Info (VIN, OBD protocol, Novatel Wireless Firmware version, RSSI)</p> <p>1 = Add OBDII Data (VIN, OBD Protocol, PKG, RSSI)</p> <p>0 = Do not add OBDII Data</p>

	<p>Data Format:</p> <p>VIN</p> <p>Binary - 20 bytes (nul char padding at end of VIN)</p> <p>ASCII - a space delimiter followed by 20 chars for the VIN.</p> <p>The VIN is padded with leading spaces if less than 20 chars.</p> <p>OBD Protocol</p> <p>Binary - 1 byte</p> <p>ASCII - a space delimiter followed by 3 digits for the protocol.</p> <p>If the protocol is less than 3 digits, it will be padded with leading spaces.</p> <p>FW Version</p> <p>Binary - 4 bytes</p> <p>ASCII - a space delimiter followed by 6 chars for the FW version</p> <p>RSSI (received signal strength indicator)</p> <p>Binary - 1 byte</p> <p>ASCII - a space delimiter followed by 2 digits for the RSSI</p>
Bit 28:	<p>1 = Add OBDII Malfunction Indicator Light (MIL) Data</p> <p>0 = Do not add OBDII MIL Data</p> <p>Data Format:</p> <p>Binary - 1 byte containing the number of MIL codes to follow. If 1 or more codes, each code is 2 additional bytes.</p> <p>ASCII - a space delimiter followed by 2 digits containing the number of MIL codes. If 1 or more codes, the count is followed by a space and 4 hexadecimal chars for each code. Subsequent codes are separated by a comma.</p>
BIT 29:	<p>1 = Add OBDII Trip Odometer Data</p> <p>0 = Do not add OBDII Trip Odometer Data</p> <p>Data Format:</p> <p>Binary - 4 bytes</p> <p>ASCII - a space delimiter followed by 7 digits for the trip distance.</p>
Bits 30 - 31:	Reserved

## Bit-Field Table 2 – (1,0)

This table is for User Variables.

The Parm2 value is obtained as a result of selecting individual bit-fields from the table below.

Bit	Description
Bit 0:	1 = send all data generated as a result of this table in Binary format 0 = send all data generated as a result of this table in ASCII format
Bit 1:	1 = Add parm1 data to message (4 bytes in binary format, 11 bytes of data in ASCII format) 0 = do not add parm1 data to outbound message
Bit 2:	1 = add \$MDMID value (22 bytes of ASCII data irrespective of Bit 0 setting) 0 = do not add \$MDMID value
Bits 3-5:	<p>Bit 3 is least significant in the following description:</p> <p>000 = Do not add user variables to message.</p> <p>001 = Add user variables 0-9 to message, starting with user variable 0 (4 bytes per user variable in binary format, 8 hex bytes per user variable in ASCII format). Spaces are inserted between the different user variables.</p> <p>010 = Add only user variable 0 to message (4 bytes per user variable in binary format, 8 hex bytes per user variable in ASCII format).</p> <p>011 = Add only user variables 0-1 to message(4 bytes per user variable in binary format, 8 hex bytes per user variable in ASCII format). Spaces are inserted between the different user variables.</p> <p>100 = Add only user variables 0-2 to message (4 bytes per user variable in binary format, 8 hex bytes per user variable in ASCII format). Spaces are inserted between the different user variables.</p> <p>101 = Add only user variables 0-3 to message (4 bytes per user variable in binary format, 8 hex bytes per user variable in ASCII format). Spaces are inserted between the different user variables.</p> <p>110 = Add only user variables 0-5 to message (4 bytes per user variable in binary format, 8 hex bytes per user variable in ASCII format). Spaces are inserted between the different user variables.</p> <p>111 = Add only user variables 0-7 to message (4 bytes per user variable in binary format, 8 hex bytes per user variable in ASCII format). Spaces are inserted between the different user variables.</p>
Bit 6:	<p>1 =Message is stored in non-volatile memory until it can be sent, regardless of network status.</p> <p>0 = Check network status before storing message in non-volatile memory. If it appears that the message can be sent out immediately (network status is clear and message queue has few or no messages pending), the message is stored in the non-volatile message queue until it can be sent. Otherwise, the message is deleted.</p>
Bit 7:	<p>1 = add input &lt;event category&gt; number (1 byte in binary format, 3 bytes in ASCII format)</p> <p>0 = do not add input &lt;event category&gt; number</p>
Bit 8	<p>BIT 8: Accelerometer X, Y, Z values</p> <p>ASCII - 3 values of 5 digits each, values are milliGs for X, Y, Z</p> <p>Binary - 3 values of 2 bytes each (signed), values are milliGs for X, Y, Z</p>
Bits 9-14	Reserved
Bits 15-17	<p>Bit 15 is the least significant in the following description:</p> <p>000 = Do not add GPS data to message.</p>

	<p>001 – Include GPS latitude, longitude, velocity and heading in message.</p> <p>If Bit0 = 1 (binary), GPS data is added to the message in the following sequence:</p> <p>Latitude = 3 bytes. For example, if \$GPRMC latitude is 3259.815430,N, then the three bytes would be 31BDA7 (3259815).</p> <p>Longitude = 4 bytes. For example, if \$GPRMC longitude is 09642.854492,W, then the four bytes would be FF6CDC9A (-9642854).</p> <p>Velocity = 2 bytes in tenths of knots. For example, if \$GPRMC velocity is 21.1 knots, then the two bytes would be 00D3 (211).</p> <p>Heading = 2 bytes in tenths of degrees. For example, if \$GPRMC heading is 357.9 degrees, then the two bytes would be 0DF8 (3579).</p> <p>If Bit0 = 0 (ASCII), GPS data is formatted as described above, then converted to ASCII HEX (effectively doubling the number of bytes required to contain the information) before being inserted into the message. There are no spaces between the various GPS data fields.</p> <p>010 – If Bit0 = 0 (ASCII), include \$GPRMC sentence in message. If Bit0 = 1 (binary), include GPS date, latitude, longitude, velocity, heading and time in message in the following sequence:</p> <p>Date = 3 bytes. For example, if \$GPRMC date is 290611, then the three bytes would be 046F33 (290611).</p> <p>Latitude = 3 bytes. For example, if \$GPRMC latitude is 3259.815430,N, then the three bytes would be 31BDA7 (3259815).</p> <p>Longitude = 4 bytes. For example, if \$GPRMC longitude is 09642.854492,W, then the four bytes would be FF6CDC9A (-9642854).</p> <p>Velocity = 2 bytes in tenths of knots. For example, if \$GPRMC velocity is 21.1 knots, then the two bytes would be 00D3 (211).</p> <p>Heading = 2 bytes in tenths of degrees. For example, if \$GPRMC heading is 357.9 degrees, then the two bytes would be 0DF8 (3579).</p> <p>Time = 3 bytes. For example, if \$GPRMC time is 162916.00, then the three bytes would be 027c64 (162916).</p> <p>011 – Include GPS date, latitude, longitude, velocity and time in message.</p> <p>If Bit0 = 1 (binary), GPS data is added to the message in the following sequence:</p> <p>Date = 3 bytes. For example, if \$GPRMC date is 290611, then the three bytes would be 046F33 (290611).</p> <p>Latitude = 3 bytes. For example, if \$GPRMC latitude is 3259.815430,N, then the three bytes would be 31BDA7 (3259815).</p> <p>Longitude = 4 bytes. For example, if \$GPRMC longitude is 09642.854492,W, then the four bytes would be FF6CDC9A (-9642854).</p> <p>Velocity = 2 bytes in tenths of knots. For example, if \$GPRMC velocity is 21.1 knots, then the two bytes would be 00D3 (211).</p> <p>Time = 3 bytes. For example, if \$GPRMC time is 162916.00, then the three bytes would be 027c64 (162916).</p> <p>If Bit0 = 0 (ASCII), GPS data is formatted as described above, then converted to ASCII HEX (effectively doubling the number of bytes required to contain the information) before being inserted into the message. There are no spaces between the various GPS data fields.</p> <p>100 – Include GPS date, latitude, longitude, velocity, heading, date, time, altitude and number of satellites used in solution in message.</p> <p>If Bit0 = 1 (binary), GPS data is added to the message in the following sequence:</p> <p>Date = 3 bytes. For example, if \$GPRMC date is 290611, then the three bytes would be 046F33 (290611).</p> <p>Latitude = 3 bytes. For example, if \$GPRMC latitude is 3259.815430,N, then the three bytes would be 31BDA7 (3259815).</p>
--	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



	<p>Longitude = 4 bytes. For example, if \$GPRMC longitude is 09642.854492,W, then the four bytes would be FF6CDC9A (-9642854).</p> <p>Velocity = 2 bytes in tenths of knots. For example, if \$GPRMC velocity is 21.1 knots, then the two bytes would be 00D3 (211).</p> <p>Heading = 2 bytes in tenths of degrees. For example, if \$GPRMC heading is 357.9 degrees, then the two bytes would be 0DF8 (3579).</p> <p>Time = 3 bytes. For example, if \$GPRMC time is 162916.00, then the three bytes would be 027c64 (162916).</p> <p>Altitude = 3 bytes. For example, if \$GPGGA altitude is 177.7 meters, then the three bytes would be 0000B1 (177).</p> <p>Number of satellites = 1 byte. For example, if \$GPGGA number of satellites being tracked is 10, then this byte would be 0A (10).</p> <p>If Bit0 = 0 (ASCII), GPS data is formatted as described above, then converted to ASCII HEX (effectively doubling the number of bytes required to contain the information) before being inserted into the message. There are no spaces between the various GPS data fields.</p> <p>101 - Reserved for future expansion (no assignments currently performed).</p> <p>110 - Reserved for future expansion (no assignments currently performed).</p> <p>111 - Reserved for future expansion (no assignments currently performed).</p>
Bit 18:	<p>1 = send this OTA message via SMS when GPRS services is not available</p> <p>0 = send this OTA message via GPRS only</p>
Bits 19-20	Reserved
Bit 21:	<p>1 = add RTC time (6 bytes of RTC time in binary format or 13 bytes in ASCII format)</p> <p>0 = do not add RTC time</p>
Bit 22:	<p>1 = Replace/append modem ID field with 10-byte modem ID (including one leading and one ending space character) in ASCII format. Replace/append modem ID with 8 bytes long modem ID value in binary format (no leading or ending space characters in binary format).</p> <p>(NOTE: Bit 22 setting overrides Bit 2 setting) 0 = send the modem ID as defined by Bit 2</p> <p>0 = send the modem ID as defined by Bit 2</p>
Bit 23:	<p>Excessive Acceleration Data</p> <p>ASCII format: 14 bytes HHMMSS,LLL,MMM</p> <p>HHMMSS - time at start of event</p> <p>LLL - length of event in seconds</p> <p>MMM - max acceleration/deceleration</p> <p>Binary format: 5 bytes -</p> <p>3 bytes (HMS) time at start of event</p> <p>1 byte length of event in seconds</p>

	1 byte max acceleration/deceleration
Bit 24:	<p>Excessive Deceleration Data</p> <p>ASCII format: 14 bytes HHMMSS,LLL,MMM</p> <p>HHMMSS - time at start of event</p> <p>LLL - length of event in seconds</p> <p>MMM - max acceleration/deceleration</p> <p>Binary format: 5 bytes -</p> <p>3 bytes (HMS) time at start of event</p> <p>1 byte length of event in seconds</p> <p>1 byte max acceleration/deceleration</p>

# OBD Bit Field Tables

## OBD BIT-FIELD TABLE SELECTION

Use the table below to determine which of the four bit-field tables (0-3) to use for the Parm2 value.

Bit-Field Table Selection		
Bit 31	Bit 30	Description
0	0	Table selector 0. Format message based on Parm2 values using Message Format Table 0 (OBD format)
0	1	Reserved
1	0	Reserved
1	1	Reserved

## BIT-FIELD TABLE 0 – OBD (0,0)

The Parm2 value is obtained as a result of selecting individual bit-fields from the table below.

Bit-Field Table 0 – OBD (0,0)	
Parm2	Description
Bit 0:	1 = send all data generated as a result of this table in Binary format
	0 = send all data generated as a result of this table in ASCII format
Bit 1:	1 = add parm1 data to UDP message (4 – bytes in Binary format, 11 – bytes of data in ASCII format)
	0 = do not add parm1 data to outbound UDP message
Bit 2:	1 = add \$MDMID value (22 – bytes of ASCII data – irrespective of Bit- 0 setting)
	0 = do not add \$MDMID value
Bit 3:	Reserved
Bit 4:	Peak Engine Speed (LSB=1/4 RPM)  The reported peak engine speed is the peak from the last time that the engine speed exceeded the Excessive Engine Speed 1 threshold.
Bit 5:	Reserved
Bit 6:	1 = Message is stored in non-volatile memory until it can be sent, regardless of network status.
	0 = Code checks network status before storing message in non-volatile memory. If it appears that the message can be sent out immediately (network status is clear and message queue has few or no messages pending), the message is stored in the non-volatile message queue until it can be sent. Otherwise, the message is deleted.
Bit 7:	1 = add input <event category> number (1 – byte in binary format, 3 – bytes in ASCII format)
	0 = do not add input <event category> number
Bit 8:	1 = add GPS data (3 – bytes of Date information in Binary format or up to 80 – bytes of \$GPGGA NMEA message if Bit-0 is set to 0)

	0 = do not add this particular field of GPS data
Bit 9:	1 = add 1-byte of STATUS information in Binary
	0 = do not add this particular field of GPS data
Bit 10:	1 = add GPS data (3 - bytes of Latitude information in Binary format or up to 80 - bytes of \$GPGSA NMEA message if Bit-0 is set to 0)
	0 = do not add this particular field of GPS data
Bit 11:	1 = add GPS data (4 - bytes of Longitude information in Binary format or up to two 80 - bytes of \$GPGSV NMEA message if Bit-0 is set to 0)
	0 = do not add this particular field of GPS data
Bit 12:	1 = add GPS data (2 - bytes of Velocity information in Binary format or up to 80 - bytes of \$GPRMC NMEA message if Bit-0 is set to 0)
	0 = do not add this particular field of GPS data
Bit 13:	1 = add 2-bytes of HEADING information in Binary
	0 = do not add this particular field of GPS data
Bit 14:	1 = add GPS data (3 - bytes of Time information in Binary format or 0 bytes if Bit-0 is set to 0)
	0 = do not add this particular field of GPS data
Bit 15:	1 = add GPS data (3 - bytes of Altitude information in Binary format or 0 bytes if Bit-0 is set to 0)
	0 = do not add this particular field of GPS data
Bit 16:	1 = add GPS data (1 - byte of Number Of Satellites In View information in Binary format or 0 bytes if Bit-0 is set to 0)
	0 = do not add this particular field of GPS data
Bit 17:	Reserved
Bit 18:	1 = send this OTA message via SMS when GPRS services is not available
	0 = send this OTA message via GPRS only
Bit 19:	1 = send Last Valid GPS data if current data is invalid
	0 = send current GPS data - valid or invalid
Bit 20:	1 = add Odometer reading (4 - bytes of Odometer information in Binary format or 11 - bytes if Bit-0 is set to 0)
	0 = do not add this particular field of GPS data
Bit 21:	1 = add RTC time (6 - bytes of RTC time in Binary format or 13 - bytes if Bit-0 is set to 0)
	0 = do not add RTC time with GPS data
Bit 22:	1 = Replace/append modem ID field with 10-byte modem ID (including one leading and one ending space character) if bit-0 is set to 0. Replace/append it with 8-bytes long modem ID value if bit-0 is set to 1 (no leading or ending space characters in binary mode.)
	(NOTE: bit-22 setting overrides bit-2 setting)
	0 = Sent the modem ID as defined by Bit-2
Bit 23:	Reserved
Bit 24:	Reserved
Bit 25:	1 = add fuel level
	Reserved
Bit 26:	Reserved

Bit 27:	OBD2 Info (VIN, OBD protocol, Novatel Wireless Firmware version, RSSI)
	1 = Add OBDII Data (VIN, OBD Protocol, PKG, RSSI)
	0 = Do not add OBDII Data
	Data Format:  VIN: Binary - 20 bytes (null char padding at end of VIN) ASCII - a space delimiter followed by 20 chars for the VIN. The VIN is padded with leading spaces if less than 20 chars.  OBD Protocol: Binary - 1 byte ASCII - a space delimiter followed by 3 digits for the protocol. If the protocol is less than 3 digits, it will be padded with leading spaces  FW Version: Binary - 4 bytes ASCII - a space delimiter followed by 6 chars for the FW version  RSSI (received signal strength indicator): Binary - 1 byte ASCII - a space delimiter followed by 2 digits for the RSSI
Bit 28:	1 = Add OBDII Malfunction Indicator Light (MIL) Data
	0 = Do not add OBDII MIL Data
	Data Format: Binary - 1 byte containing the number of MIL codes to follow. If 1 or more codes, each code is 2 additional bytes. ASCII - a space delimiter followed by 2 digits containing the number of MIL codes. If 1 or more codes, the count is followed by a space and 4 hexadecimal chars for each code. Subsequent codes are separated by a comma.
BIT 29:	1 = Add OBDII Trip Odometer Data
	0 = Do not add OBDII Trip Odometer Data
	Data Format: Binary - 4 bytes ASCII - a space delimiter followed by 7 digits for the trip distance.
Bits 30 – 31:	Reserved

# Appendix - Result Codes

---

# Result Codes

Modem Verbose Response	Modem Terse Response	Definition
OK	0	command successful completed; ready
CONNECT	1	entering data transfer state
RING	2	Ring indication detected
NO CARRIER	3	connection terminated
ERROR	4	Command abnormally completed, ready
NO DIALTONE	6	Dial tone not found
BUSY	7	Busy signal detected
NO ANSWER	8	connection completion timeout

# UNSOLICITED RESULT Codes

Result Code	Definition	AT Command
+CCCM: <ccm>	Current call meter value	AT+CACM=1
+CCWA: <number>,<type> ,<class> [,<alpha>]	Call Waiting Status	AT+CCWA=1
+CLAV: <code>	ME Language Change	AT+CLAE=1
+CLIP: <number>,<type>[,<subaddr> , <satype> [,<alpha>]]	Calling Line Identification Presentation	AT+CLIP=1
+CME ERROR: <err>	ME Error Result Code	AT+CMEE=x
+COLP: <number>,<type>[,<subaddr> , <satype>[,<alpha>]]	Connected Line Identification Presentation	AT+COLP=1
+CR: <type>	Service Reporting Control	AT+CR=1
+CREG: <stat>[,<lac>,<ci>]	Registration status indication	AT+CREG=1
+CRING: <type>	Incoming Call Indication	AT+CR=1
+CSSI: <code1>[,<index>]	Supplementary Services Result Code	AT+CSSN=1,1
+CSSU: <code2>[,<index>[,<number> , <type>[,<subaddr>,<satype>]]]	Supplementary Services Result Code	AT+CSSN=1,1
+CUSD: <m>[,<str>,<dcs>]	Indication of Incoming USSD	AT+CUSD=1

Result Code	Definition	AT Command
	String	
+CGREG: <stat>[,<lac>,<ci>]	Registration Status	AT+CGREG=1

## SMS Unsolicited Result Codes

Result Code	Definition	AT Command
+CMTI: <mem>,<index>	Indication of new short message	AT+CNMI=1,1
+CMT: <length><CR><LF><pdu>	Short Message output Directly to TE (PDU mode)	AT+CNMI=1,2
+CBM: <sn>,<mid>,<dcs>,<page>,<pages><CR><LF><data>	Incoming Cell Broadcast Message routed directly to TE	AT+CNMI=1,0,2
+CDS: <length><CR><LF><pdu>	SMS status report routed directly to the TE	AT+CNMI=1,0,0,1, AT+CSMP=49,



# Appendix - Error Codes

---

# General Error Codes

Modem Numeric Response	Modem Verbose Response
0	phone failure
1	no connection to phone
2	phone-adaptor link reserved
3	operation not allowed
4	operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	memory full
21	invalid index
22	not found
23	memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long

Modem Numeric Response	Modem Verbose Response
27	invalid characters in dial string
30	no network service
31	network timeout
32	network not allowed - emergency calls only
40	network personalization PIN required
41	network personalization PUK required
42	network subset personalization PIN required
43	network subset personalization PUK required
44	service provider personalization PIN required
44	service provider personalization PIN required
45	service provider personalization PUK required
46	corporate personalization PIN required
47	corporate personalization PUK required
48	SIM personalization PIN required
49	SIM personalization PUK required
100	unknown

## Network Error Codes

Modem Numeric Response	Modem Verbose Response
25 (19)	LLC or SMDCP error
26 (1a)	Insufficient resources
27 (1b)	Unknown or missing access point name
28 (1c)	Unknown PDP address or PDP type
29 (1d)	User authentication failed
30 (1e)	Activation reject by GGSN
31 (1f)	Activation rejected, unspecified
32 (20)	Service option not supported
33 (21)	Requested service option not subscribed
34 (22)	Service option temporarily out of order
35 (23)	NSAPI already used
36 (24)	Regular PDP context deactivation
37 (25)	QoS not accepted
38 (26)	Network Failure
39 (27)	Reactivation requested
40 (28)	Feature not supported
103	Illegal MS
106	Illegal ME
107	Data services not allowed
111	PLMN not allowed
112	Location area not allowed
113	Roaming not allowed in this location area
132	service option not supported
133	requested service option not subscribed
134	service option temporarily out of order

Modem Numeric Response	Modem Verbose Response
148	unspecified data network error
149	PDP authentication failure
150	invalid mobile class

## SMS Error Codes (+CMS)

Modem Numeric Response	Modem Verbose Response
1	unassigned (unallocated) number
8	operator determined barring
10	call barred
21	short message transfer rejected
27	destination out of service
28	unidentified subscriber
29	facility rejected
30	unknown subscriber
38	network out of order
41	temporary failure
42	congestion
47	resources unavailable, unspecified
50	requested facility not subscribed
69	requested facility not implemented
81	invalid short message transfer ref. value
95	invalid message, unspecified
96	invalid mandatory information
97	message type non-existent or not implemented

Modem Numeric Response	Modem Verbose Response
98	message not compatible with SM protocol state
99	information element non-existent or not impl.
111	protocol error, unspecified
127	interworking, unspecified
128	telematic interworking not supported
129	short message type 0 not supported
130	cannot replace short message
143	unspecified TP-PID error
144	data coding scheme (alphabet) not supported
145	message class not supported
159	unspecified TP-DCS error
160	command cannot be actioned
161	command unsupported
175	unspecified TP-Command error
176	TPDU not supported
192	SC busy
193	no SC subscription
194	SC system failure
195	invalid SME address
196	destination SME barred
197	SM rejected-duplicate SM
208	SIM SMS storage full
209	no SMS storage capability in SIM
210	error in MS
211	memory capacity exceeded

Modem Numeric Response	Modem Verbose Response
255	unspecified error cause
300	ME failure
301	SMS service of ME reserved
302	operation not allowed
303	operation not supported
304	invalid PDU mode parameter
305	invalid text mode parameter
310	SIM not inserted
311	SIM PIN required
312	PH-SIM PIN required
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	memory failure
321	invalid memory index
322	memory full
330	SMSC address unknown
331	no network service
332	network timeout
340	no +CNMA acknowledgement expected
500	unknown error
512	failed to abort
197	SM rejected-duplicate SM

# Release Causes For Extended Error Reporting (+CEER)

Error	Description
1	unassigned number
-1,255	no error
3	no route to destination
6	channel unacceptable
8	operator determined barring
16	normal call clearing
17	user busy
18	no user responding
19	user alerting
21	call rejected
22	number changed
26	non selected user clearing
27	destination out of order
28	invalid number format
29	facility rejected
30	response to status enquiry"
31	normal
34	no channel available
38	network out of order
41	temporary failure
42	switching equipment congestion
43	access information discarded



Error	Description
44	requested channel unavailable
47	resources unavailable
49	quality of service unavailable
50	requested facility unsubscribed
55	incoming calls barred within CUG
57	bearer capability not authorized
58	bearer capability not available
63	service not available
65	bearer service not implemented
68	ACM reached ACM maximum
69	facility not implemented
70	only restricted bearer cap. avail.
79	service not implemented
81	invalid TI
87	no member of CUG
88	incompatible destination
91	invalid transit network selection
95	incorrect message
96	invalid mandatory information
97	message type not implemented
98	message type incompatible
99	info element not implemented
100	conditional info element error
101	message incompatible
102	recovery on time expiry
101	unsuccessful data network attach

Error	Description
102	unsuccessful PDP context activation
103	data network detach
104	Data network PDP context deactivation
128	No Service
202	timer 303 expiry
203	establishment failure
210	no error
211	operation failed
212	timeout
213	bearer service not compatible

## Extended Error Codes

Error Code	Description
0	"parameter not allowed"
1	"data corrupted",
2	"internal error",
3	"call table full",
4	"service table full"
5	"call not found",
6	"no data-call supported"
7	"one call on hold",
8	"hold call not supported for this type"
9	"number not allowed by FDN"
10	"number not allowed by BDN"
11	"parallel USSD not supported"
12	"fax minimum speed condition"
13	"conflict with command details"

Error Code	Description
14	"not allowed by ALS-Lock"
15	"IMEI illegal"
16	"SIM not ready"

# Index

---

## \$

\$ACKTM	168	\$GEOFNC	314, 340, 351
\$ALTOSI	310	\$GFDBNC	315
\$APIOPT	129	\$GFDEL	316
\$APIPWD	132	\$GPSCMD	317
\$AREG	29, 104, 204, 224, 269	\$GPSDIS	345
\$ATEXEC	178	\$GPSFD	318
\$ATPASSWD	133	\$GPSFLT	319
\$CHKIN	135, 138, 357	\$GPSLCL	324
\$CMDPORT	21, 149	\$GPSLNA	326
\$CREG	206	\$GPSOSI	327, 375
\$DEVTYPE	258	\$GPSQUAL	329
\$ETSAV	237	\$GPSRD	331
\$EVCID	238	\$GPSRST	333
\$EVDEL	157, 240, 253	\$GPSVAL	335
\$EVDELA	241	\$HBRST	19
\$EVDELR	242	\$ICCID	256
\$EVENT	130, 151, 157, 239, 243, 248, 253, 314, 339, 342, 362	\$IGNDBNC	257
\$EVGQRY	245	\$IODBNC	257
\$EVNTRY	246	\$MDMID	139, 147
\$EVTEST	247, 359	\$MDSTAT	258
\$EVTIM	248	\$MLQSI	140
\$EVTIMQRY	249	\$MSGLOGCL	142
\$EVTOFF	144, 250	\$MSGLOGDMP	143
\$EVTQRY	251	\$MSGLOGEN	145
\$EXCACC	312	\$MSGLOGRD	145-146
\$EXCDEC	313	\$MSGSDND	148
\$FFS	180	\$NETIP	126, 207, 259
\$FLFILT	124	\$NETMON	207
\$FOTACFG	172, 175	\$OBDACL	280
\$FOTAGET	173-174	\$OBDADN	281
\$FOTAUPG	173, 176	\$OBDADT	282
\$FRIEND	137, 149, 153, 157	\$OBDALT	283
\$FTPABORT	183	\$OBDAM	284
\$FTPBLK	184	\$OBDART	286
\$FTPFCFG	185	\$OBDAP	287
\$FTPCHDIR	186	\$OBDAT	275, 288
\$FTPCLOSE	187	\$OBDDBT	277, 290
\$FTPDIR	188	\$OBDDBS	278, 291
\$FTPGET	179, 189	\$OBDCUT	292
\$FTPOPEN	184, 190	\$OBDDCL	293
\$FTPPUT	191	\$OBDDSC	294
\$FTPR	192	\$OBDECT	295, 357
\$FTPRST	193	\$OBDEES	296
\$GATEWAY	125	\$OBDFAC	297
		\$OBDSAV	298
		\$OBDSPE	299
		\$OBDSPE	300
		\$OBDSPE	301
		\$OBDSPE	302
		\$OBDSPE	303
		\$OBDSPE	23, 304
		\$OBDSPE	305
		\$OBDSPE	306

\$OBDVER	308
\$ODOCFG	336
\$ODOMETER	337, 351
\$OFF	263
\$PADDST	149
\$PING	127
\$PKG	6, 259
\$PLYCLR	338
\$PWRSV	342
\$QCMGD	79
\$QCMGF	80, 82
\$QCMGL	81
\$QCMGR	83
\$QCMGS	84
\$QCMGW	85
\$QCMSS	78
\$QCNMI	86
\$QCPMS	87
\$QCSMP	89
\$RESET	304
\$RTCALRM	195, 202
\$RTCCLRA	196-197
\$RTCRSET	198
\$RTCTIME	200
\$RTCWAKE	202
\$SIMDTC	269
\$SMSDA	149-150, 152
\$SMSDAEN	151-152
\$SMSURC	90
\$SNDMSG	153
\$STOATEV	47, 149, 252, 292
\$TCPAPI	149, 160, 166
\$TCPIDLETO	162
\$TCPRESTRT	163, 166
\$TCPRETRYTO	164
\$TCPSRC	165
\$TCPSTATS	166
\$TCPURC	167
\$TODOM	343
\$UDPAPI	154, 170
\$UDPMSG	154
\$USRVAL	254
\$WAKEUP	137, 139, 156

## %

%CGAATT	205
%CGPCO	119
%CGPPP	120-121
%CGREG	211, 259, 351, 366
%CSTAT	264
%EM	265, 362
%MEPD	266

%SIMIND	268
%SLEEP	270
%SNCNT	158

## &

&F	21, 142, 147, 241, 318, 337, 344, 359
&V	22
&W	23, 37-41, 237, 244, 247, 250, 310, 327

## +

+++	48
+CACM	385
+CBST	209
+CCWA	385
+CEER	24, 259
+CFUN	26, 269
+CGACT	104, 259
+CGANS	105
+CGATT	106
+CGAUTO	107
+CGCLASS	108
+CGDCONT	104, 109, 115, 120, 205
+CGEREP	111, 113
+CGEV	113
+CGMI	8
+CGMM	9
+CGMR	10
+CGPADDR	114
+CGQMIN	115
+CGREG	386
+CGREQ	116
+CGSMS	118
+CGSN	11
+CIMI	51
+CLAE	385
+CLCK	52, 213, 228, 273
+CLCKCFG	55, 267
+CLCKCP	56, 267
+CLCKSP	58, 267
+CLIP	216, 385
+CMEE	27, 385
+CMGD	92
+CMGF	91, 94, 96
+CMGL	93
+CMGR	95
+CMGS	3, 96
+CMGW	97
+CMSS	98
+CNMI	99, 386
+CNUM	60, 218
+COLP	219, 385

+COPN	61, 220
+COPS	62, 221, 259
+CPIN	28, 205, 223, 259
+CPLS	225
+CPMS	102
+CPOL	64-65, 226
+CPUC	30
+CPWD	227, 272
+CR	229, 385
+CRC	3, 385
+CREG	230, 259, 351, 366, 385
+CRES	31-32
+CRLP	70, 232
+CSAS	31-32
+CSCS	33
+CSMP	386
+CSQ	67, 233, 259
+CSSN	72, 385
+CSTA	34
+CUSD	75, 385
+FCLASS	35
+GCAP	36
+GMI	12
+GMM	13
+GMR	14
+GSN	15
+WS46	16

## A

ATD	46, 76, 110, 122
ATE	37
ATH	48
ATI	3, 17
ATQ	38
ATS3	39
ATS4	40
ATS5	41
ATV	42
ATX	43, 47
ATZ	44