

BRAVIA

Hotel/Pro mode settings manual (FY15 Android model)




1. Initial Setup like at time of regular purchase
2. Network Settings and other various settings
3. Entering “Hotel/Pro settings mode”
4. “Hotel/Pro settings” screen
5. Setting Hotel/Pro mode
6. Entering “Hotel/Pro mode”
7. Using “Export” function
8. Using “Import” function


- Initial Setup like at time of regular purchase.
See the instruction manual for details.




Welcome screen

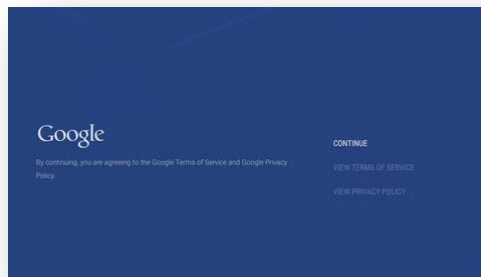

Region/Country etc.

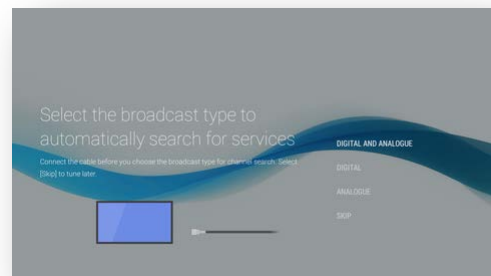

Broadcast settings


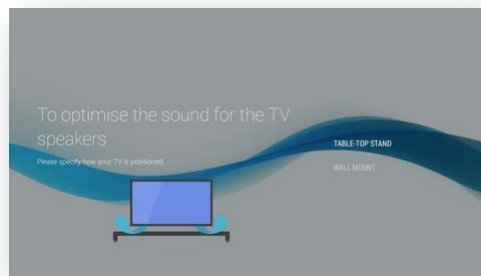


Speaker settings



Completed screen

- Network Settings
 - Connect TV to network via Wired-LAN or WiFi.
 - Entrance of setting : “HOME” – “Settings” – “Network Settings”
 - *After setting, check connection status in “HOME” – “Settings” – “Advanced settings” – “Network Status”

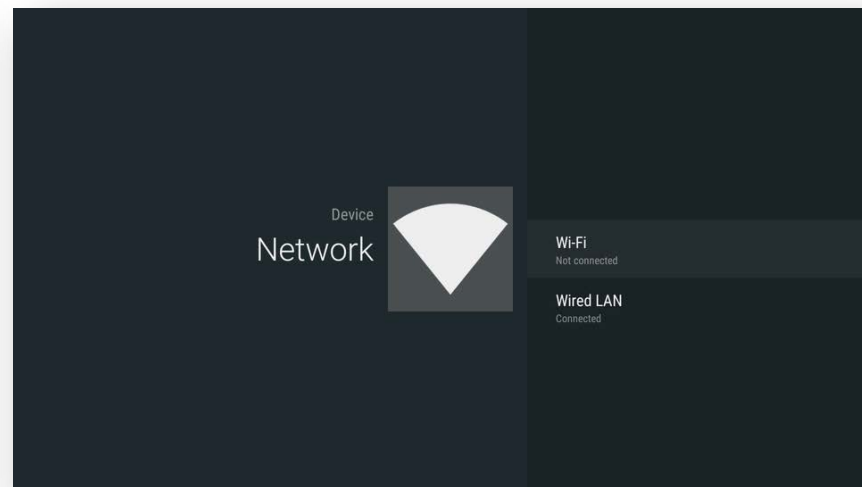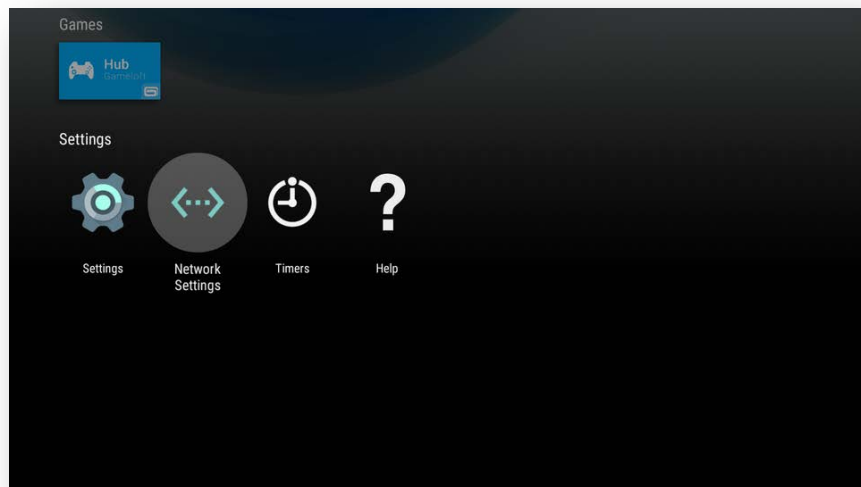

- Others Settings
 - Entrance of settings : “HOME” – “Settings” – “Settings”

Major setting items are following.

Setting Item	Details
Channel Setup	"Channel", "Info banner"
External inputs	"Manage inputs" : Enable input selection and label inputs "BRAVIA Sync settings" : Setup BRAVIA Sync compatible devices for streamlined control
Picture&Display	"Picture adjustments", "Screen", "Dynamic range"
Sound	"Sound adjustments", "Speakers" etc.
Power	"Eco": Change the settings related to power consumption (Power saving, Idle TV standby, Auto shut-off)

* These items of setting can not be changed in “HOTEL/Pro mode”.

3. Entering “Hotel/Pro settings mode”

Procedure

1. Power on BRAVIA. (when already powered on, you can skip.)
2. Press following keys on your remote continuously.
 - “Display” ⇒ “MUTING” ⇒ “VOL+” ⇒ “HOME”
 - * each interval less than 1 sec.
 - If it’s successful,
 “Hotel / Pro Settings in process” banner will be shown without rebooting.

*If you want to back to “normal mode”,
same key sequence is available.*


* See for detail: [Appendix: Mode Transition](#)

Hotel / Pro Settings in process




4. “Hotel/Pro settings mode” screen


- In “Hotel/Pro settings mode”,
 - “Hotel / Pro Settings in process” banner will be shown on upper side.
 - “Hotel/Pro settings” item will be shown on “HOME” menu.

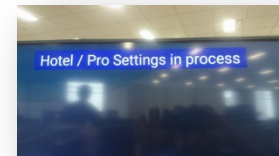

Consumer mode(Normal)

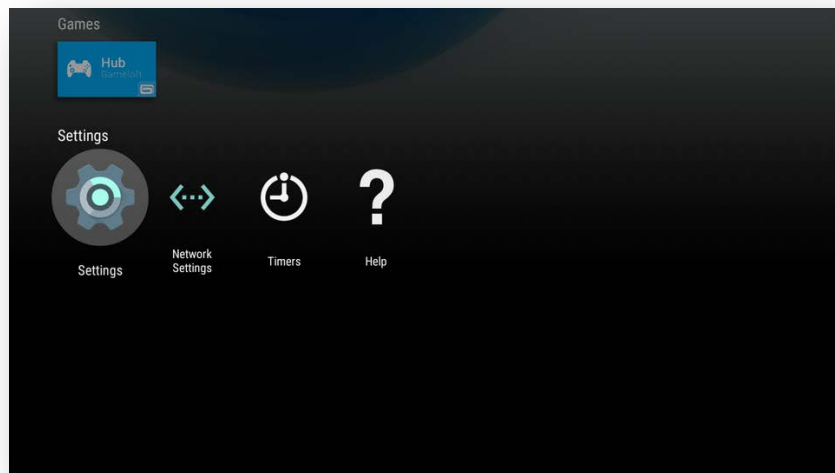

Hotel / Pro Settings mode


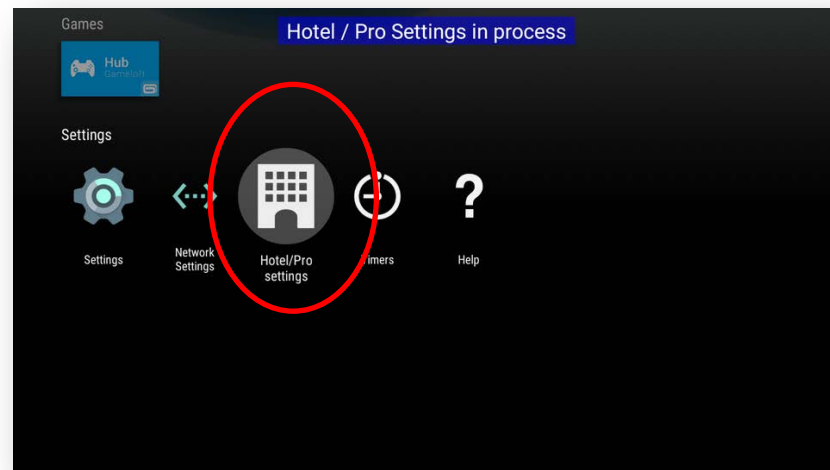


5. Setting Hotel/Pro mode

1. Select “Hotel/Pro settings” item in “Settings” category on “HOME” menu.

2. Multiple items for Hotel/Pro settings will be shown. Setup it.

** See for detail of settings, check next page.*

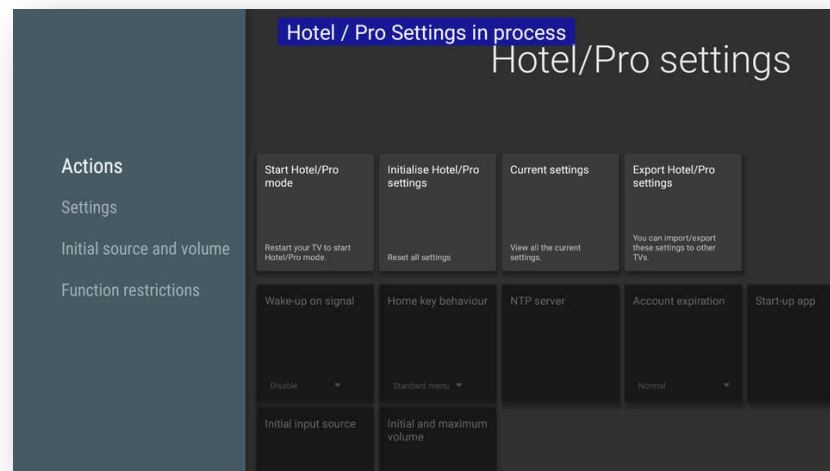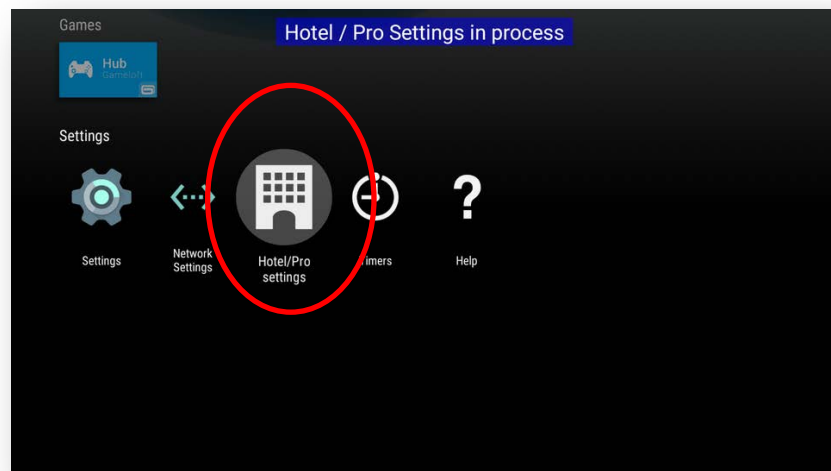

5. Setting Hotel/Pro mode


Category	Setting Item	Available value (Default value : RED character)
Settings	Wake up on signal	Disable / Always enabled / Specified hours
	Home Key behavior	Standard menu / Custom menu / Standard and custom menu
	NTP Server	"blank" (Input URL)
	Account Expiration	Normal / Until TV turns off
	Startup App	"blank" (Input URL)
Input source and volume	Initial input source	Default / External input / Startup app
	Initial and maximum volume	Off / Initial volume(0-100), Maximum volume(0-100)
Function restrictions	TV/Remote control	Enable / Disable
	Wide mode key	Enable / Disable
	Screen mirroring	Enable / Disable
	External Input (HDMI1-4, Video/Component)	Use with labels / Disable
	Built-in Tuner (Cable/Antenna)	Use / Not use
	Apps	Enable / Enable(Limited) / Disable

Procedure


1. Check settings value with “Current settings” screen.
(Select “Actions” - “Current settings”)
2. Change Hotel/Pro mode with UI menu.
(Select “Actions” – “Start Hotel/Pro Mode”)
3. Confirmation Dialog will be shown, select “OK(RESTART)”.
(After rebooting, then it is Hotel/Pro mode.)

If you want to return from “Hotel/Pro mode”, check following page.


[Appendix: Mode Transition](#)

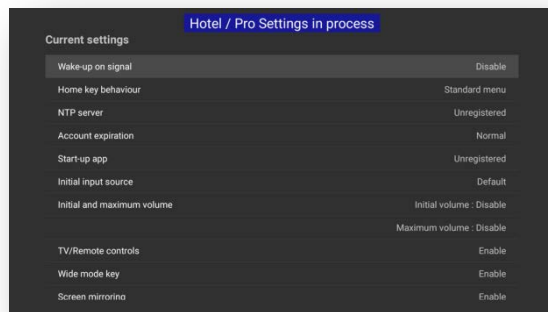

Check current settings

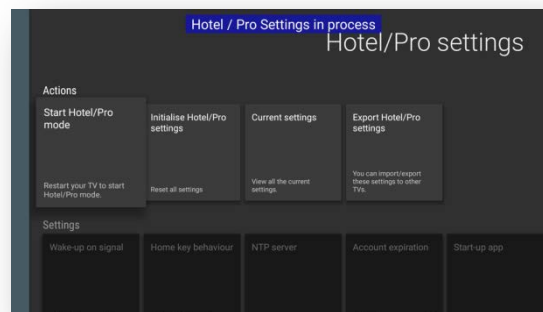

UI menu for changing Hotel/Pro mode



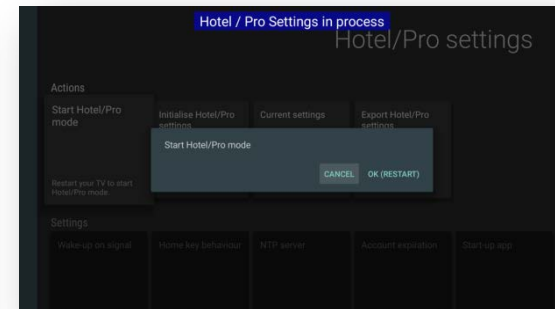


Confirmation dialog


7. Use “Export” function “

Export “Hotel/Pro settings” information to USB storage device to clone settings.

- Preparation
 - Check all settings is complete or not.
 - Prepare blank USB storage device.
- Procedure
 1. Insert USB storage device to USB slot.
Then “USB device is connected” message will be shown.
 2. Select “Export Hotel/Pro settings” in Hotel menu.
Confirmation dialog is shown and select “EXPORT”.
 3. After that, following message will be shown.

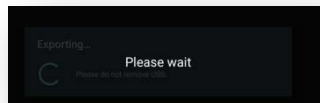
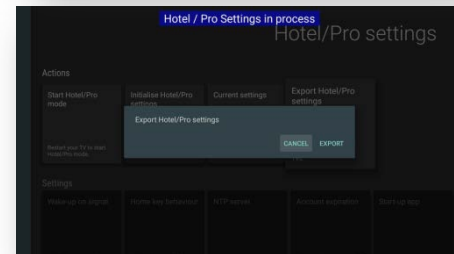
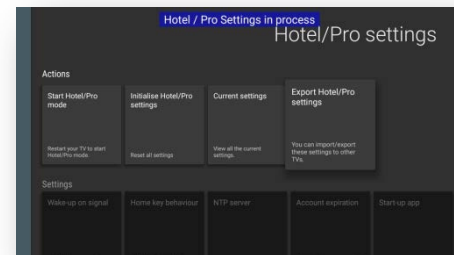


4. If “export” is successful, “Export complete” message will be shown.

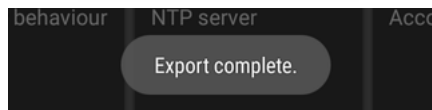


Import “Hotel/Pro settings” information from USB storage device.

- Attention
 - Settings can be copied from the same model. Difference of panel size is allowed.
Ex) OK : FWL-55W805C to FWL-65W805C, NG : FWL-55W805C to FWL-48W705C
- Procedure
 1. Change mode to “Hotel/Pro settings mode”.
See for detail : [Appendix: Mode Transition](#)
 2. Insert USB storage device contains “Hotel/Pro settings” information to TV.
 3. After TV detected USB storage device, confirmation dialog will be shown, select “IMPORT”.
 4. If “Import” is successful, TV will reboot automatically.

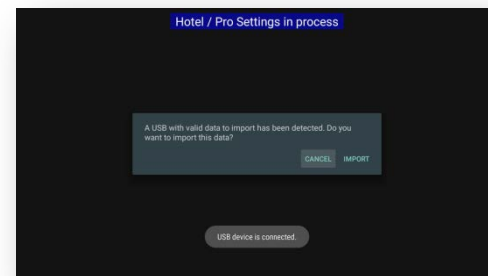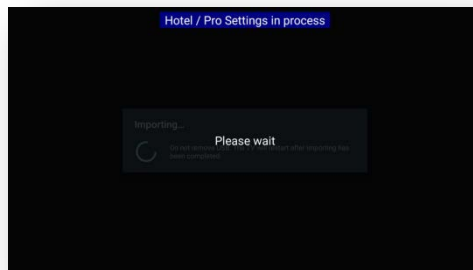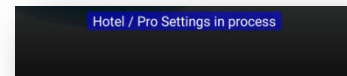

3 Modes

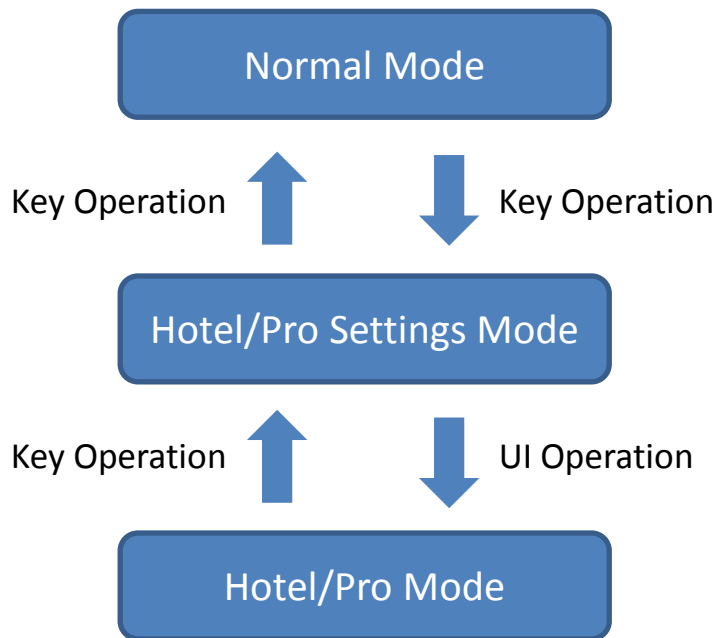

Key Operation

1. Press following keys continuously.
"Display" "MUTING" "VOL+" "HOME"
* each interval less than 1 sec.
2. (As necessary, reboot automatically.)

UI Operation

1. Select "HOTEL/Pro settings" in "Settings" of HOME menu.
2. Select "Actions" in "HOTEL/Pro settings" screen.
3. Select "Start Hotel/Pro mode" UI button.
4. Select "OK(RESTART)" button in confirmation dialog.