

AEG


Ultimate 8000

Animal 8000

Hygienic 8000

GB INSTRUCTION BOOK
FR MODE D'EMPLOI
DE GEBRAUCHSANWEISUNG
ES LIBRO DE INSTRUCCIONES


GR ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ
IT ISTRUZIONI
NL INSTRUCTIE BOEK
PT LIVRO DE INSTRUÇÕES

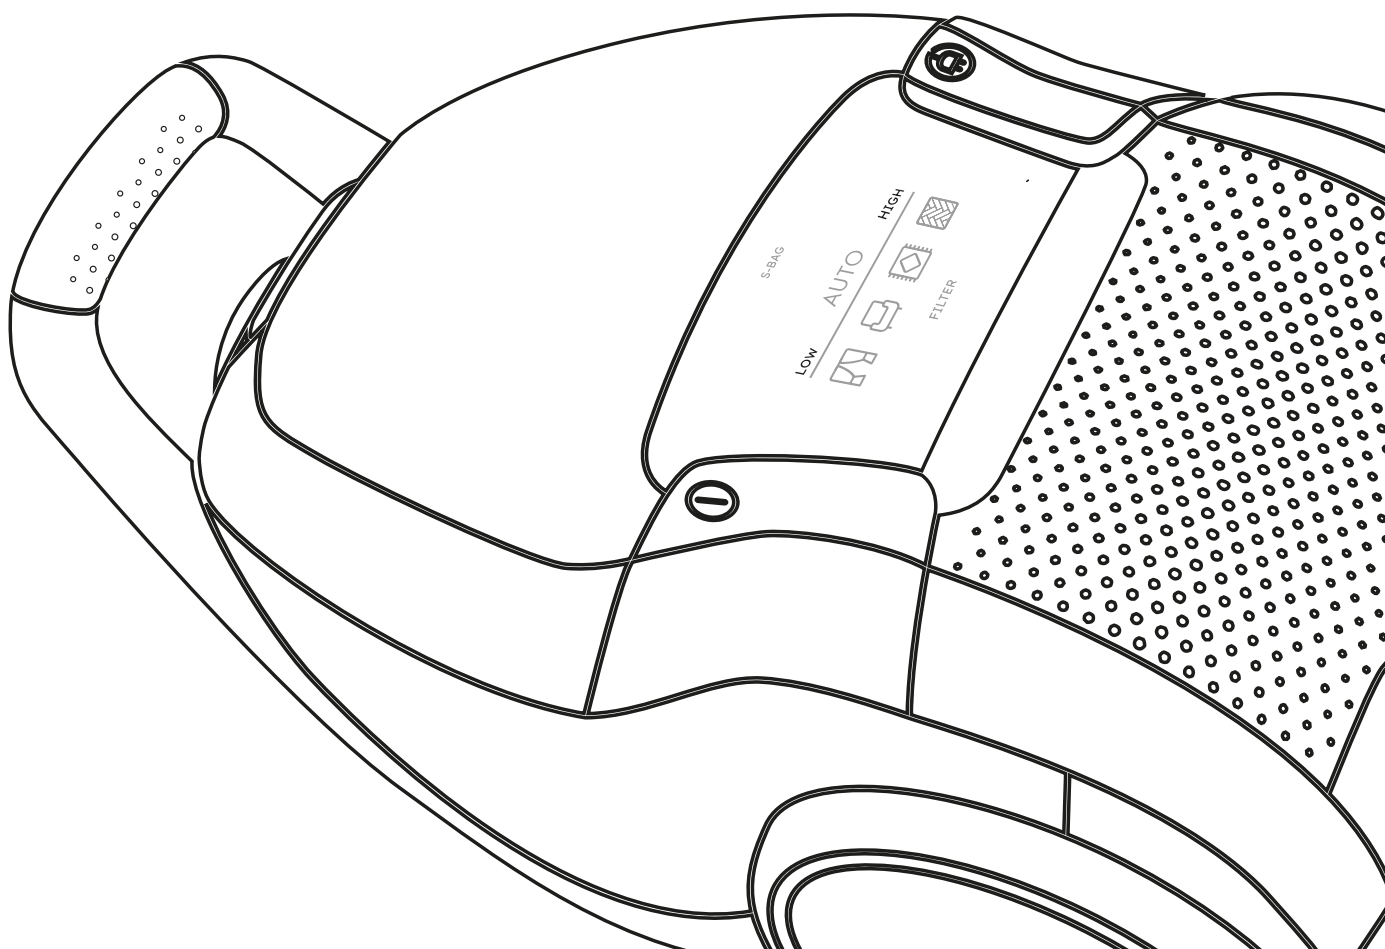

Thank you for choosing AEG 8000 bagged vacuum cleaner. Always use original accessories and spare parts to get the best results. This product is designed with the environment in mind. All plastic parts are marked for recycling purposes.

Before starting

- Read this manual carefully.
- Check that all parts described are included.
- Pay special attention to the safety precautions!

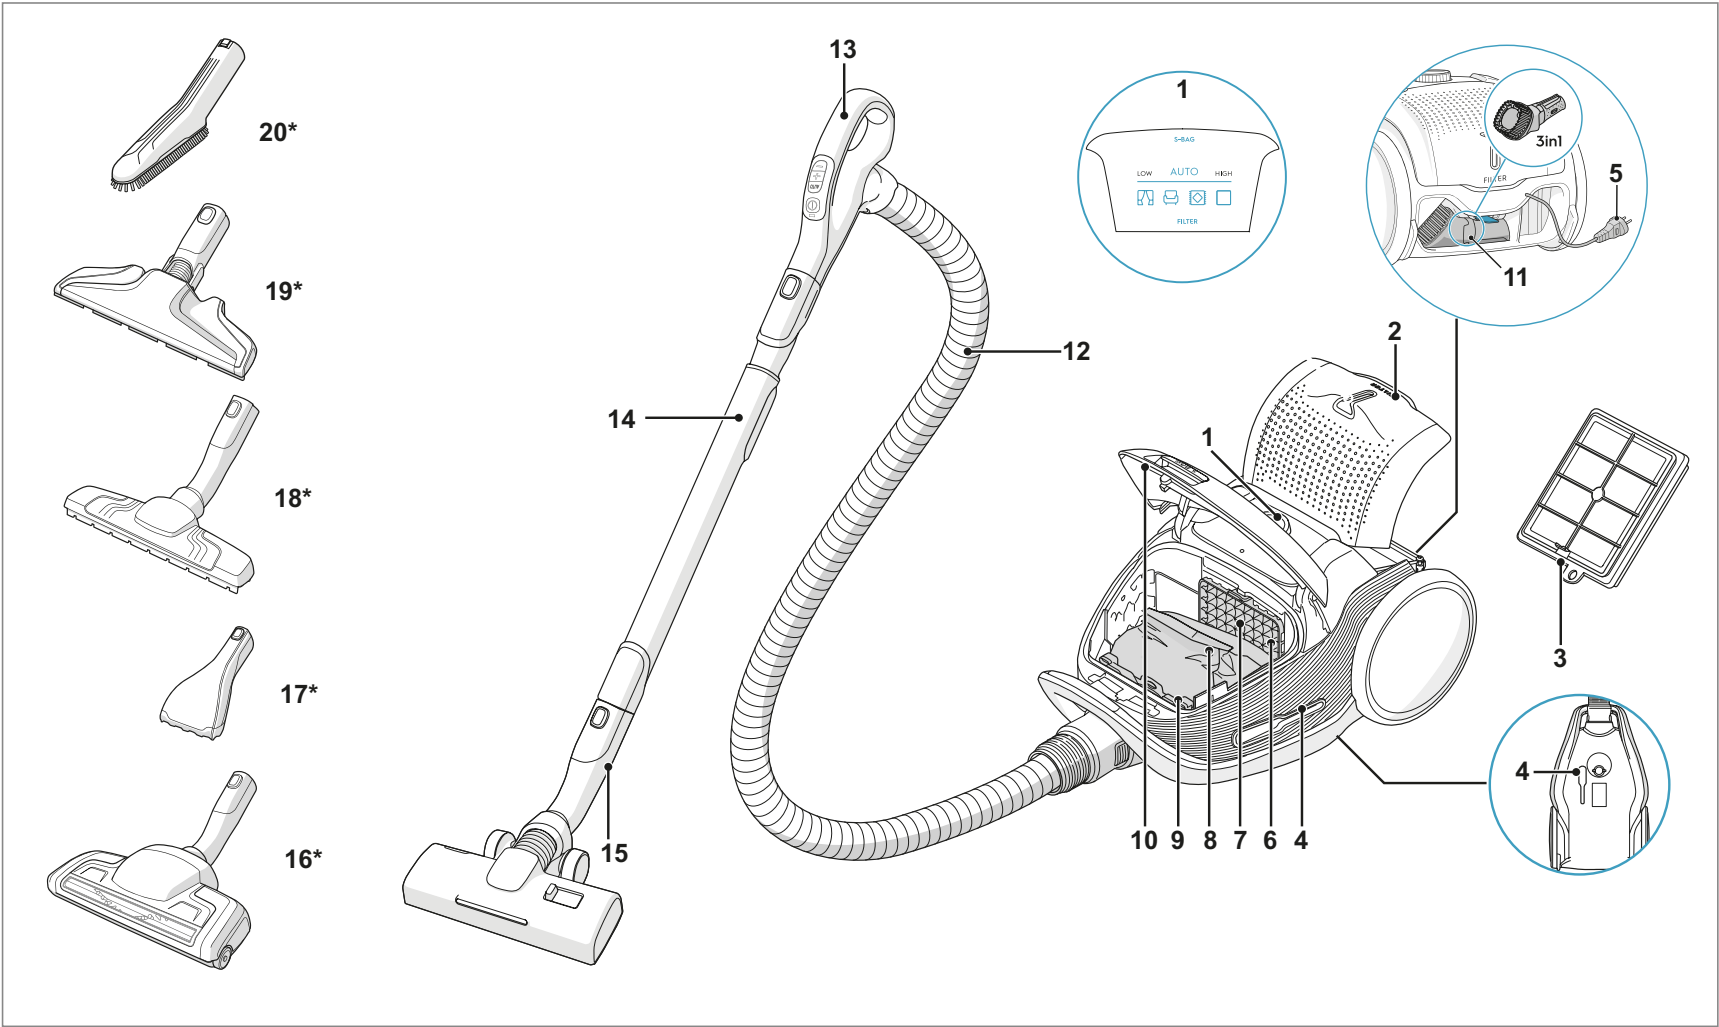


DESCRIPTION OF 8000 VACUUM CLEANER

- | | |
|----------------------------|------------------------------|
| 1. Display | 13. AeroPro handle |
| 2. Exhaust filter lid | 14. AeroPro telescopic tube |
| 3. Exhaust filter | 15. AllFloor Auto LED nozzle |
| 4. Parking slots | 16. Turbo nozzle* |
| 5. Power cord | 17. Mini Turbo nozzle* |
| 6. Motor filter | 18. ParkettoPro nozzle* |
| 7. Motor filter holder | 19. FlexProPlus nozzle* |
| 8. S-bag® | 20. Furniture nozzle* |
| 9. S-bag® holder | |
| 10. Dust compartment cover | |
| 11. 3in1 tool | |
| 12. AeroPro hose | |


* Certain models only

Power consumption in standby: 0.5W


HOW TO USE THE VACUUM CLEANER

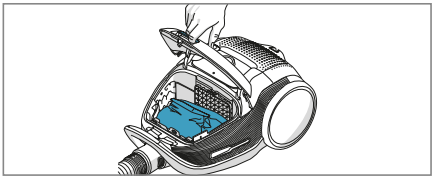


Open the dust compartment cover by pulling the S-BAG button. Check that the dust bag (s-bag) is in place.

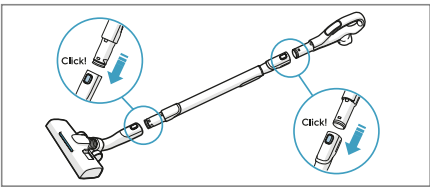

Attach the telescopic tube to the nozzle. Attach the telescopic tube to the hose handle (to remove it, press the lock button and pull).

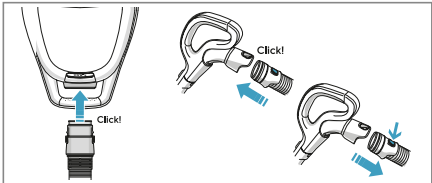


Insert the hose into the cleaner (to remove it, press the lock buttons and pull). Insert the hose into the hose handle until the lock button clicks (to release it, press the lock button and pull).

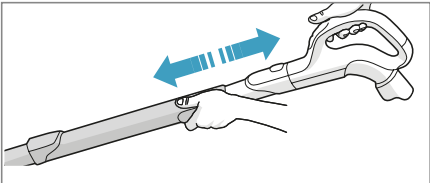


Adjust the telescopic tube by holding the lock with one hand and pulling the handle with the other hand.


START/STOP THE VACUUM CLEANER AND ADJUST SUCTION POWER

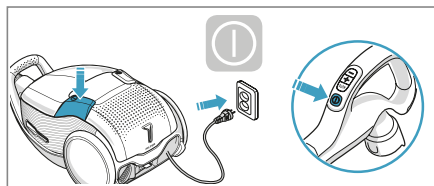

Pull out the power cord and plug it into the mains. Press the ON/OFF button to turn the cleaner on/off. Indicators light up, LOW/HIGH indicator lights up from left to right and back. Press the ON/OFF button on the remote control to turn the cleaner on/off.

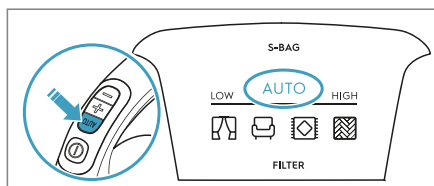


Adjust suction power: The cleaner starts in AUTO mode (automatic power regulation). AUTO indicator is illuminated on the display and LOW/HIGH indicator pulses. To regulate power manually press +/- button on handle. Press AUTO button to return to auto-function.

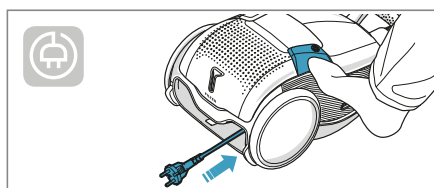


After cleaning, push the REWIND button to rewind the cable.

PARKING POSITIONS

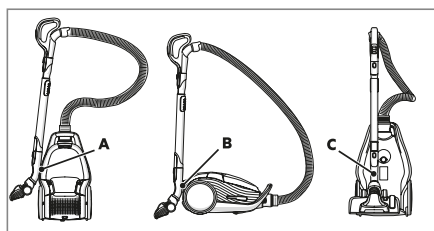


Use parking position on the side (A) or underneath (C) to carry and store the cleaner. At the back (B) when you pause (save your back).

REPLACING THE DUSTBAG, S-BAG®

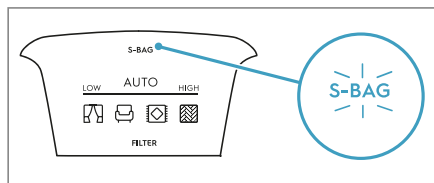


Replace the s-bag when S-BAG indicator lights up in red (green light: bag is OK, yellow light: soon time to replace bag).

NB: Always change the s-bag when S-BAG indicator is illuminated or has red light even if the s-bag is not full (it may be blocked) and after using carpet cleaning powder. For best possible performance, use the Ultra Long Performance bag which is especially developed for your cleaner. Other synthetic s-bags can also be used. Do not use paper dust bags! www.s-bag.com

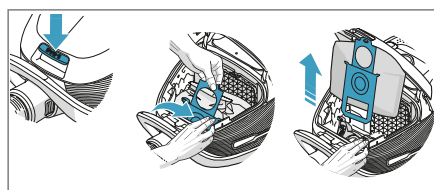


Open the dust compartment cover by pulling the S-BAG button. Pull the cardboard handle to close and remove the s-bag®

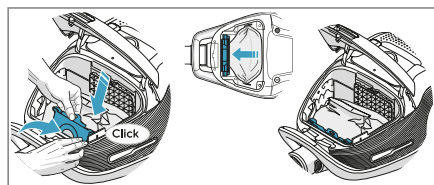


Insert a new s-bag® by pushing the cardboard straight down in its tracks. Close the lid. If the s-bag® is not properly placed or is missing, the lid will not close.

When you start the cleaner after s-bag replacement, It takes 10 seconds before the S-BAG indicator turns off or turns green.

REPLACING THE FILTERS

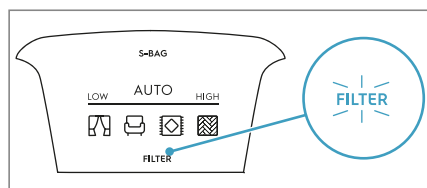


Replace/clean the filter when filter indicator lights up in red. Green light indicates that the filter is ok. It lights up briefly when you start the vacuum cleaner.

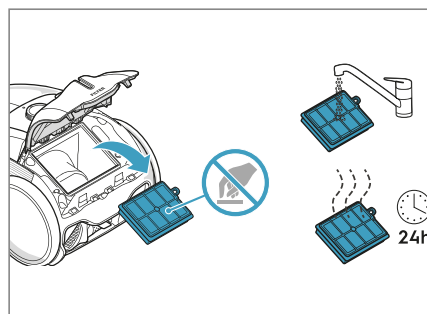


Pull the FILTER button to open the filter lid. Use original s-filters. Remove the filter and check the reference on the frame to define type. Replace with a new filter or clean it. Rinse the inside (dirty side) in lukewarm tap water. Tap the filter frame to remove the water. Repeat the process four times.

NB: Do not use cleaning agents. Avoid touching the filter surface. Let the filter dry completely (min. 24 h in room temperature) before putting back ! Change the washable filter at least once a year or when it is very dirty or damaged. Do not remove the L-shaped foam under the filter.

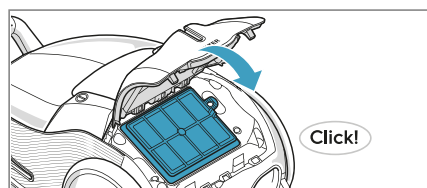


After replacing the filter, close the filter lid until it is clicked back into place. If the filter lid comes off, position the hinges at the bottom and push the filter lid until it is clicked back into place.

NB: When you start the cleaner after filter replacement, It takes 10 seconds before the FILTER indicator turns green or turns off.

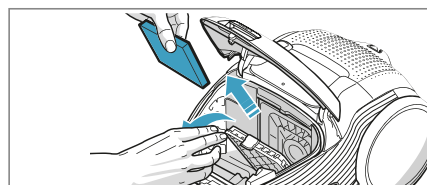


Replace the motor filter when dirty or after every 5th s-bag. Push the filter holder down and pull it out. Exchange the filter and close the lid.

VACUUMING WITH THE UNIVERSAL NOZZLE

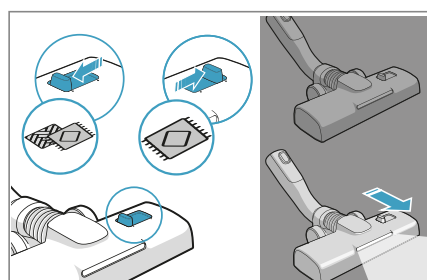


For deep cleaning on carpet, change the nozzle setting with the slider to Carpet mode. Icon illustrates recommended floor type. Move the nozzle forward. The front light turns on automatically after a few seconds. When the nozzle is not used, the light turns off automatically after a few seconds.

CLEANING THE UNIVERSAL NOZZLE

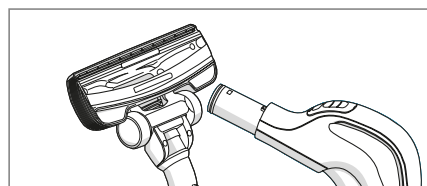


Disconnect the nozzle from the tube. Clean with the hose handle.

CLEANING THE TURBO NOZZLE

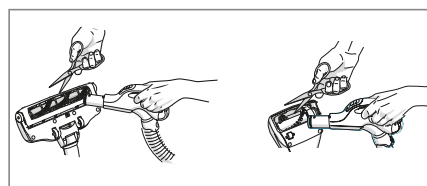


Disconnect the nozzle from the tube and remove entangled threads etc by snipping them away with scissors. Use the hose handle to clean the nozzle.

3IN1 ACCESSORY TOOL

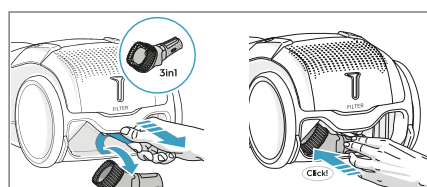


Pull the textile tab to take out 3in1 tool. The tool has 3 functions, see pictures on next page. After usage, put it back in its place.

CHANGING THE BATTERIES

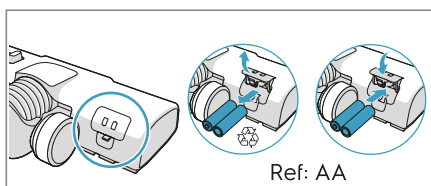

Change batteries when front lights start blinking fast. Use 2 AA batteries.

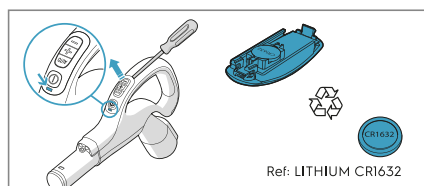

Change battery when light indicator turns red or is not responding when pressing any button. Use only batteries type LITHIUM CR1632

This appliance contains non-rechargeable batteries, these batteries are not to be recharged. • Do not expose the appliance or battery to excessive temperatures. • Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects. • Different types of batteries or new and used batteries are not to be mixed. Exhausted batteries are to be removed from the appliance and safely disposed of. • If the appliance is to be stored unused for a long period, the batteries should be removed. Do not use modified or damaged batteries.

Remove the batteries from the product before scrapping. Follow your country's rules for collection of batteries and electrical products.

TIPS ON HOW TO GET THE BEST RESULTS

NOZZLE/ACCESSORY	USE FOR:	NOZZLE/ACCESSORY	USE FOR:
3in1 accessory tool 	3 tools in 1: 1. Dusting tool for hard surfaces (bookshelves, skirting boards etc). 2. Upholstery tool for textiles (curtains, upholstery etc). 3. Crevice tool for narrow spaces (behind radiators etc).	AllFloor Auto LED nozzle (with front lights) 	Universal nozzle: - For all floor types, secures excellent dust pick up both on carpets and hard floors. - Recommended to use Allfloor mode, which enables going from hard floor to carpet without adjusting the setting. - For deep cleaning on carpet, change the nozzle setting with the slider to Carpet mode. - Front light helps to detect dust and dirt in dark spaces (under furniture etc).
Turbo nozzle* 	Carpet nozzle: - Brushes and vacuums at the same time (best pick up of hair, fibres etc). - Brush roller is driven by the airflow of the vacuum cleaner. - Not suitable for carpets with very deep piles and long fringes, anti-slip carpets like door mats or water resistant carpets. Use universal nozzle instead.	Mini Turbo nozzle* 	Upholstery nozzle: - Brushes and vacuums at the same time (best pick up of hair, fibres etc). - For textile furniture, car seats, mattresses etc. - Brush roller is driven by the airflow of the vacuum cleaner. - Not suitable for carpets with very deep pile and long fringes as it can get stuck in the rotating brush roll.
ParkettoPro nozzle* 	Hard floor nozzle: - For gentle cleaning of hard floor (parquet, wooden floor, tiles etc). - Best dust pick up on hard floor with crevice.	FlexProPlus nozzle* 	Hardfloor nozzle: - For reach under/between furniture, corners and other obstacles. - Can easily turn 180 degrees for direct access to narrow spaces.
Furniture nozzle* 	Delicate Surfaces Tool: - Removes fine particles and dust from delicate surfaces in your home		

With AUTO-function the cleaner automatically adjust the suction power

in order to give an optimal cleaning performance and comfort on every surface. For manual regulation, follow graphics for optimal performance.

TROUBLESHOOTING

PROBLEM	SOLUTION
The vacuum cleaner does not start	<ul style="list-style-type: none"> • Check that the cable is connected to the mains. • Check that the plug and cable are not damaged. • Check for a blown fuse. • Check if the battery indicator lamp in the remote control handle responds (certain models only).
The s-bag® indicator light is illuminated	<ul style="list-style-type: none"> • Check if the s-bag® is full or blocked. • If you have already changed the s-bag®, change the motor filter.
The filter indicator light is illuminated	Change, or wash (if washable), the exhaust filter.
The cleaner stops	The cleaner might be overheated: disconnect it from the mains; check if the nozzle, tube, hose or filters are blocked. Let the cleaner cool down for 30 minutes before plugging it in again. If the cleaner still does not work, contact an authorized AEG service centre.
Reduction of suction capacity versus normal	<ul style="list-style-type: none"> • Check if the s-bag is full or blocked. • Check if the motor filter is clogged and needs changing. • Check if nozzle is blocked and needs to be cleared. • Check if hose is blocked by squeezing it gently. However, be careful in case the obstruction has been caused by glass or needles caught inside the hose. Note: The warranty does not cover any damage to the hose caused by cleaning it.
Water has been sucked into the vacuum cleaner	It will be necessary to replace the motor at an authorized AEG service centre. Damage to the motor caused by the penetration of water is not covered by the warranty.
For any further problems, contact an authorized AEG service centre.	