

PROCEDURE

1.INSTALL RELEASE CYLINDER BLEEDER PLUG

31477

- a. Install the release cylinder bleeder plug to the clutch release cylinder body.

Torque:**10.8 N*m (110 kgf*cm, 8 ft.*lbf)**


- b. Install the bleeder plug cap.

2.INSTALL CLUTCH RELEASE CYLINDER KIT


04313

- a. Install 2 new cylinder cups onto a new piston.
b. Install a new spring to the piston.

c.

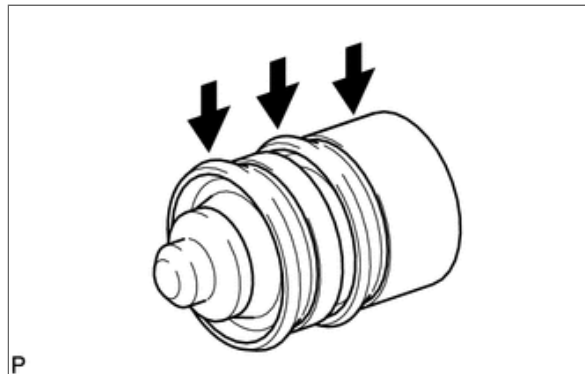

P

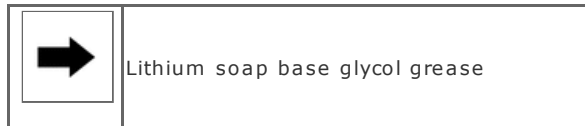

Lithium soap base glycol grease

Apply lithium soap base glycol grease to the portions indicated by the arrows in the illustration.

- d. Install the piston with the spring to the clutch release cylinder body.

NOTICE:

Do not damage the inside of the cylinder body.

- e. Install the push rod to a new boot.
f. Install the boot with the push rod to the clutch release cylinder body.