

AXLE AND DIFFERENTIAL REAR DIFFERENTIAL CARRIER ASSEMBLY(for LSD) REMOVAL

PROCEDURE

1.REMOVE PROPELLER SHAFT ASSEMBLY

37110

Click here [Drivetrain>DRIVE SHAFT / PROPELLER SHAFT>PROPELLER SHAFT ASSEMBLY>REMOVAL](#)

2.DRAIN DIFFERENTIAL OIL


Click here [Drivetrain>AXLE AND DIFFERENTIAL>DIFFERENTIAL OIL>REPLACEMENT](#)

3.REMOVE REAR AXLE SHAFT ASSEMBLY

Click here [Drivetrain>AXLE AND DIFFERENTIAL>REAR AXLE SHAFT>REMOVAL](#)

4.REMOVE WIRE HARNESS CLAMP BRACKET (w/ ABS)

a.

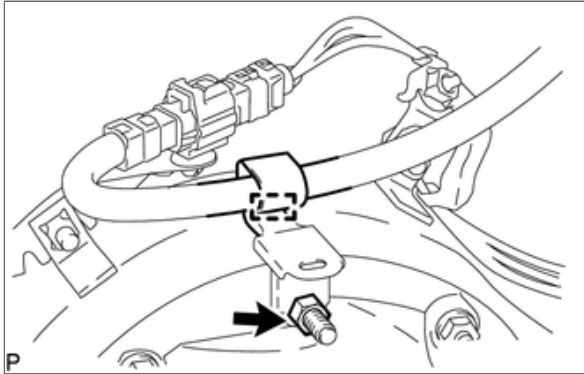


Disconnect the clamp.

b. Remove the nut and wire harness clamp bracket.

5.REMOVE REAR DIFFERENTIAL CARRIER SUB-ASSEMBLY

41101

a.

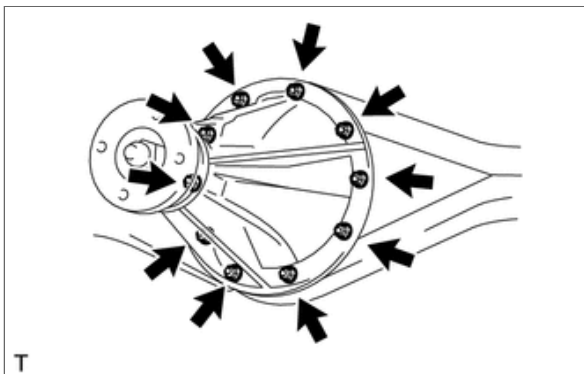

Remove the 10 nuts, 10 washers and rear differential carrier sub-assembly.

NOTICE:

Be careful not to damage the contact surfaces of the rear differential carrier sub-assembly and rear axle housing.

b. Remove the gasket.