

## CAUTION / NOTICE / HINT

## HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

## PROCEDURE


**1.REMOVE REAR WHEEL**

Click here [Suspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL](#)

**2.REMOVE REAR SHOCK ABSORBER ASSEMBLY LH**


48540

a.

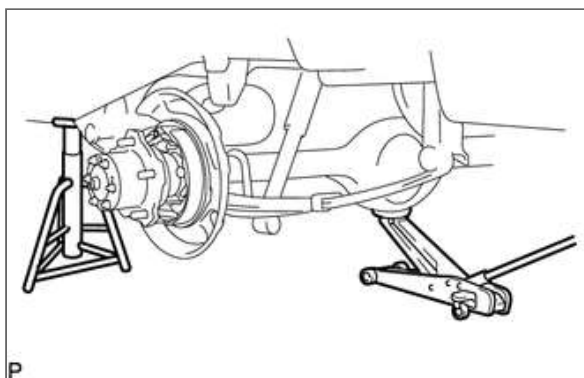


Support the rear axle housing assembly with a jack.

b.

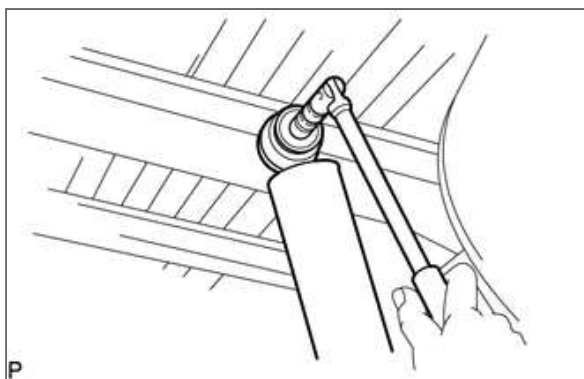

Remove the upper mounting bolt, rear No. 1 shock absorber cushion washer and 2 bushing and disconnect the rear shock absorber assembly LH from the frame.

c.

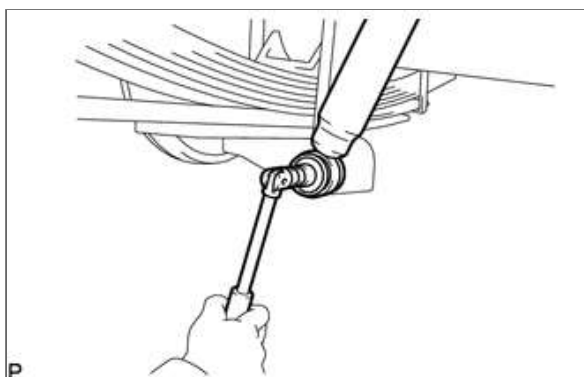

Remove the lower mounting bolt, rear No. 1 shock absorber cushion washer and 2 bushing and remove the rear shock absorber assembly LH from the spring U bolt seat sub-assembly LH.