

## PROCEDURE

## 1.INSTALL REAR DIFFERENTIAL CARRIER SUB-ASSEMBLY


41101

- a. Clean the contact surfaces of the rear differential carrier sub-assembly and axle housing.

**NOTICE:**

Be careful not to damage the installation surface.

- b.

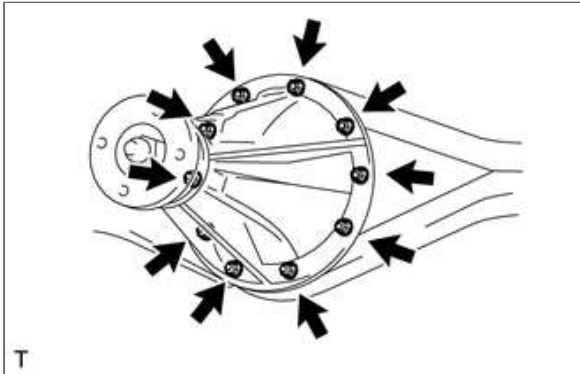

Install the rear differential carrier sub-assembly, and a new gasket and the washers with the 10 nuts.

**Torque:**


**72 N\*m (734 kgf\*cm, 53 ft.\*lbf)**

**NOTICE:**

Be careful to install the gasket without tearing it.

## 2.INSTALL WIRE HARNESS CLAMP BRACKET (w/ ABS)

- a.

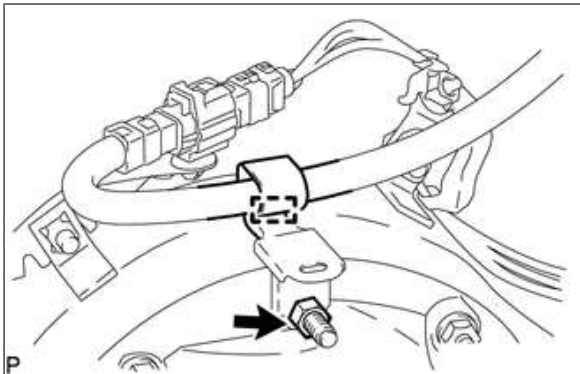

Install the wire harness clamp bracket with the nut.

**Torque:**

**36 N\*m (367 kgf\*cm, 27 ft.\*lbf)**

- b. Connect the clamp.

## 3.INSTALL REAR AXLE SHAFT ASSEMBLY

[Click here](#)Drivetrain>AXLE AND DIFFERENTIAL>REAR AXLE SHAFT>INSTALLATION

## 4.ADD DIFFERENTIAL OIL

[Click here](#)Drivetrain>AXLE AND DIFFERENTIAL>DIFFERENTIAL OIL>REPLACEMENT



## **5.INSTALL PROPELLER SHAFT ASSEMBLY**

**37110**

[Click here](#)Drivetrain>DRIVE SHAFT / PROPELLER SHAFT>PROPELLER SHAFT ASSEMBLY>INSTALLATION

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.