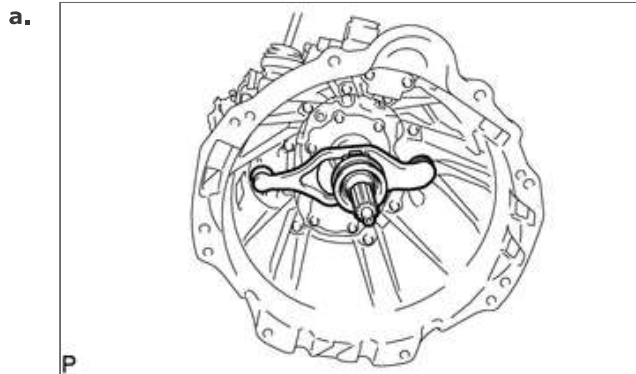



## PROCEDURE

**1.REMOVE MANUAL TRANSMISSION ASSEMBLY**


Click here [Drivetrain>H150F \(MANUAL TRANSMISSION / TRANSAXLE\)>MANUAL TRANSMISSION ASSEMBLY \(for 1VD-FTV\)>REMOVAL](#)

**2.REMOVE CLUTCH RELEASE FORK SUB-ASSEMBLY****31204**


Remove the clutch release fork sub-assembly with the clutch release bearing assembly from manual transmission assembly.

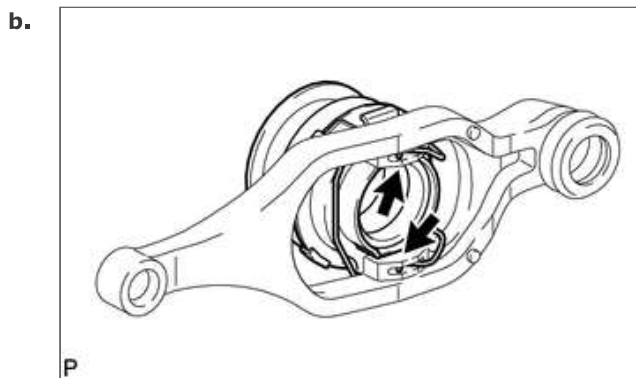

Remove the clutch release bearing assembly and release bearing hub clip from the clutch release fork sub-assembly.

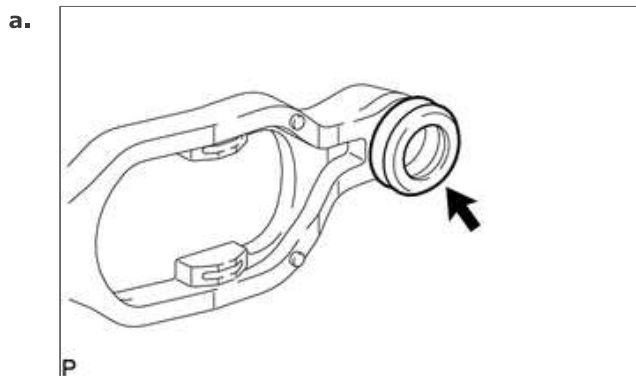
**3.REMOVE CLUTCH RELEASE FORK SUPPORT BOOT****31237**

Remove the clutch release fork support boot from the clutch release fork sub-assembly.

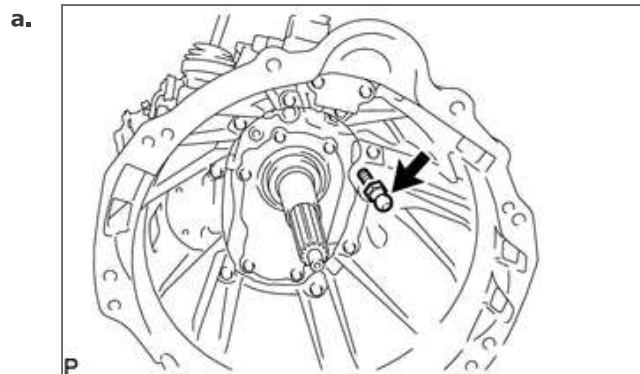

Remove the release fork support from the manual transmission assembly.

5.REMOVE CLUTCH COVER ASSEMBLY

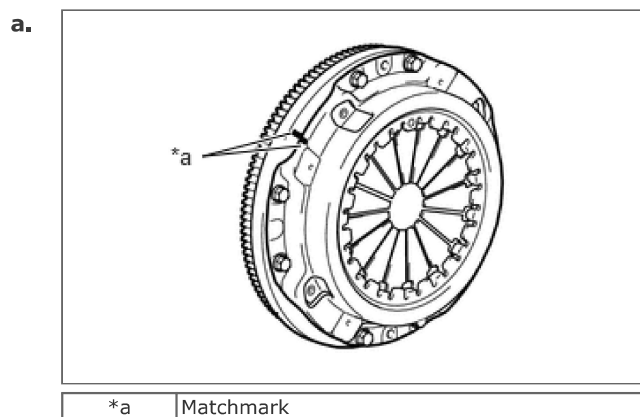

Put matchmarks on the clutch cover assembly and flywheel sub-assembly.

b. Loosen each set bolt one turn at a time until spring tension is released.

c. Remove the set bolts, and pull off the clutch cover assembly.

**NOTICE:**

Do not drop the clutch disc.

6.REMOVE CLUTCH DISC ASSEMBLY

**NOTICE:**

Keep the lining part of the clutch disc assembly, pressure plate and surface of the flywheel away from oil and foreign matter.

7.INSPECT INPUT SHAFT BEARING

[Click here](#)Drivetrain>CLUTCH>CLUTCH UNIT (for 1VD-FTV)>INSPECTION