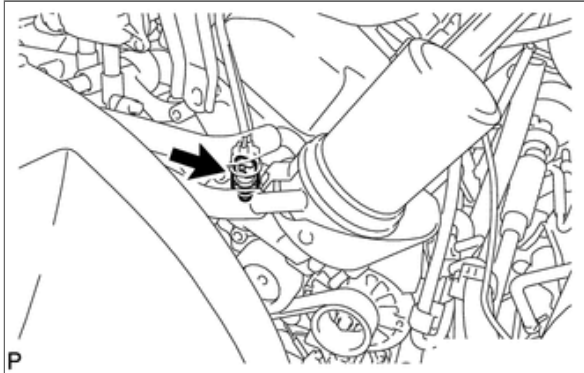


1GR-FE LUBRICATION OIL PRESSURE SENSOR REMOVAL

PROCEDURE**1.REMOVE OIL PRESSURE SENDER GAUGE ASSEMBLY****83520****a.**

Disconnect the oil pressure sender gauge connector.

b. Using a 27 mm deep socket wrench, remove the oil pressure sender gauge assembly.