

CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for RHD and LHD vehicles.
- The procedure listed below is for LHD vehicles.

PROCEDURE

1.PLACE FRONT WHEELS FACING STRAIGHT AHEAD


2.REMOVE STEERING PAD

45130

Click hereVehicle Interior>SUPPLEMENTAL RESTRAINT SYSTEMS>STEERING PAD>REMOVAL


3.REMOVE STEERING WHEEL ASSEMBLY

45100

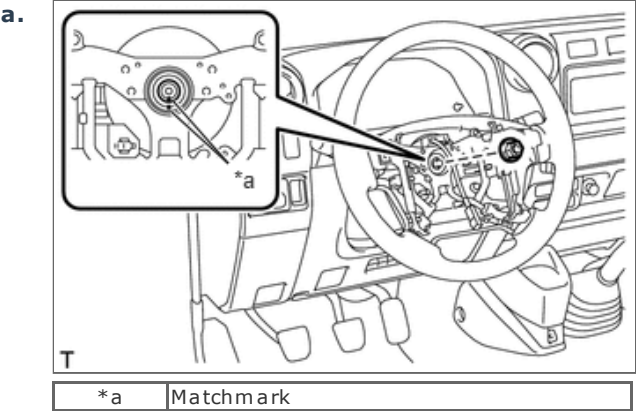

Remove the steering wheel set nut.

b. Place matchmarks on the steering wheel assembly and main shaft.

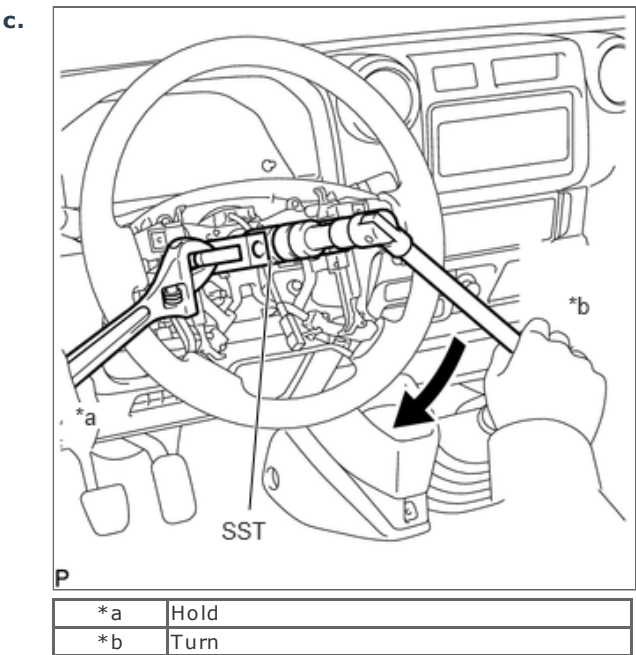

Using SST, remove the steering wheel assembly.


**SST**

**09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)**

#### 4.REMOVE STEERING PAD COVER LH

84259

a.

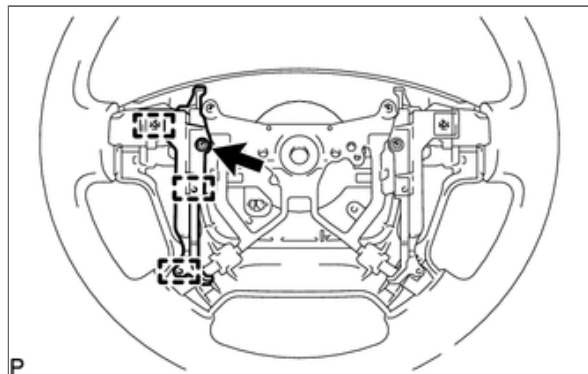

Remove the screw and 3 guide pins, remove the steering pad cover LH.

#### 5.REMOVE STEERING PAD COVER RH

84258


#### **HINT:**

Use the same procedure described for the LH side.

#### 6.REMOVE LOWER STEERING WHEEL BOSS COVER

45184

a.

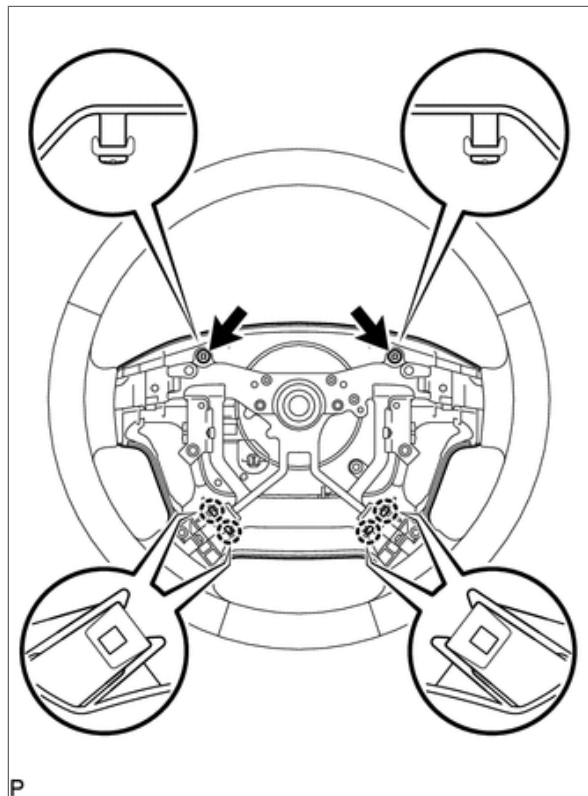

Remove the 2 screws.

b. Detach the 4 claws to remove the lower steering wheel boss cover.

