


PROCEDURE

1.REMOVE SPEEDOMETER SENSOR

83181A

- a. Disconnect the speedometer sensor connector.
- b. Remove the bolt and the speedometer sensor from the transfer assembly.

c.

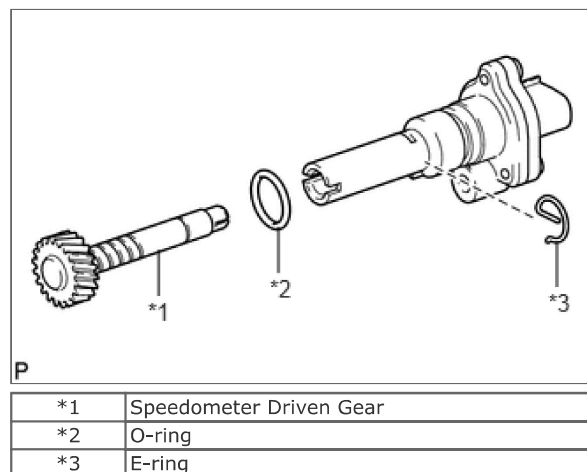

Remove the E-ring and the speedometer driven gear from the speedometer sensor.