

## CAUTION / NOTICE / HINT


## HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

## PROCEDURE

## 1.INSTALL REAR AXLE SHAFT OIL SEAL LH

42312C

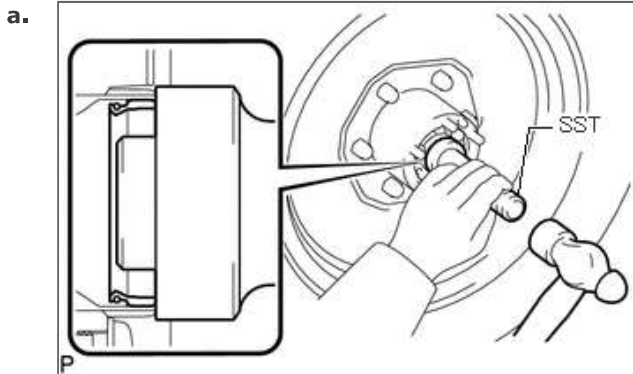

Using SST and a hammer, tap in a new rear axle shaft oil seal LH.


**SST**  
**09517-36010**

- b. Apply MP grease to the oil seal lip.

## 2.INSTALL REAR AXLE SHAFT LH

42312

- a. Install a new rear axle shaft outer flange gasket to the rear axle hub.

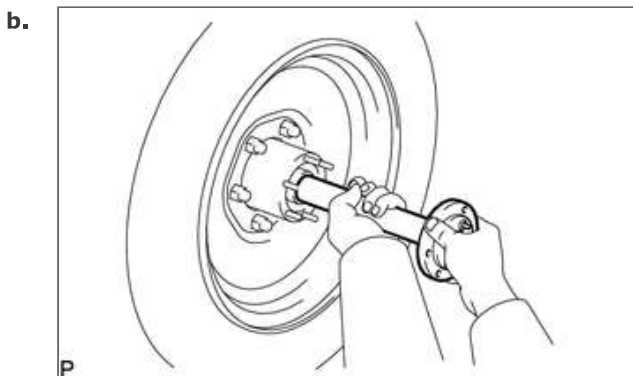

Install the rear axle shaft to the rear axle housing.

- c. Install the 6 cone washers, 6 spring washers and 6 nuts to the rear axle hub.

**Torque:**  
**32.6 N\*m (332 kgf\*cm, 24 ft.\*lbf)**