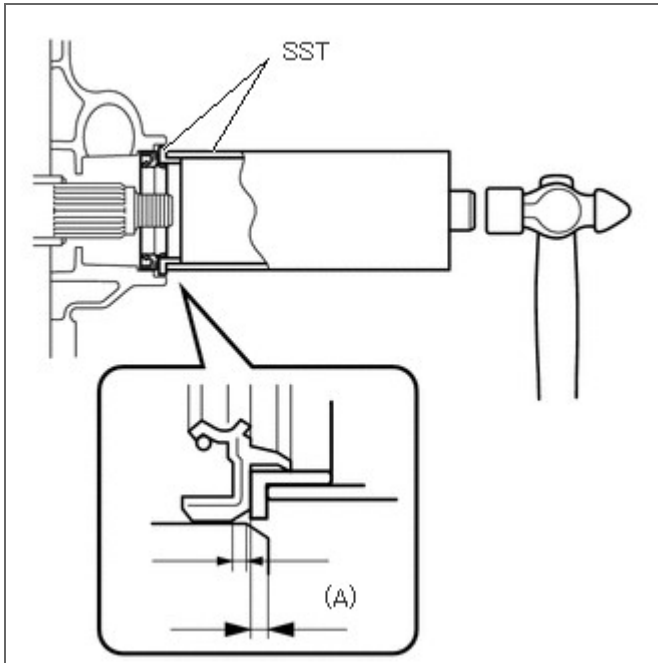


[Print](#)[Preview](#)[Exit](#)

HF1A TRANSFER / 4WD / AWD TRANSFER CASE REAR OIL SEAL REPLACEMENT

## PROCEDURE

**5.INSTALL OIL SEAL (REAR TRANSFER EXTENSION HOUSING SUB-ASSEMBLY)****36109C**

- a. Apply MP grease to the lip of a new oil seal (rear transfer extension housing sub-assembly).
- b. Using SST and a hammer, install the oil seal (rear transfer extension housing sub-assembly) as shown in the illustration.

**SST****09502-12010****09513-36040****Drive in depth (A):****0 to 0.5 mm (0 to 0.0196 in.)****NOTICE:**

- Install the oil seal (rear transfer extension housing sub-assembly) so that its outer edge is positioned past the chamfered part of the rear transfer extension housing sub-assembly.
- Do not to damage the oil seal (rear transfer extension housing sub-assembly).