



ILLUSTRATION

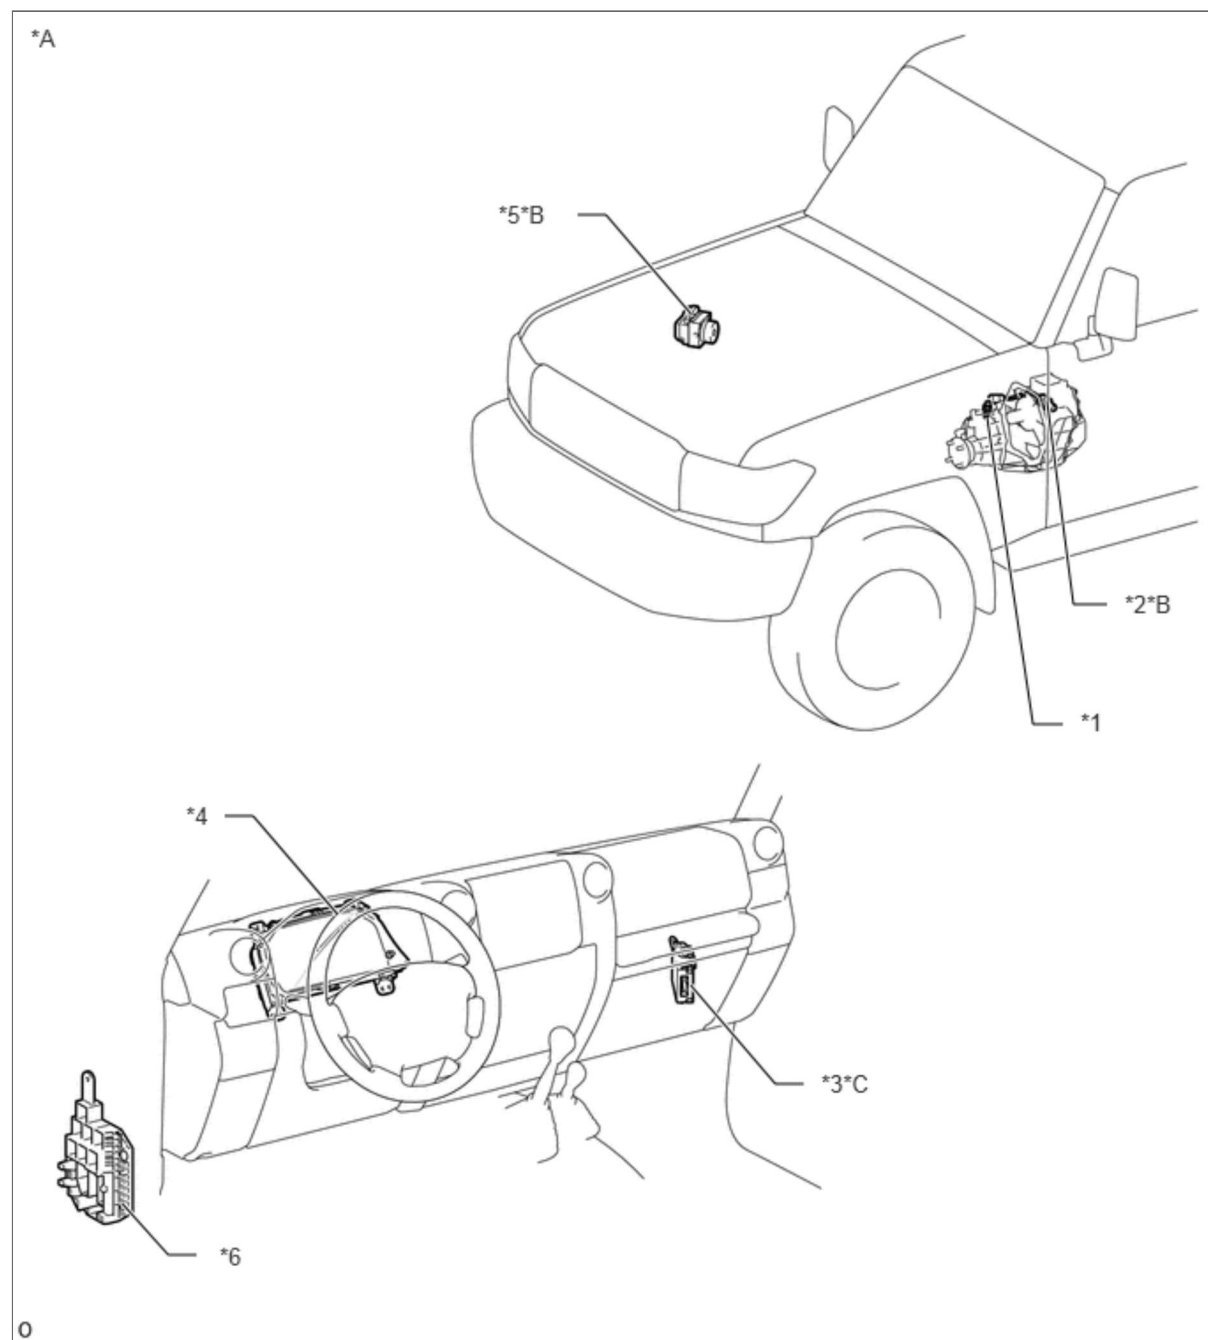

*A	for LHD	*B	w/ ABS
*C	w/ Differential Lock	-	-
*1	TRANSFER INDICATOR SWITCH	*2	TRANSFER INDICATOR SWITCH
*3	NO. 2 4 WHEEL DRIVE CONTROL ECU	*4	COMBINATION METER ASSEMBLY
*5	BRAKE ACTUATOR ASSEMBLY	*6	NO. 5 RELAY BLOCK - MET FUSE - DOME NO. 1 FUSE - ECU IG FUSE (w/ ABS) - DIFF FUSE (w/ Differential Lock)

ILLUSTRATION

*A

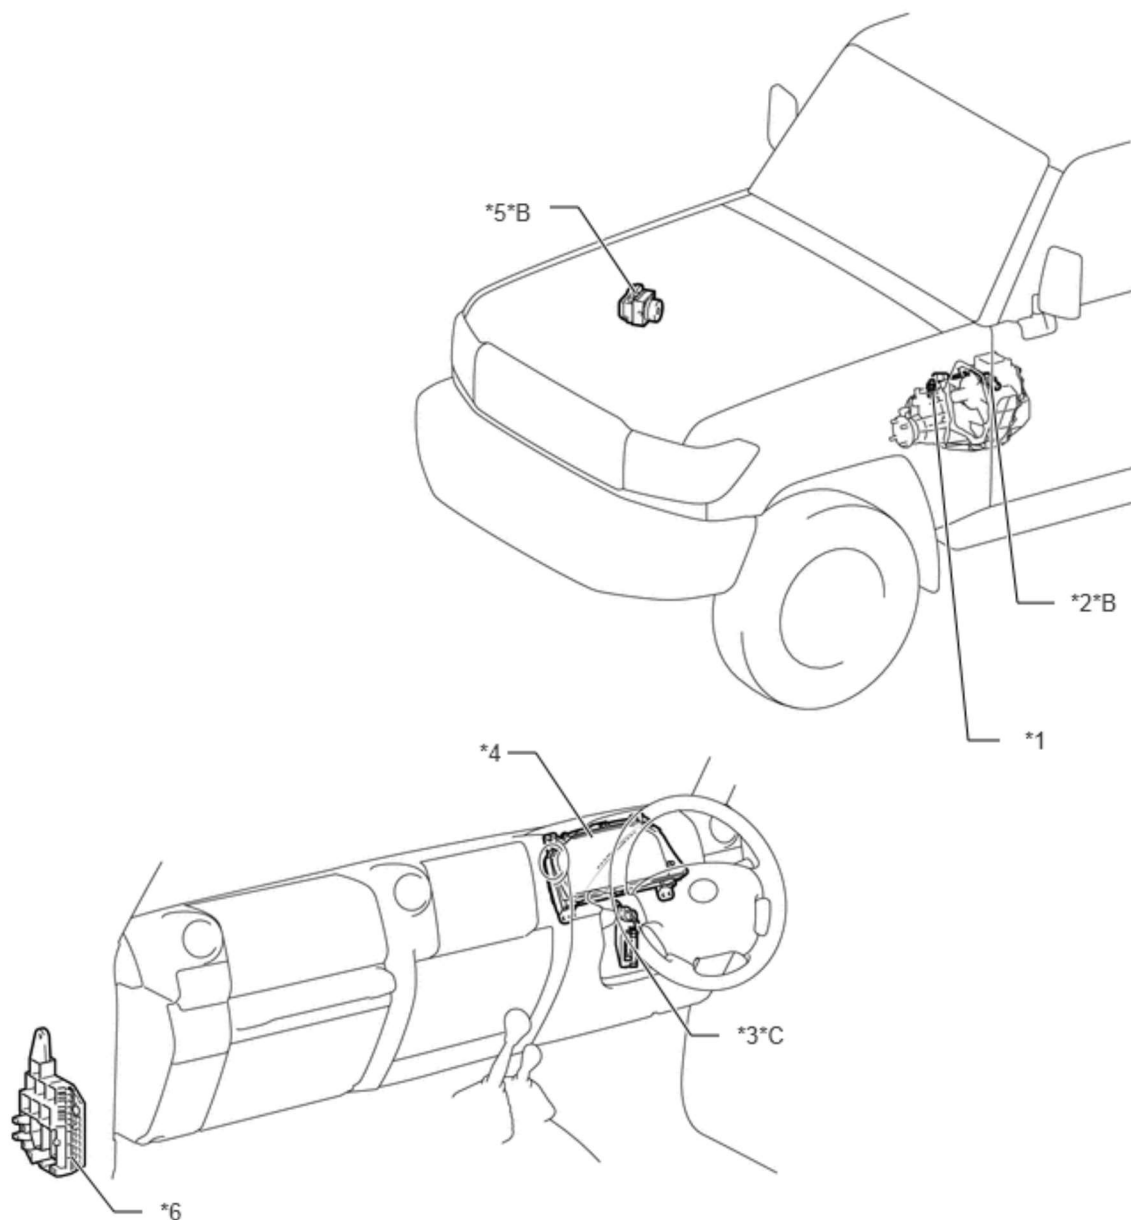

0

*A	for RHD	*B	w/ ABS
*C	w/ Differential Lock	-	-
*1	TRANSFER INDICATOR SWITCH	*2	TRANSFER INDICATOR SWITCH
*3	NO. 2 4 WHEEL DRIVE CONTROL ECU	*4	COMBINATION METER ASSEMBLY
*5	BRAKE ACTUATOR ASSEMBLY	*6	NO. 5 RELAY BLOCK - MET FUSE - DOME NO. 1 FUSE - ECU IG FUSE (w/ ABS) - DIFF FUSE (w/ Differential Lock)