





AXLE AND DIFFERENTIAL STEERING KNUCKLE COMPONENTS

ILLUSTRATION

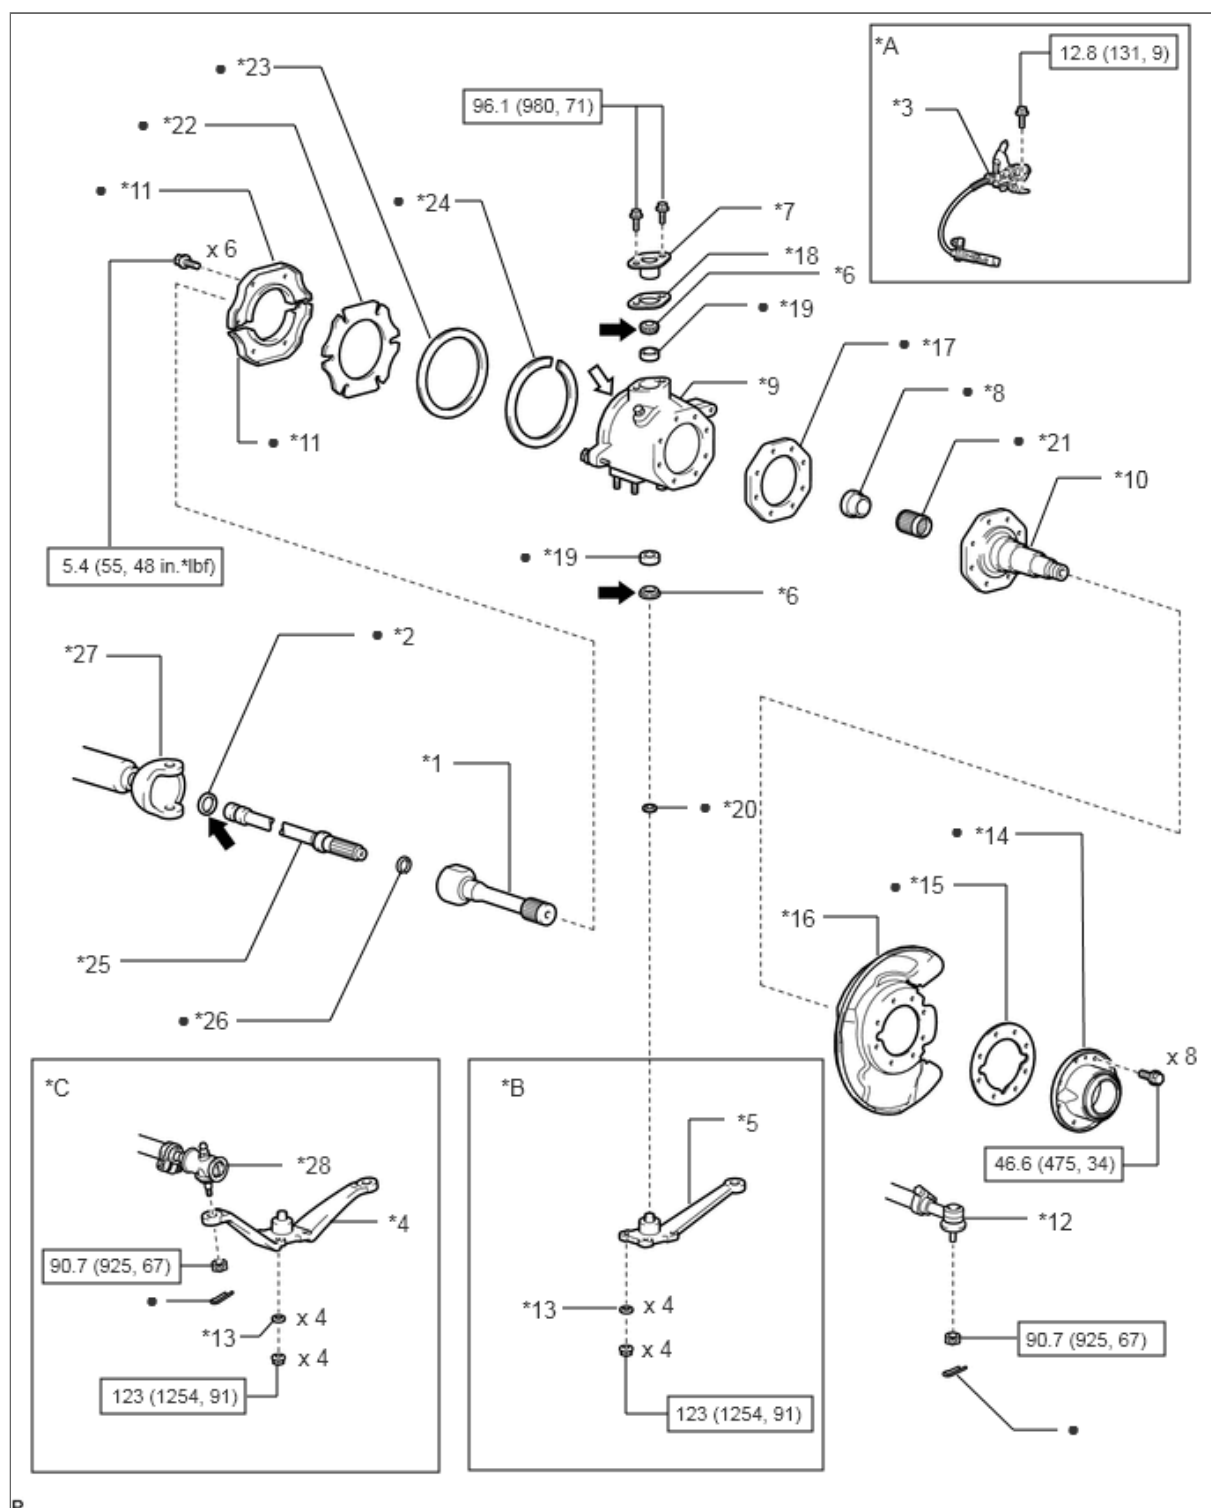

P

*A	w/ ABS	*B	for LHD
*C	for RHD	-	-
*1	FRONT AXLE OUTER SHAFT SUB-ASSEMBLY	*2	FRONT DRIVE SHAFT TYPE T OIL SEAL
*3		*4	NO. 1 STEERING KNUCKLE ARM
*5	NO. 2 STEERING KNUCKLE ARM	*6	STEERING KNUCKLE ARM BEARING
*7	STEERING KNUCKLE BEARING CAP	*8	STEERING KNUCKLE BUSHING
*9	STEERING KNUCKLE LH	*10	STEERING KNUCKLE SPINDLE SUB-ASSEMBLY
*11	STEERING KNUCKLE OIL SEAL COVER	*12	TIE ROD END SUB-ASSEMBLY LH
*13	CONE WASHER	*14	FRONT AXLE HUB DUST SEAL

*15	NUCKLE SPINDLE OIL RETAINER GASKET	*16	FRONT DISC BRAKE DUST COVER
*17	NUCKLE SPINDLE GASKET	*18	NO. 1 STEERING KNUCKLE ADJUST SHIM
*19	BEARING OUTER RACES	*20	STEERING KNUCKLE KING PIN DUST OR RING SEAL
*21	NEEDLE ROLLER BEARING	*22	STEERING KNUCKLE OUTER OIL SEAL
*23	STEERING KNUCKLE INNER OIL SEAL	*24	STEERING KNUCKLE OIL SEAL INNER RING
*25	FRONT AXLE INNER SHAFT LH	*26	SNAP RING
*27	FRONT AXLE HOUSING ASSEMBLY	*28	STEERING RELAY ROD
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease		Molybdenum Disulfide Lithium Base Grease, NLGI No. 2