

CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.


PROCEDURE

1.REMOVE FRONT WHEEL

Click here [Suspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL](#)

2.REMOVE FRONT LEADING ARM ASSEMBLY


48610A

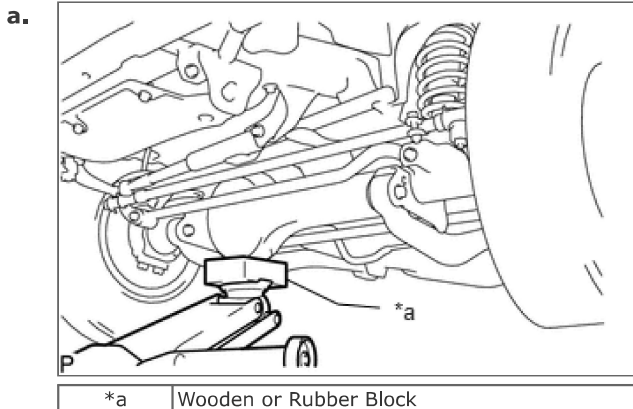


Support the front axle housing assembly with a jack.

NOTICE:

Place a wooden or rubber block between the jack and arm.

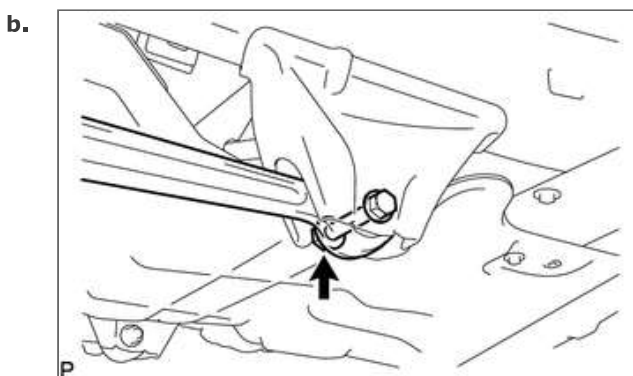

Remove the front leading arm assembly from the frame with the bolt, washer and nut.

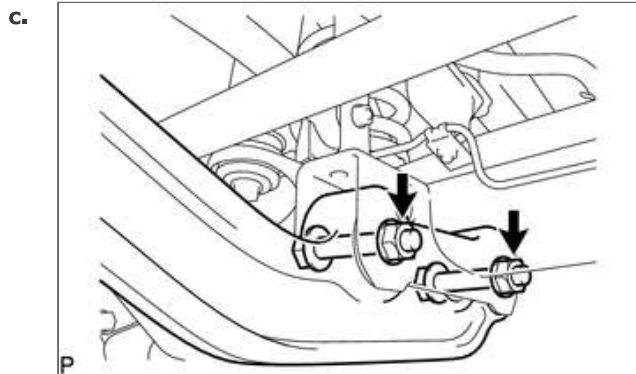

Remove the front leading arm assembly from the front axle housing assembly with the 2 bolts and 2 nuts.


NOTICE:

Since a stopper nut is used, remove the bolt.



3.REMOVE LOWER ARM BUSH

48654

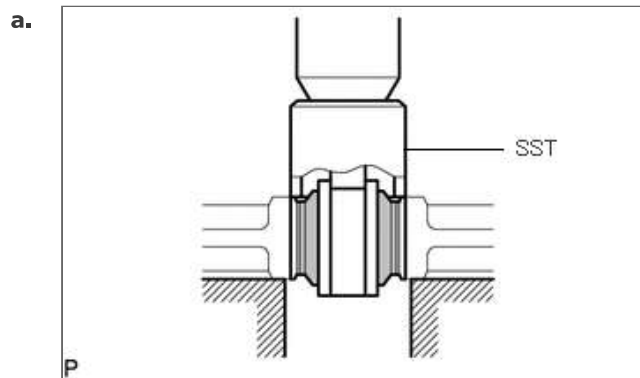

Using SST and a press, remove the lower arm bush.

SST

09710-22042 (09710-02061)