

PROCEDURE

1.REMOVE RADIATOR GRILLE


53111

[Click here](#)Vehicle Exterior>EXTERIOR PANELS / TRIM>RADIATOR GRILLE>REMOVAL

2.REMOVE FRONT VALANCE PANEL

53911

a.

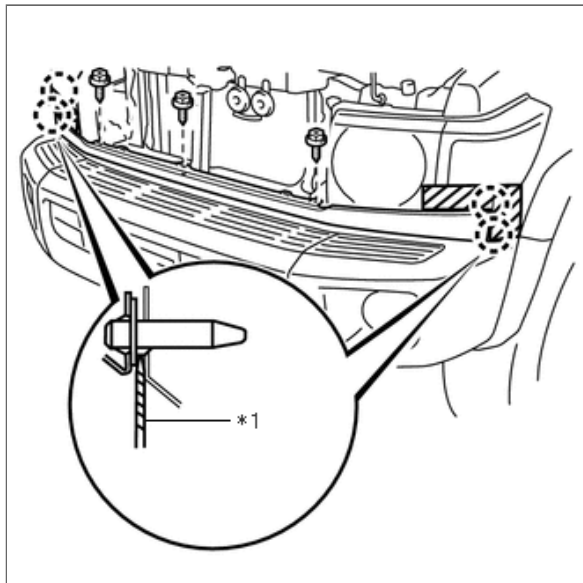


*1	Protective Tape
----	-----------------

Put protective tape around the front bumper cover.

- b. Remove the 3 screws.
- c. Using a precision screwdriver, detach the 4 claws of the 2 radiator grille clips to remove the front valance panel.
- HINT:**
Tape the screwdriver tip before use.

3.REMOVE FOG LIGHT PROTECTOR LH (w/ Fog Light)

81484A

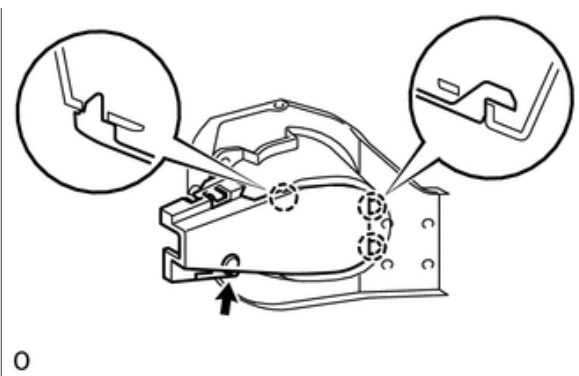


- a. Remove the clip.
- b. Detach the 3 claws and remove the fog light protector LH.

HINT:


Use the same procedures described for the LH side.

5.REMOVE FRONT BUMPER COVER

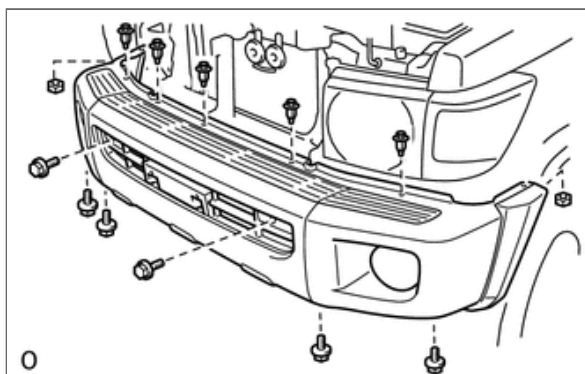


- a. Remove the 5 clips.
- b. Remove the 6 bolts and 2 nuts.
- c. w/ Fog Light:
 - i. Disconnect the No. 2 cowl wire connector and detach the clamp.
- d. Remove the bumper cover.


6.REMOVE FRONT BUMPER BRACKET SUB-ASSEMBLY LH

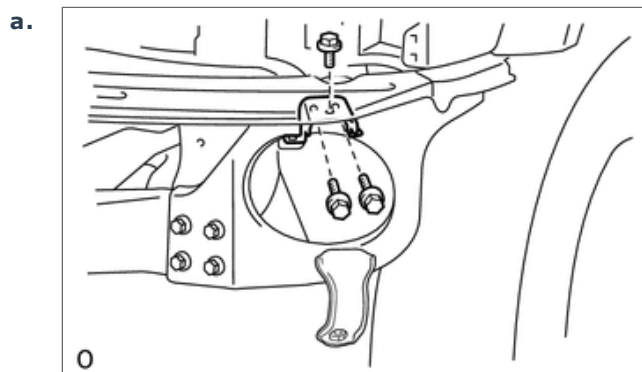


Remove the 3 bolts and front bumper step stay LH.

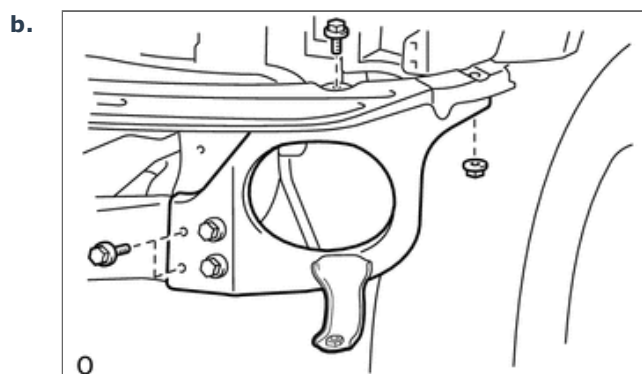


Remove the 3 bolts, nut and front bumper bracket sub-assembly LH.

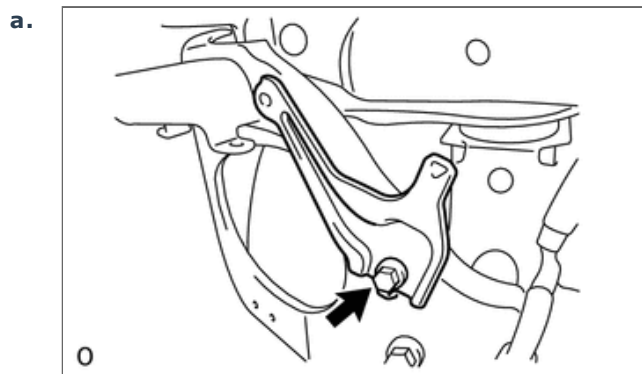


Remove the bolt and wire harness clamp bracket.

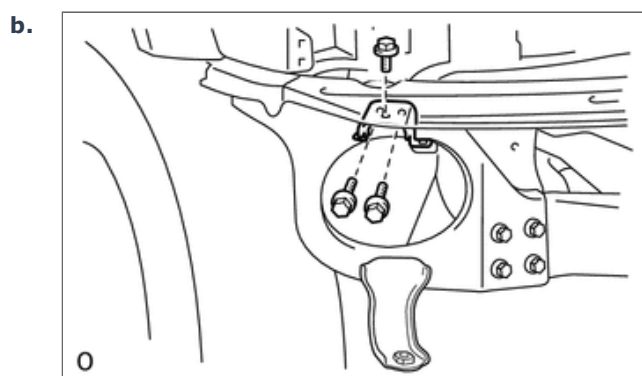

Remove the 3 bolts and front bumper step stay RH.

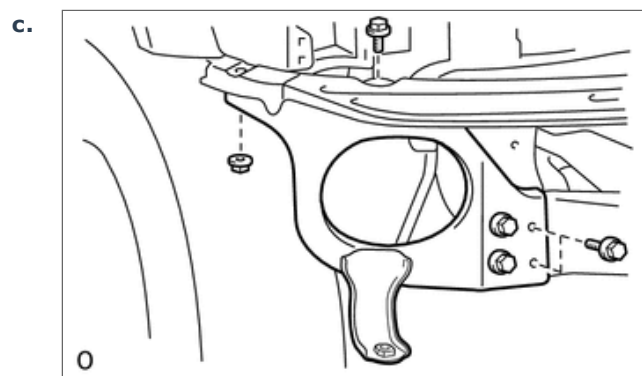


Remove the 3 bolts, nut and front bumper bracket sub-assembly RH.

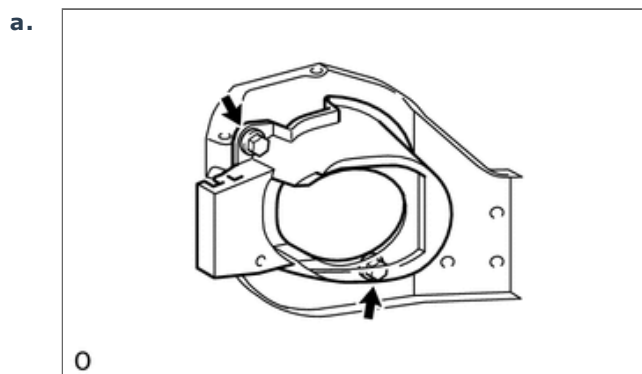

w/ Fog Light:

- i. Remove the 2 bolts and fog light cover LH.

b.

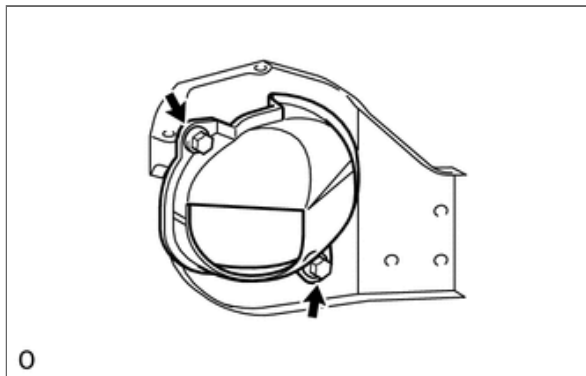

w/o Fog Light:

- i. Remove the 2 bolts and fog light cover LH.

9.REMOVE FOG LIGHT COVER RH


81481E

HINT:

Use the same procedures described for the LH side.

10.REMOVE FRONT BUMPER REINFORCEMENT PLATE SUB-ASSEMBLY


52101B

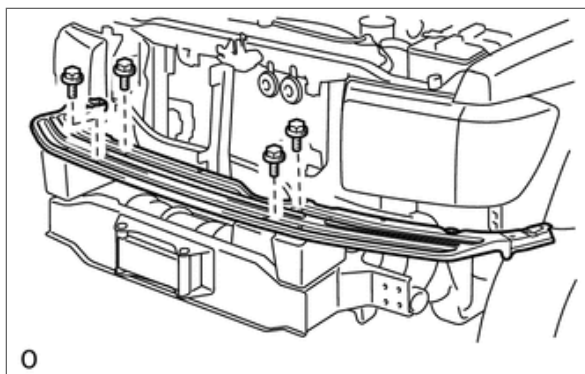

- a. Remove the 4 bolts and front bumper reinforcement plate sub-assembly.

11.REMOVE FRONT BUMPER NO. 4 ARM MOUNTING BRACKET

52138D

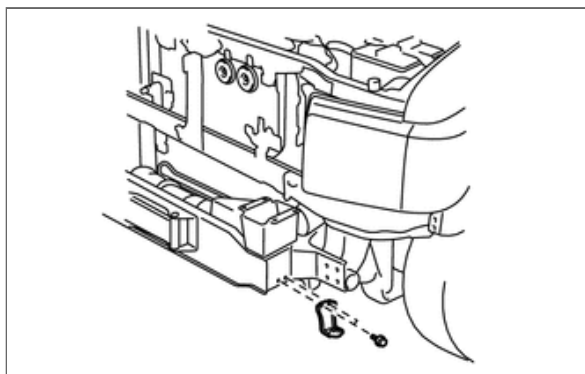


- a. Remove the 2 bolts and front bumper No. 4 arm mounting bracket.

12.REMOVE FRONT BUMPER NO. 3 ARM MOUNTING BRACKET


52137F

HINT:

Use the same procedures described for the front bumper No. 4 arm mounting bracket.

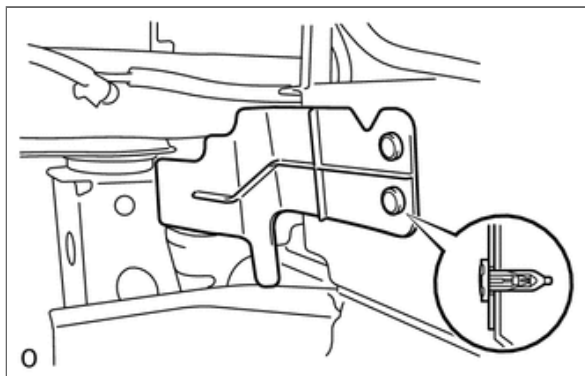13.REMOVE RADIATOR SIDE AIR SEAL LH**53286D**

- a. Remove the 2 clips and radiator side air seal LH.

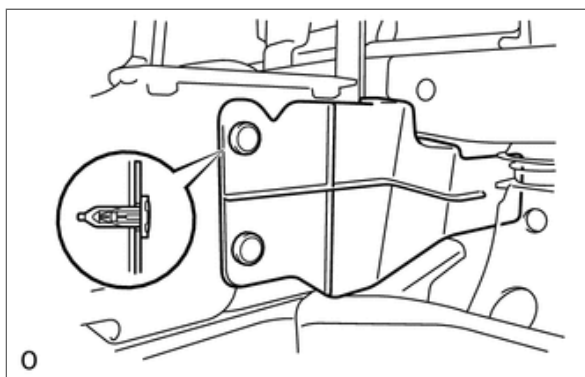14.REMOVE RADIATOR SIDE AIR SEAL RH**53285M**

- a. Remove the 2 clips and radiator side air seal RH.