


1GR-FE EMISSION CONTROL CANISTER REMOVAL

PROCEDURE


1.REMOVE CHARCOAL CANISTER ASSEMBLY

77740

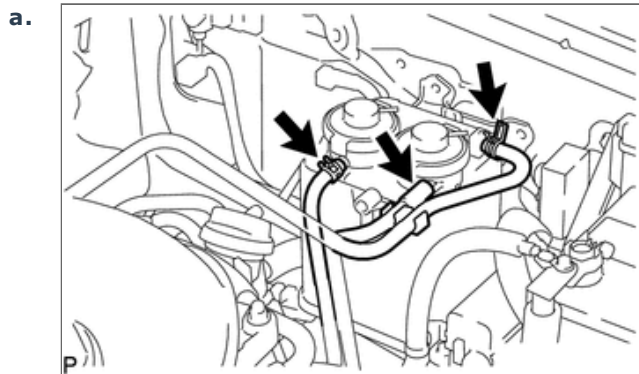

Slide the clamp and disconnect the No. 1 fuel vapor feed hose from the charcoal canister assembly.

- b. Slide the clamp and disconnect the fuel emission hose from the charcoal canister assembly.
- c. Disconnect the No. 1 charcoal canister outlet hose from the charcoal canister assembly.

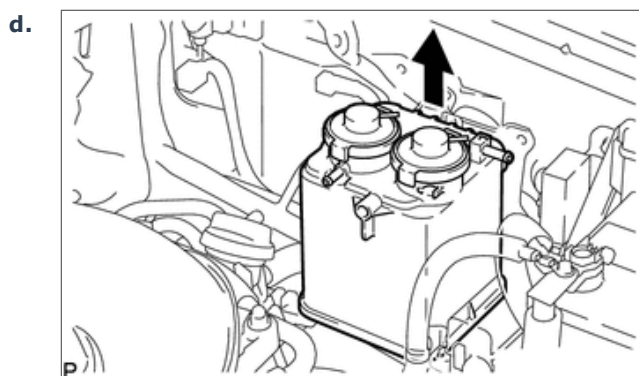

Remove the charcoal canister assembly from the charcoal canister base bracket.