


ILLUSTRATION

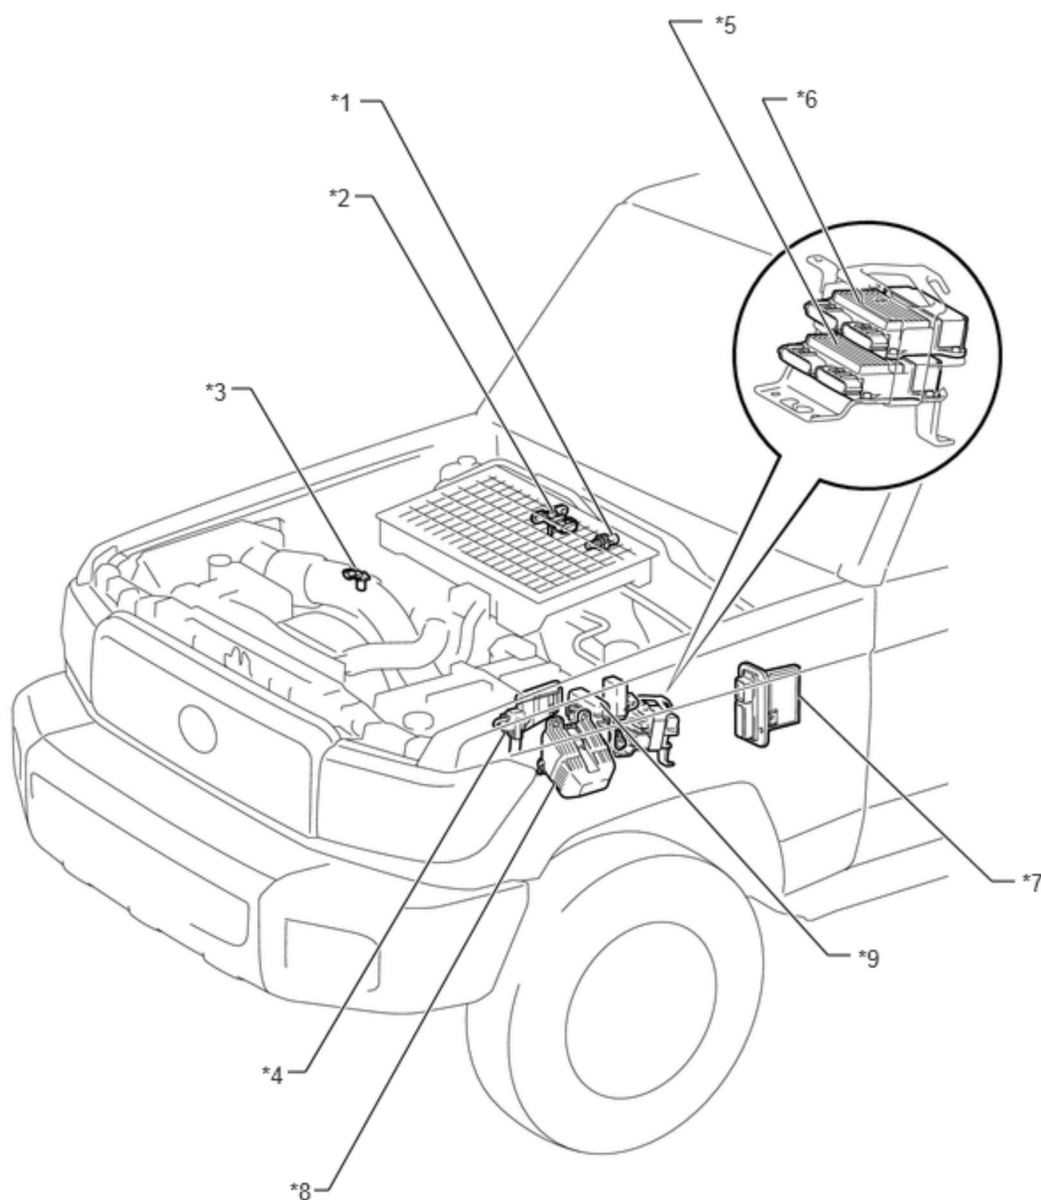


0

*1	INTAKE AIR TEMPERATURE SENSOR	*2	MANIFOLD ABSOLUTE PRESSURE SENSOR
*3	MASS AIR FLOW METER	*4	FUSE BLOCK ASSEMBLY - EFI MAIN FUSE - EFI MAIN 2 FUSE - AM2 FUSE
*5	NO. 1 INJECTOR DRIVER	*6	NO. 2 INJECTOR DRIVER
*7	ECM	*8	ENGINE ROOM RELAY BLOCK ASSEMBLY - EDU1 RELAY - EDU2 RELAY - GLOW1 RELAY - GLOW2 RELAY


			- MAIN RELAY - MAIN 2 RELAY - STARTER RELAY (ST)
*9	FUSIBLE LINK BLOCK ASSEMBLY - GLOW1 FUSE - GLOW2 FUSE - AM1 FUSE - AM1 NO. 2 FUSE	-	-

ILLUSTRATION

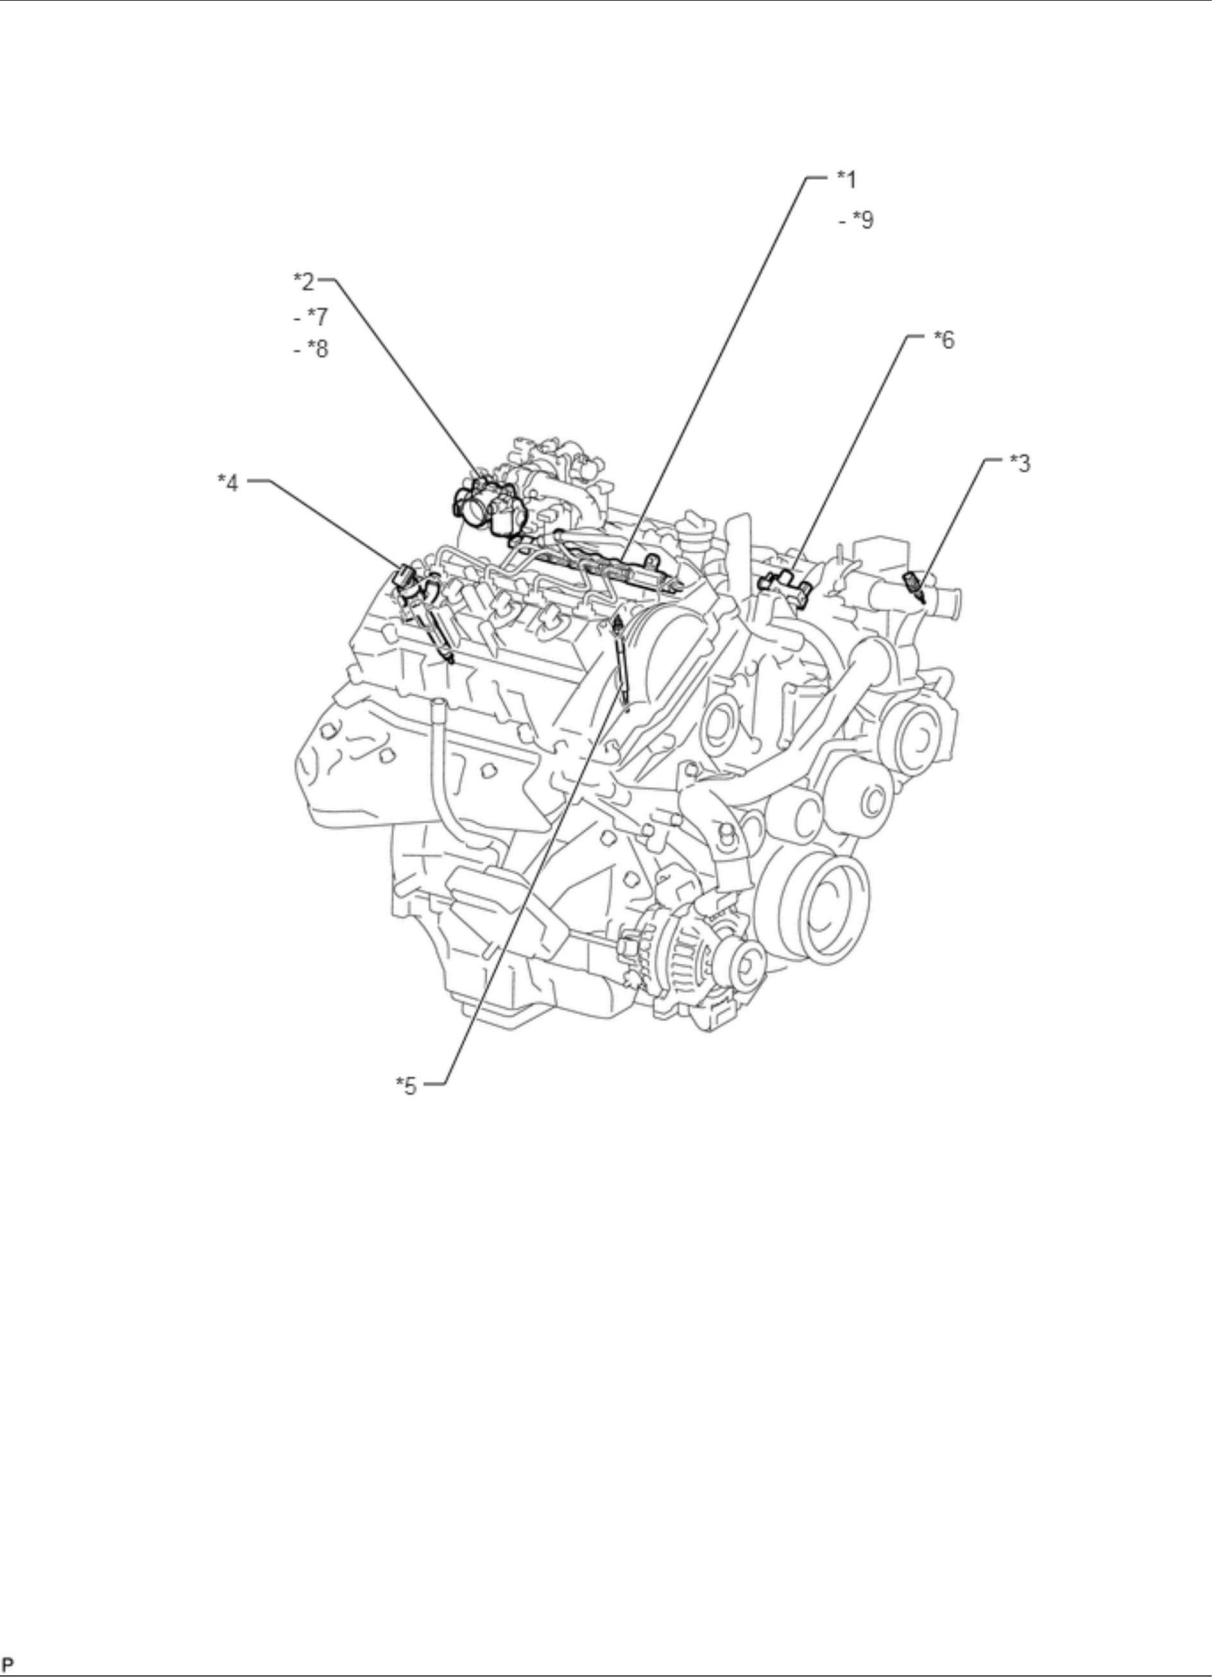

*1	COMMON RAIL RH	*2	DIESEL THROTTLE BODY (for Bank 1)
*3	ENGINE COOLANT TEMPERATURE SENSOR	*4	FUEL INJECTOR
*5	GLOW PLUG	*6	VACUUM REGULATING VALVE
*7	THROTTLE POSITION SENSOR	*8	DIESEL THROTTLE MOTOR
*9	FUEL PRESSURE SENSOR	-	-

ILLUSTRATION

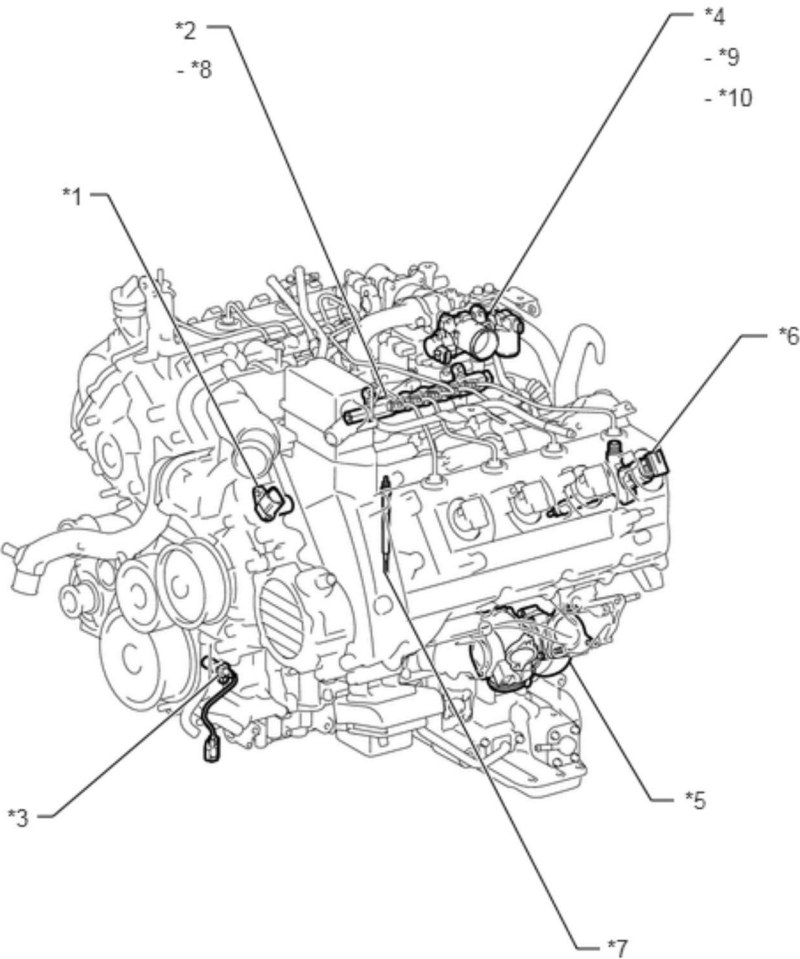


P

*1	CAMSHAFT POSITION SENSOR	*2	COMMON RAIL LH
----	--------------------------	----	----------------


*3	CRANKSHAFT POSITION SENSOR	*4	DIESEL THROTTLE BODY (for Bank 2)
*5	TURBOCHARGER	*6	FUEL INJECTOR
*7	GLOW PLUG	*8	PRESSURE LIMITER
*9	THROTTLE POSITION SENSOR	*10	DIESEL THROTTLE MOTOR

ILLUSTRATION

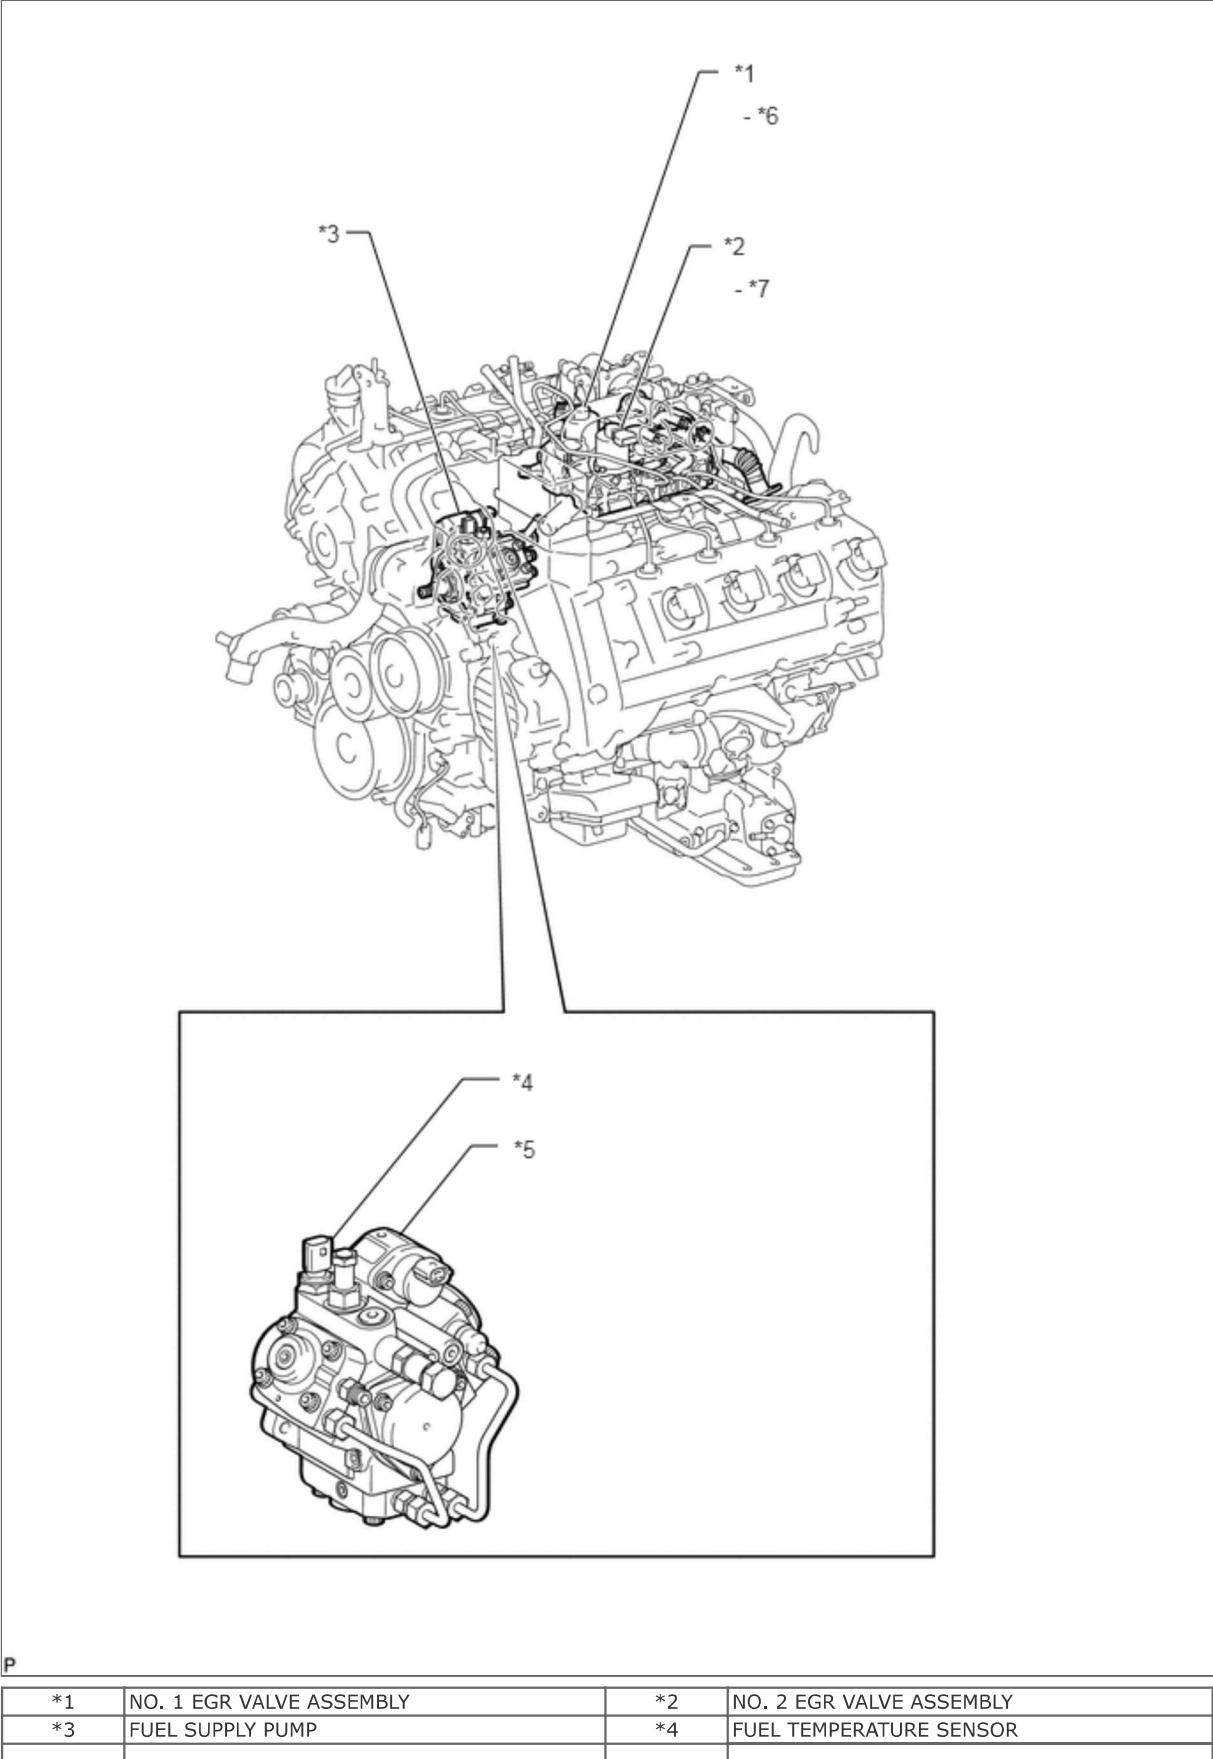

*5	SUCTION CONTROL VALVE	*6	EGR VALVE POSITION SENSOR
*7	EGR VALVE POSITION SENSOR	-	-

ILLUSTRATION

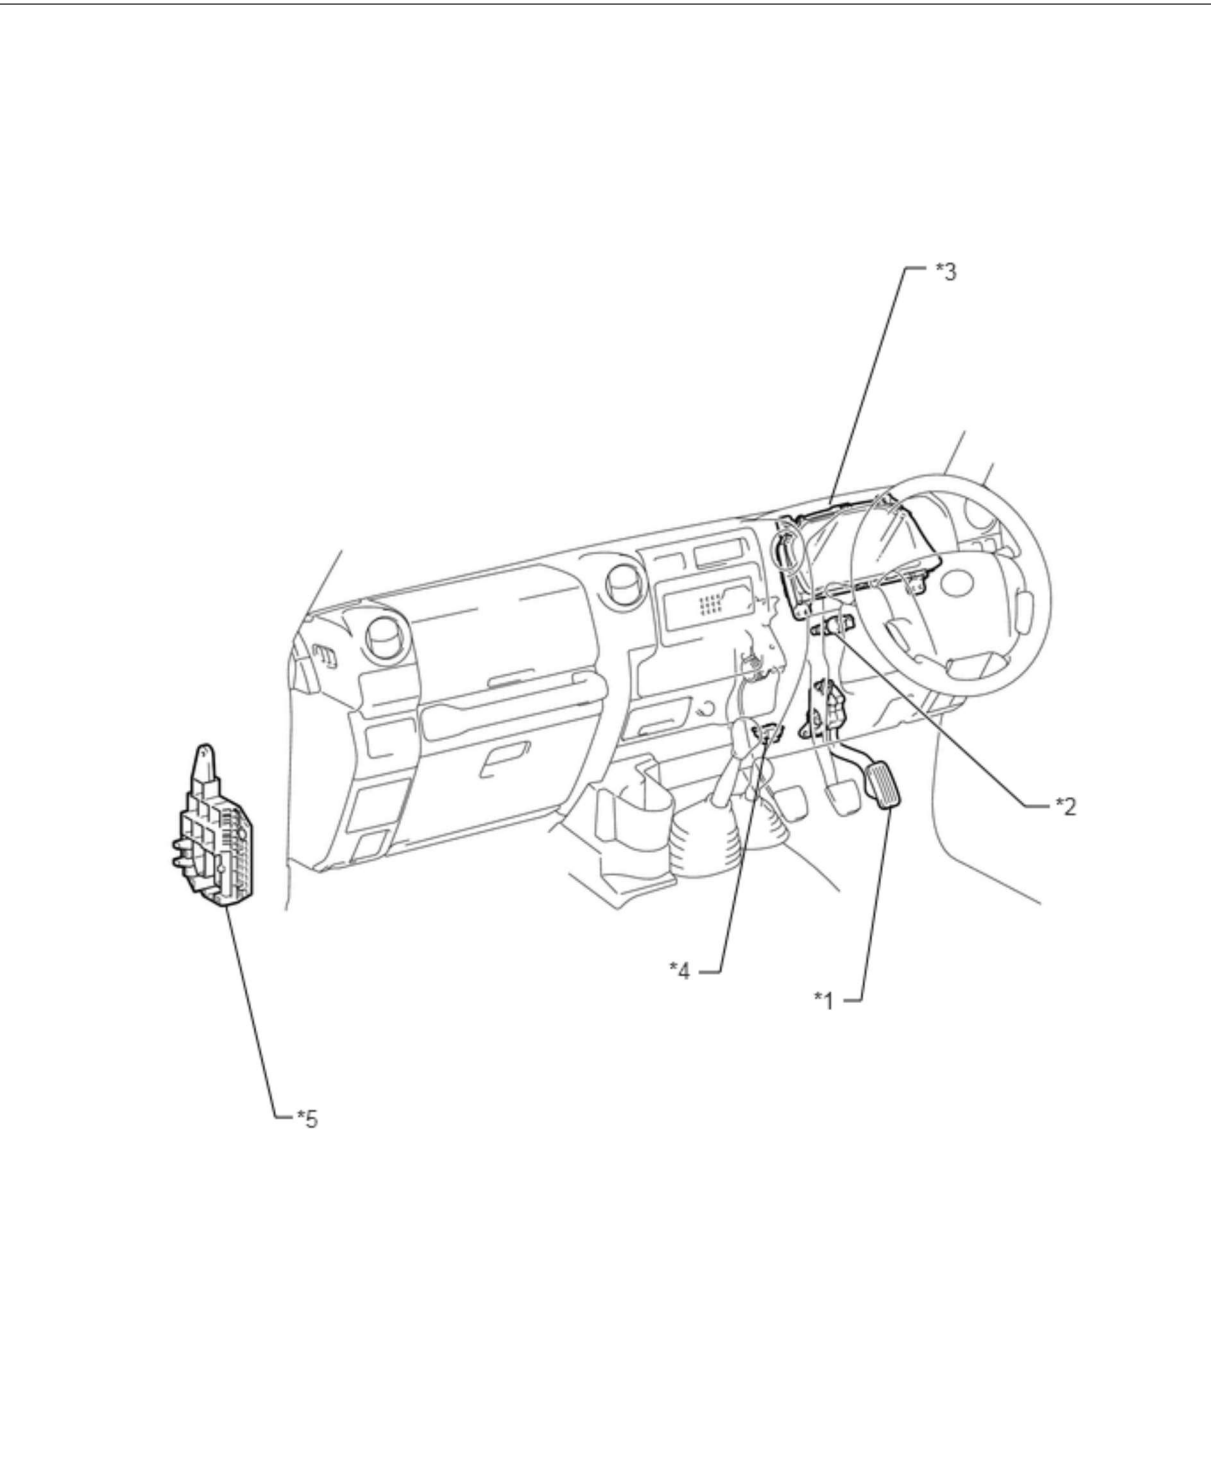

P

*1	ACCELERATOR PEDAL	*2	STOP LIGHT SWITCH
*3	COMBINATION METER	*4	DLC3
*5	COWL SIDE RELAY BLOCK ASSEMBLY - GAUGE FUSE - MET FUSE - IGN FUSE - ECU IG FUSE - STOP FUSE - ST FUSE - IG1 1 RELAY	-	-

