



1VD-FTV INTAKE / EXHAUST INTERCOOLER COMPONENTS

ILLUSTRATION

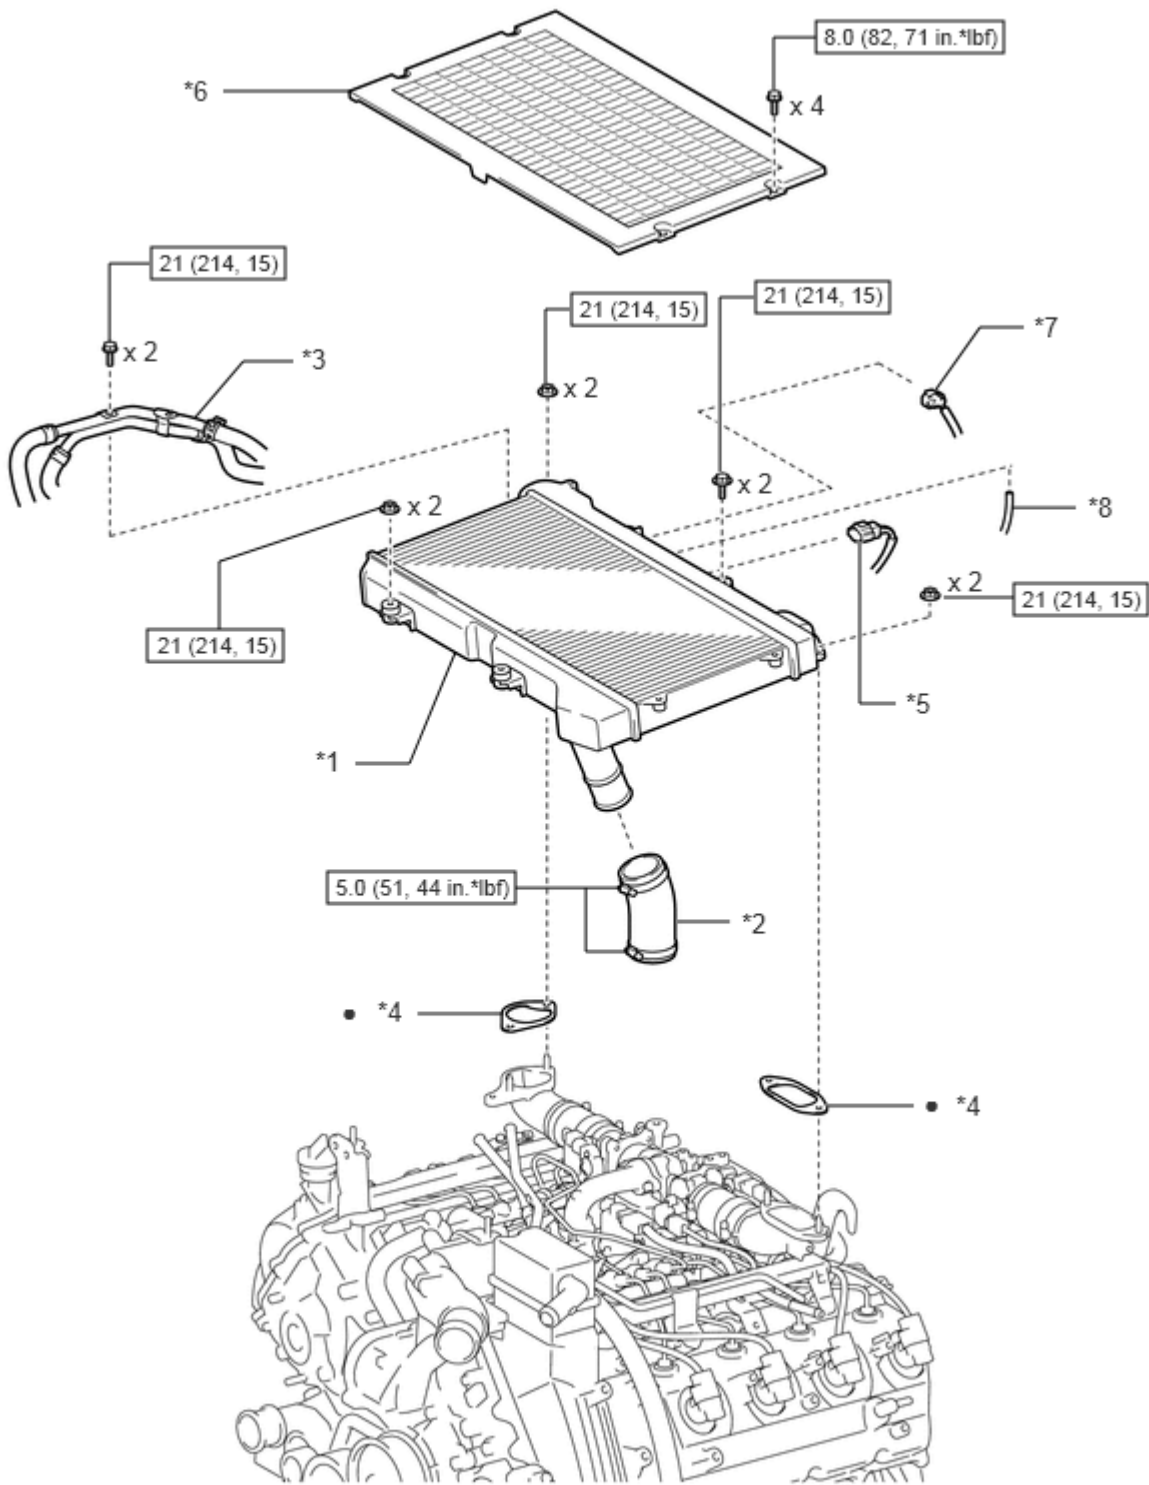

P

*1	INTERCOOLER	*2	NO. 1 AIR HOSE
*3	OUTLET HEATER WATER PIPE B	*4	GASKET

*5	INTAKE AIR TEMPERATURE SENSOR CONNECTOR	*6	INTERCOOLER PROTECTOR
*7	TURBO PRESSURE SENSOR CONNECTOR	*8	VACUUM HOSE
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.