

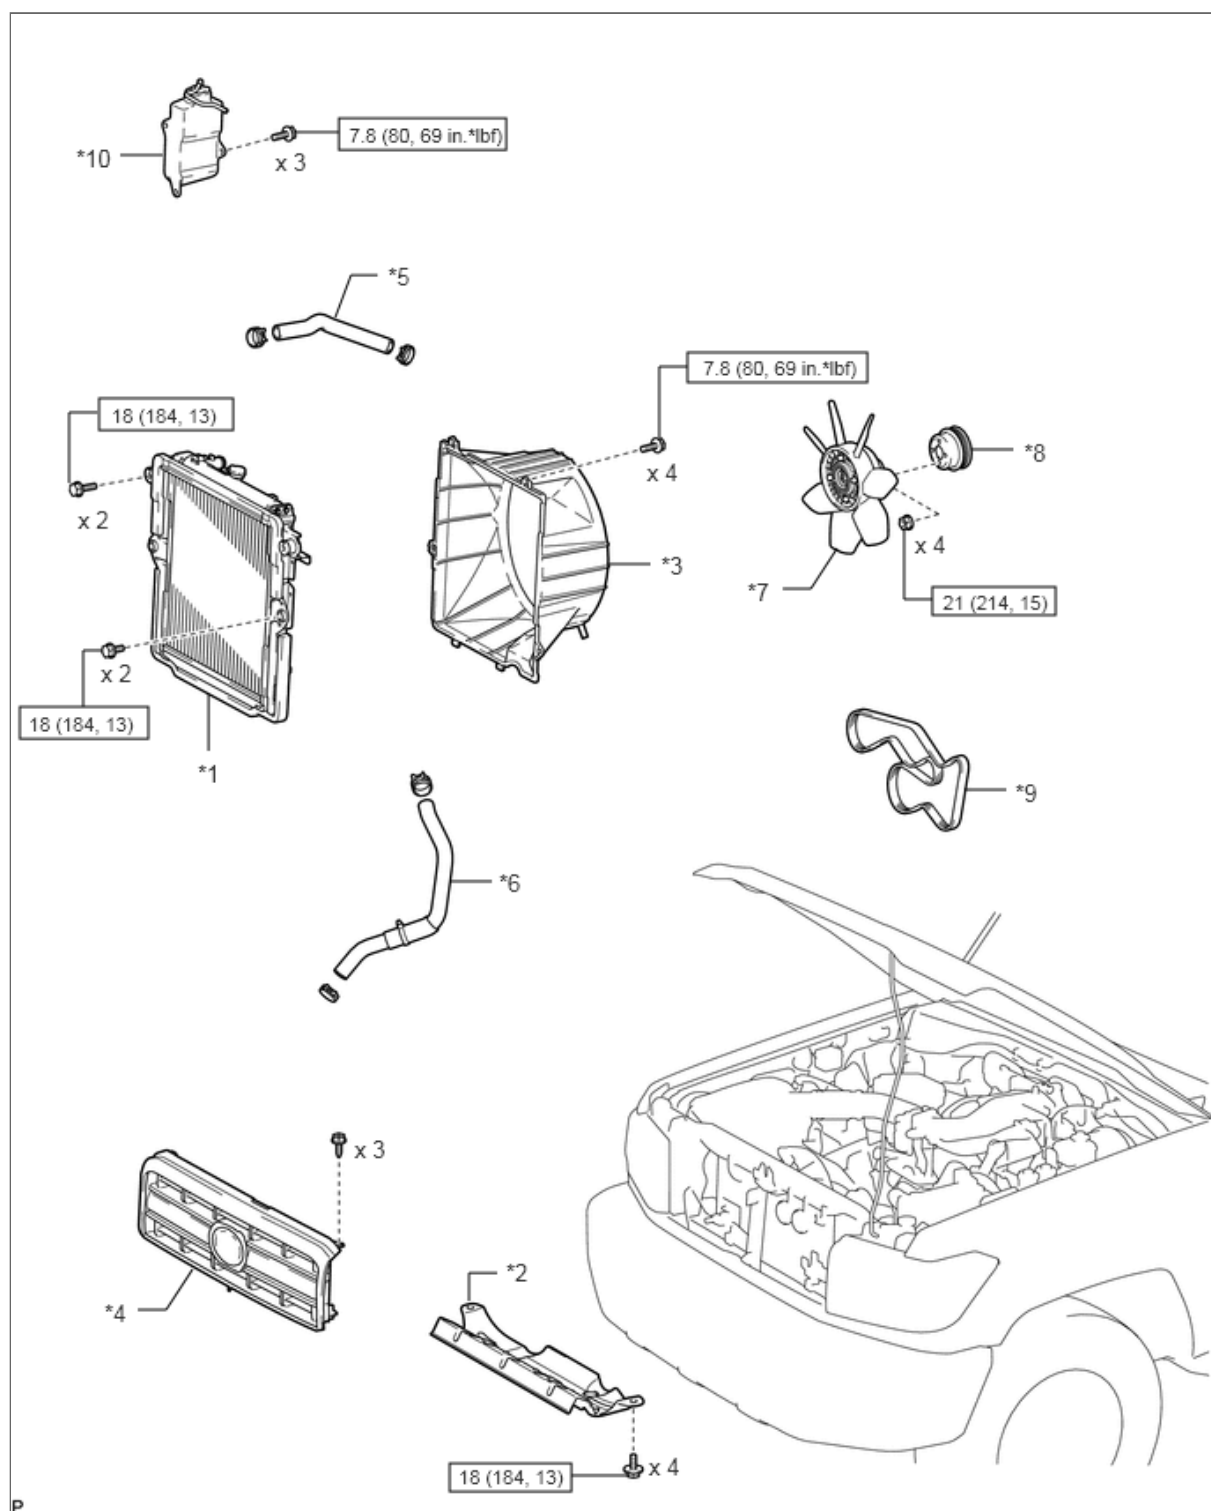


ILLUSTRATION




*1	RADIATOR ASSEMBLY	*2	NO. 2 ENGINE UNDER COVER
*3	FAN SHROUD	*4	RADIATOR GRILLE
*5	NO. 1 RADIATOR HOSE	*6	NO. 2 RADIATOR HOSE
*7	FAN WITH FLUID COUPLING	*8	FAN PULLEY
*9	FAN AND GENERATOR V-BELT	*10	RADIATOR RESERVOIR
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-

ILLUSTRATION

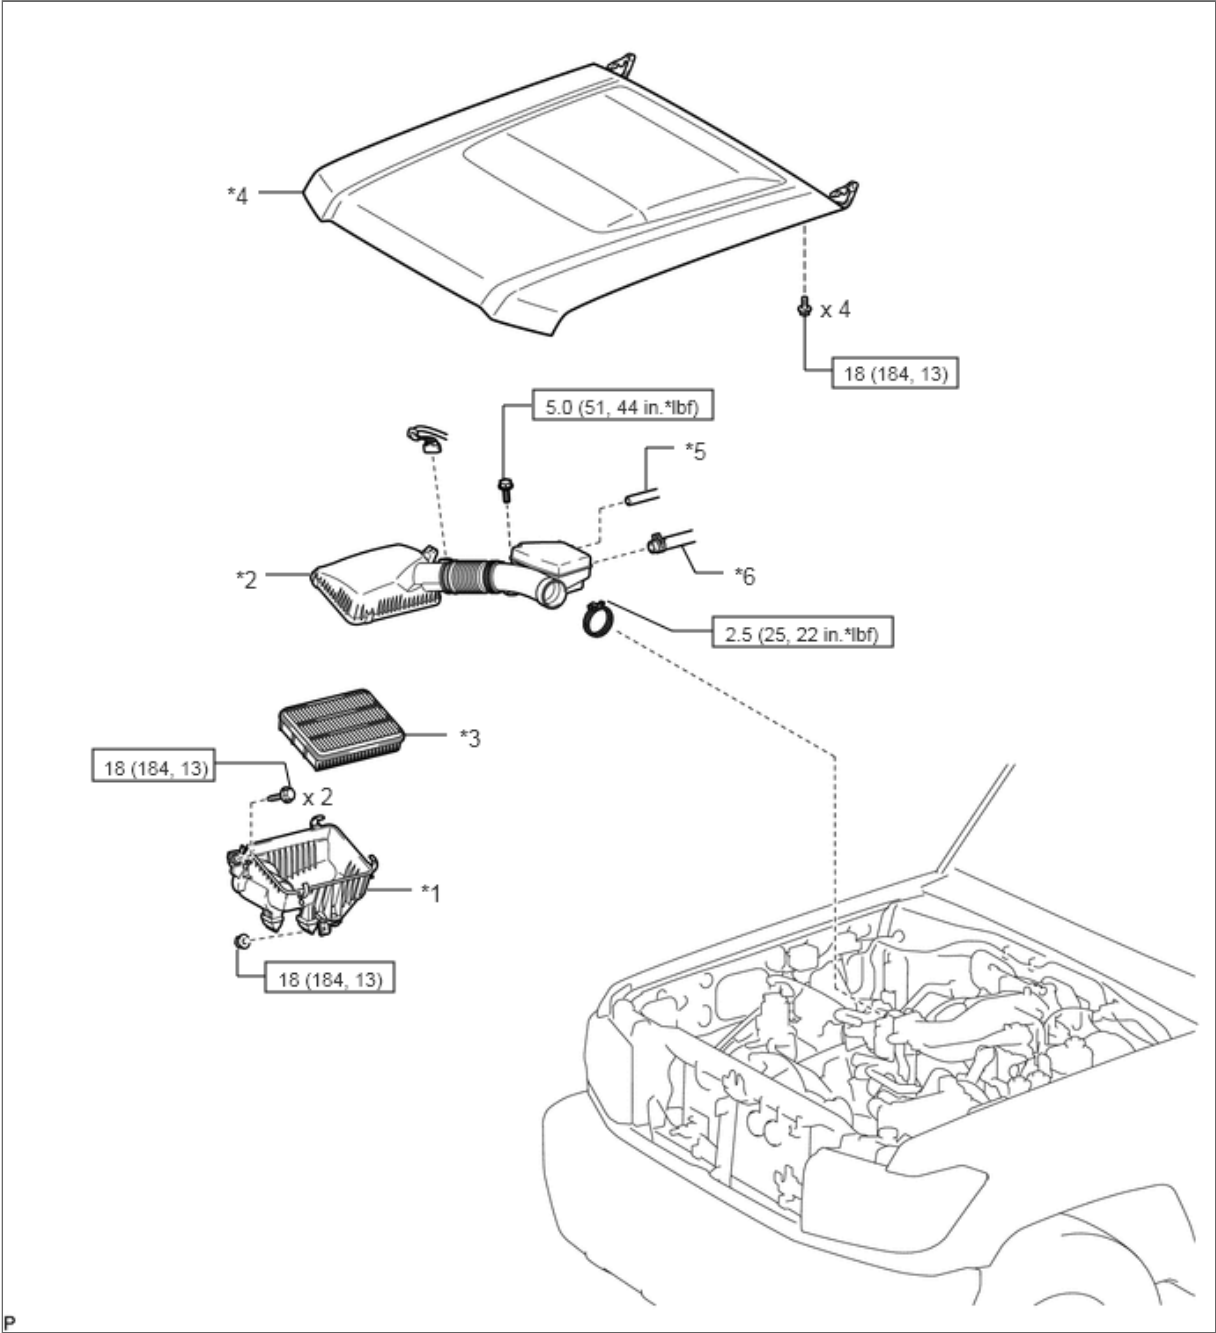

*1	AIR CLEANER ASSEMBLY	*2	AIR CLEANER CAP SUB-ASSEMBLY WITH NO. 1 AIR CLEANER HOSE
*3	AIR CLEANER FILTER ELEMENT SUB-ASSEMBLY	*4	HOOD SUB-ASSEMBLY
*5	VACUUM HOSE	*6	NO. 2 VENTILATION HOSE
<div><div></div></div>	N*m (kgf*cm, ft.*lbf): Specified torque	-	-

ILLUSTRATION

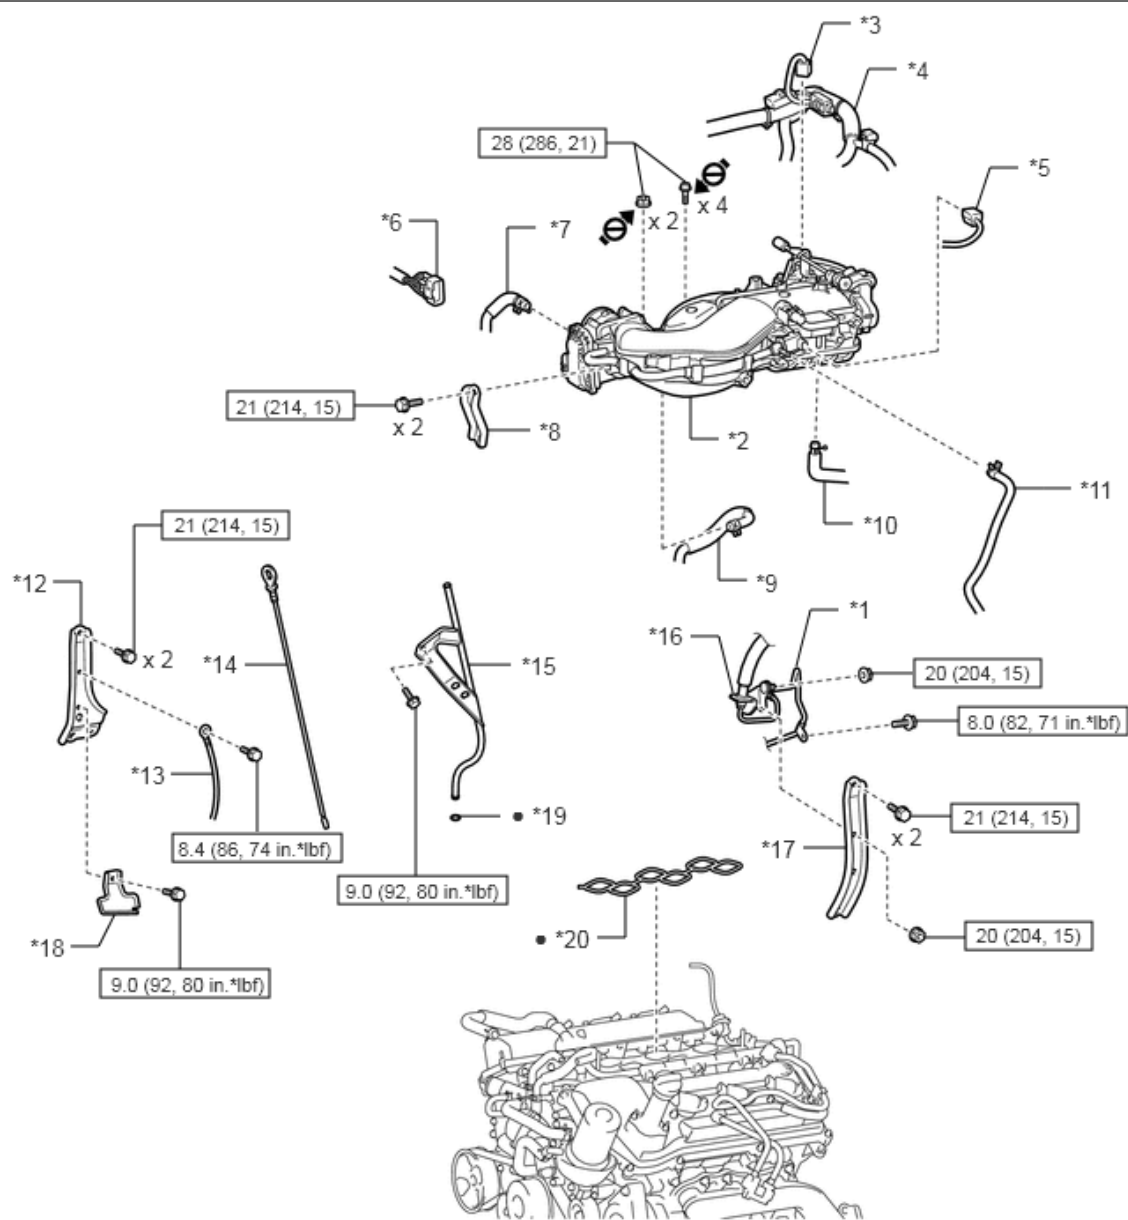


P


*1	CLUTCH TUBE	*2	INTAKE AIR SURGE TANK
*3	VACUUM SWITCHING VALVE CONNECTOR (for ACIS)	*4	ENGINE WIRE
*5	NO. 1 VACUUM SWITCHING VALVE CONNECTOR	*6	THROTTLE BODY CONNECTOR
*7	NO. 5 WATER BY-PASS HOSE	*8	THROTTLE BODY BRACKET
*9	NO. 4 WATER BY-PASS HOSE	*10	NO. 1 VENTILATION HOSE
*11	NO. 1 FUEL VAPOR FEED HOSE	*12	NO. 1 SURGE TANK STAY
*13	GROUND WIRE	*14	ENGINE OIL LEVEL DIPSTICK
*15	ENGINE OIL LEVEL DIPSTICK GUIDE	*16	CLUTCH HOSE BRACKET
*17	NO. 2 SURGE TANK STAY	*18	OIL BAFFLE PLATE
*19	O-RING	*20	GASKET
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	Do not apply lubricants to the threads parts	-	-

ILLUSTRATION

*A

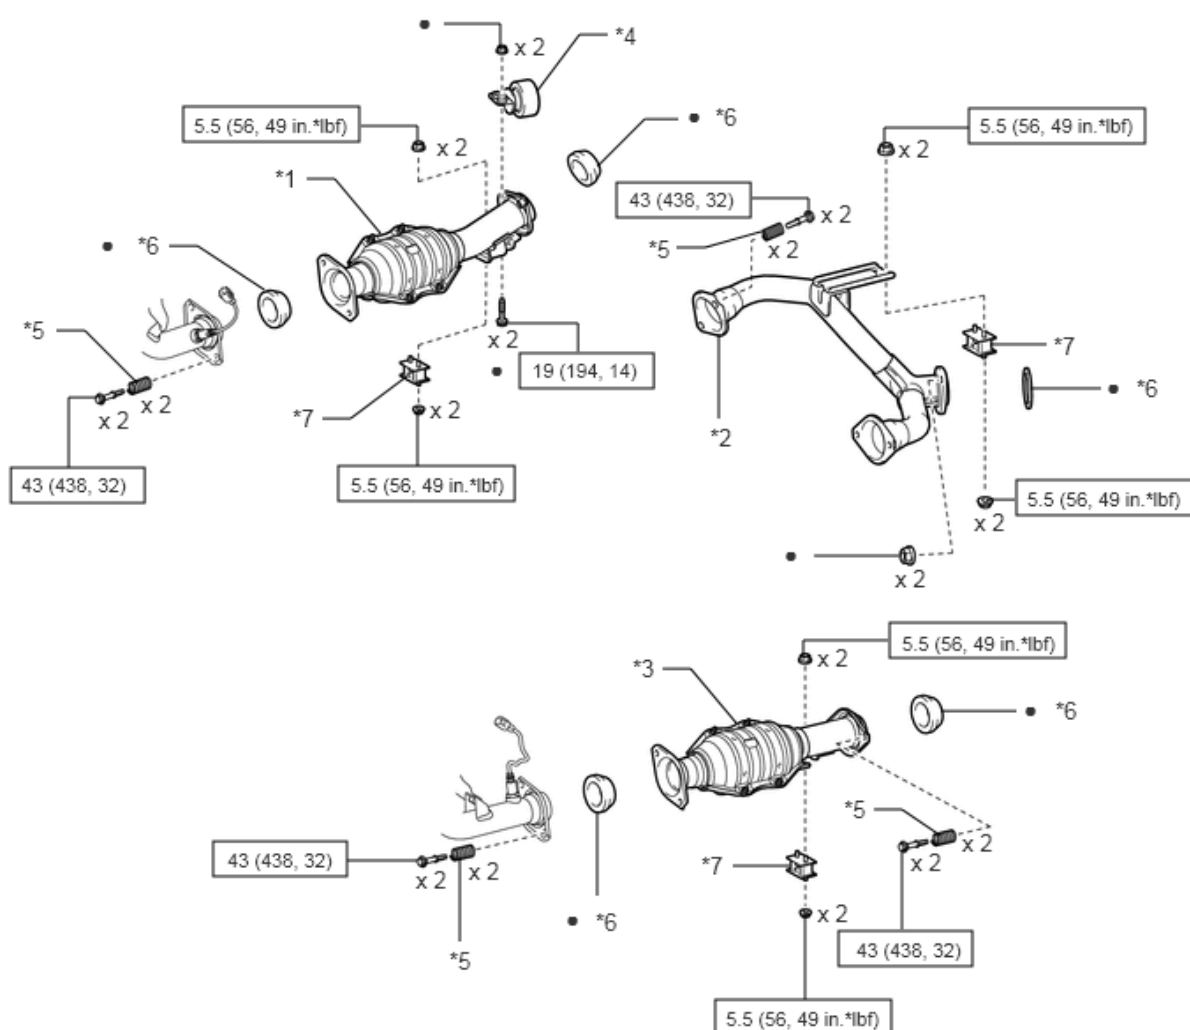


P


*A	for Model Code #J71, #J76 Series	-	-
*1	FRONT EXHAUST PIPE ASSEMBLY	*2	CENTER EXHAUST PIPE ASSEMBLY
*3	NO. 2 FRONT EXHAUST PIPE ASSEMBLY	*4	EXHAUST PIPE DAMPER
*5	COMPRESSION SPRING	*6	GASKET
*7	EXHAUST PIPE SUPPORT CUSHION	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

ILLUSTRATION

*A

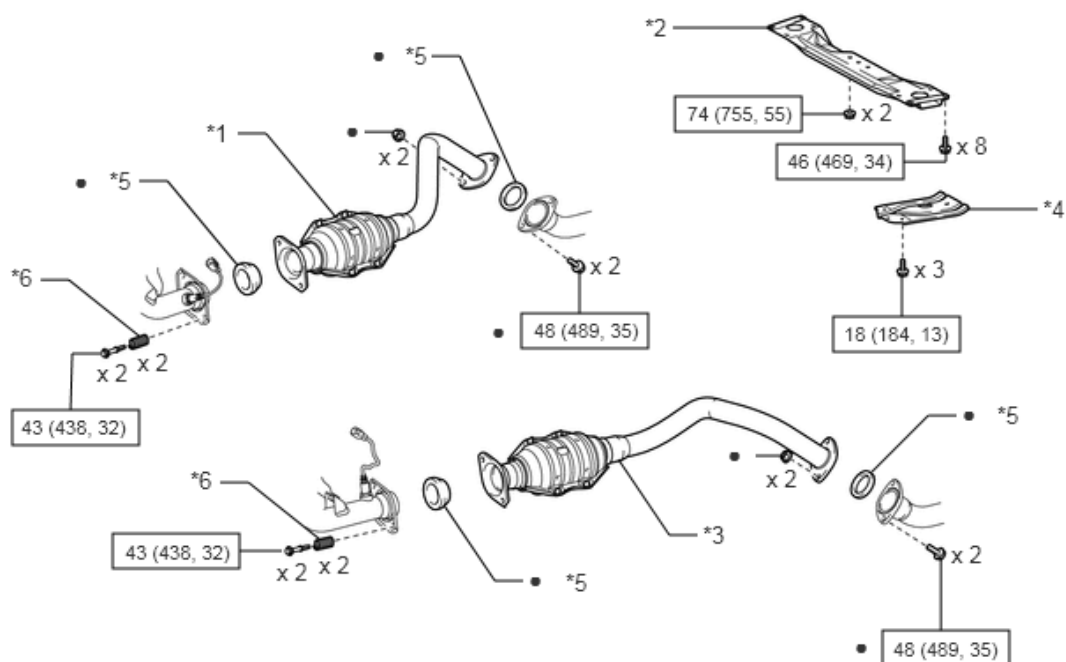

*B

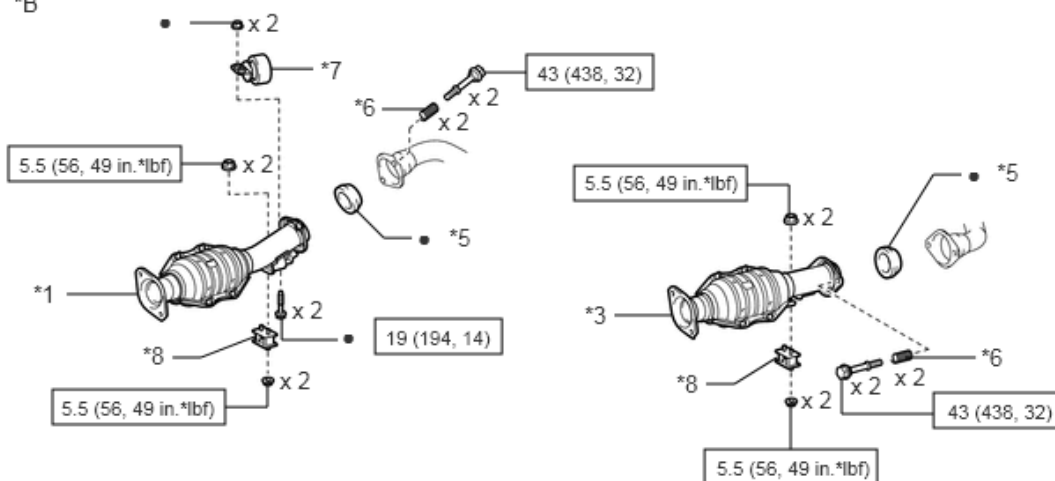

P


*A	for Model Code #J78, #J79 Series	*B	for Double Cab
*1	FRONT EXHAUST PIPE ASSEMBLY	*2	NO. 2 FRAME CROSSMEMBER SUB-ASSEMBLY
*3	NO. 2 FRONT EXHAUST PIPE ASSEMBLY	*4	TRANSFER CASE PROTECTOR
*5	GASKET	*6	COMPRESSION SPRING
*7	EXHAUST PIPE DAMPER	*8	EXHAUST PIPE SUPPORT CUSHION
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

ILLUSTRATION

P




*A

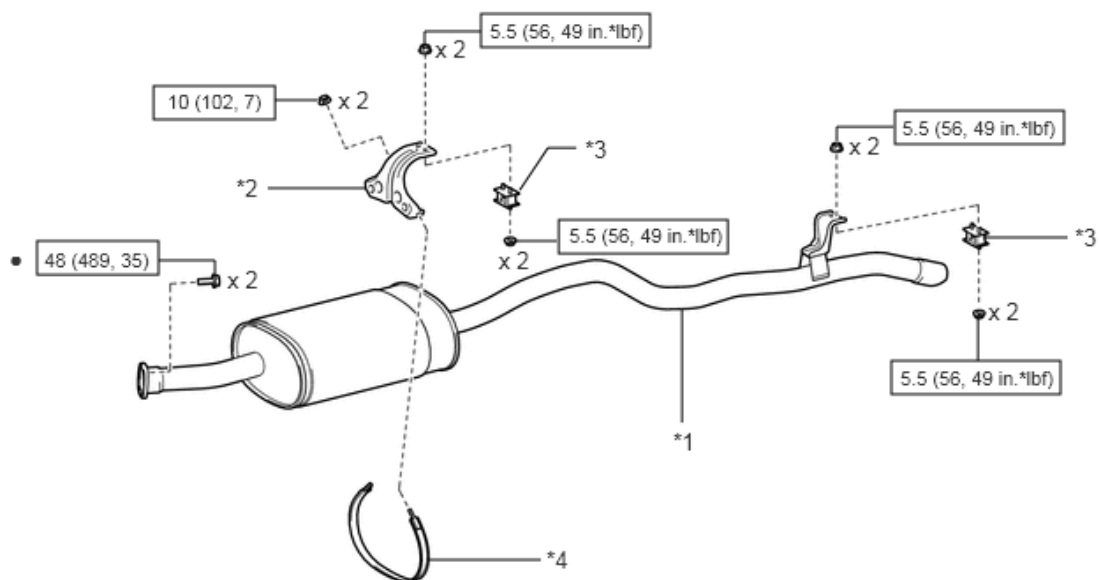


P

*A	for Model Code #J76 Series	-	-
*1	TAILPIPE ASSEMBLY	*2	NO. 2 EXHAUST PIPE SUPPORT STAY
*3	EXHAUST PIPE SUPPORT CUSHION	*4	EXHAUST PIPE CLAMP
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part


ILLUSTRATION

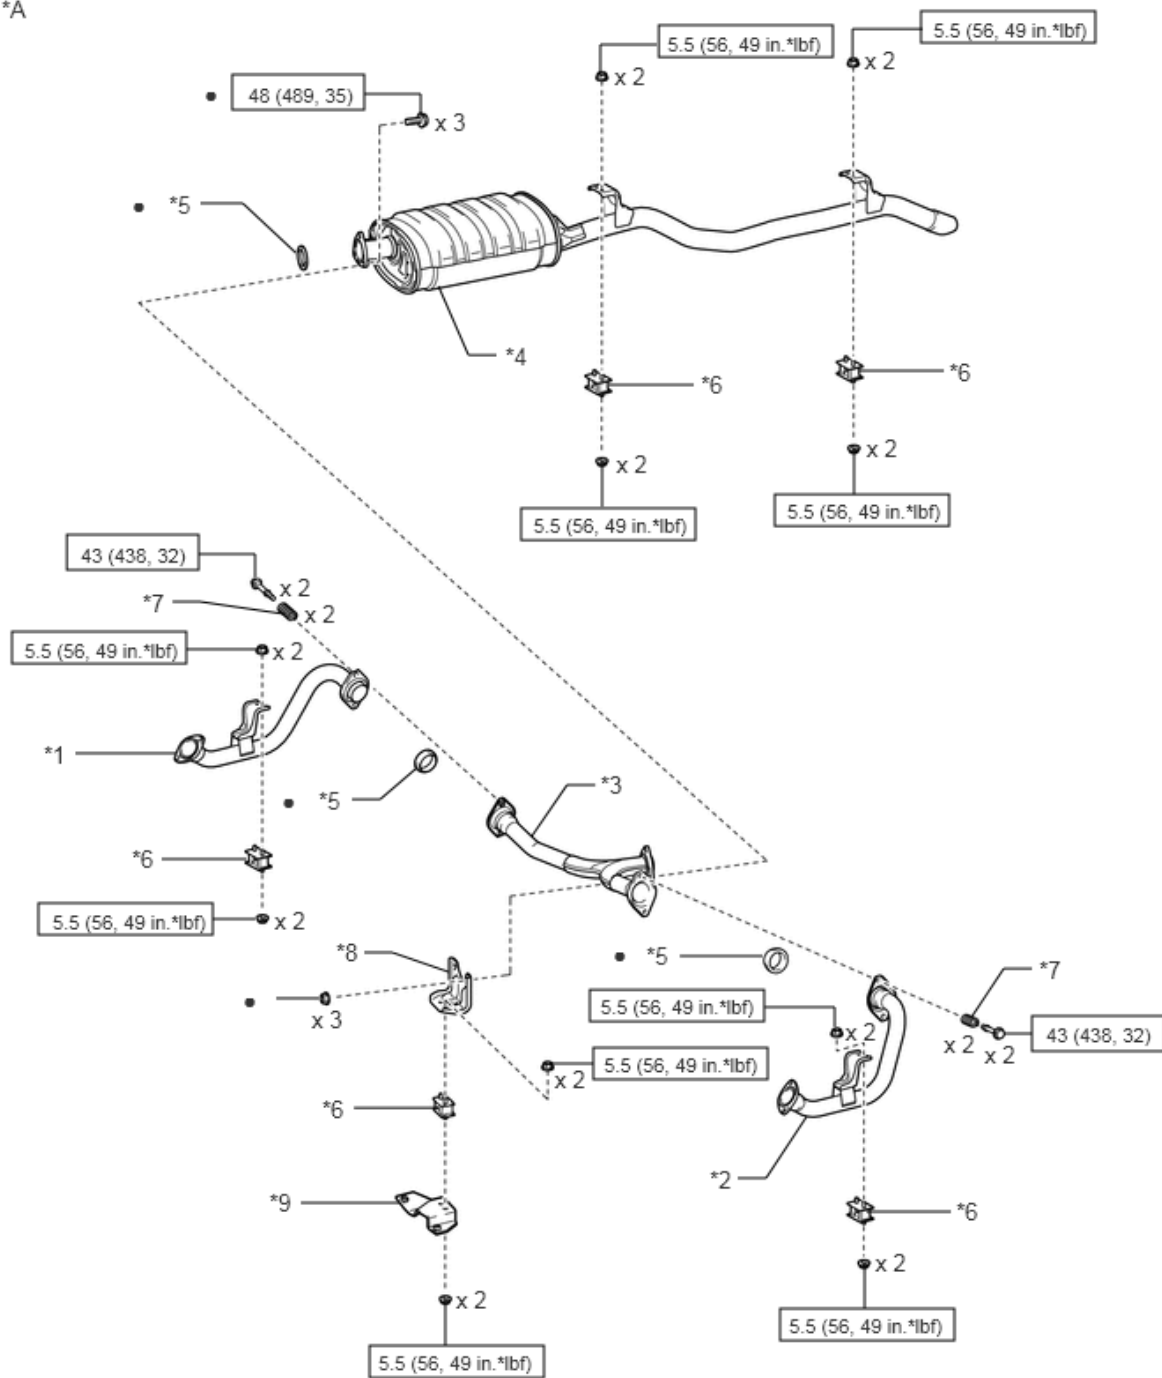$\star A$ 


P

*A	for Model Code #J78 Series	-	-
*1	CENTER EXHAUST PIPE ASSEMBLY	*2	NO. 2 CENTER EXHAUST PIPE ASSEMBLY
*3	NO. 3 CENTER EXHAUST PIPE ASSEMBLY	*4	TAILPIPE ASSEMBLY
*5	GASKET	*6	EXHAUST PIPE SUPPORT
*7	COMPRESSION SPRING	*8	MUFFLER CLAMP BRACKET
*9	SUPPORT BRACKET	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	●	Non-reusable part

ILLUSTRATION

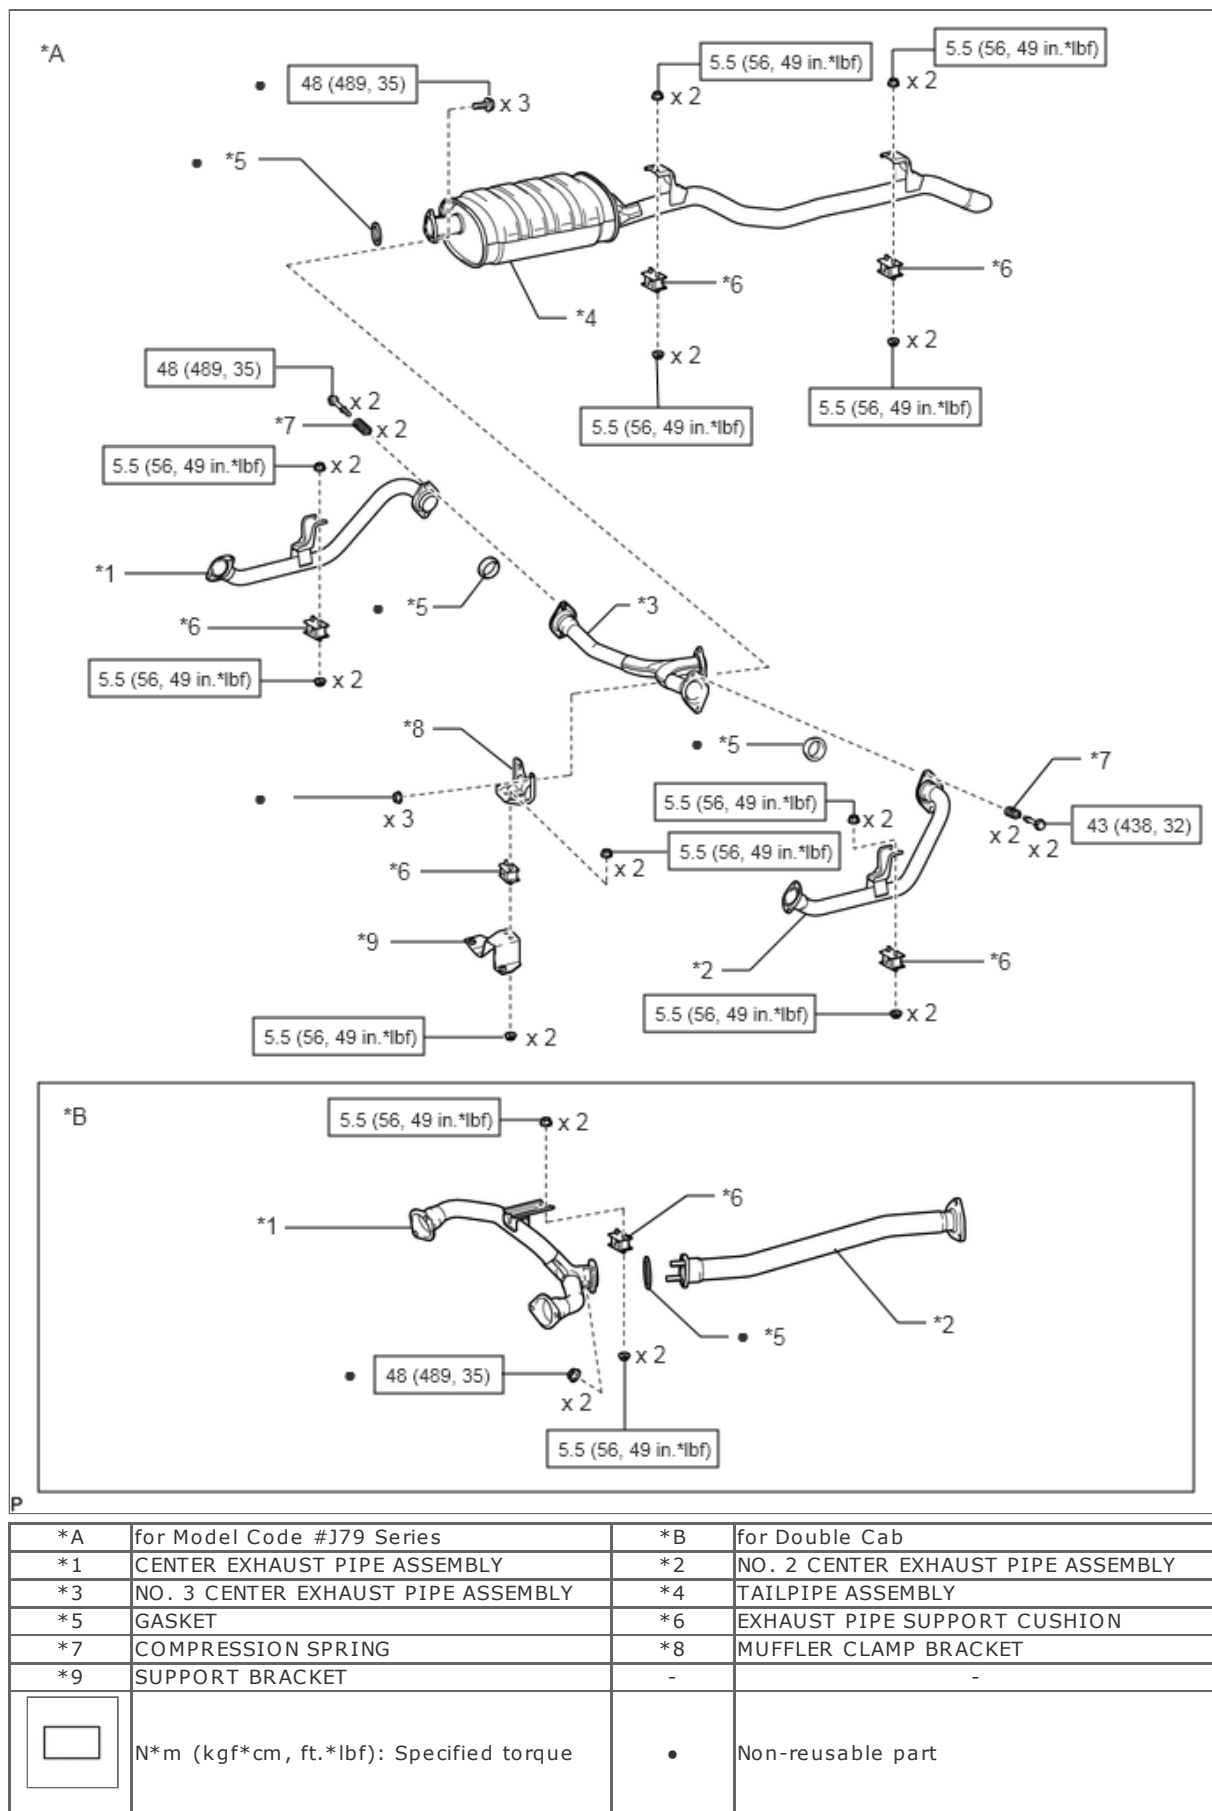


ILLUSTRATION

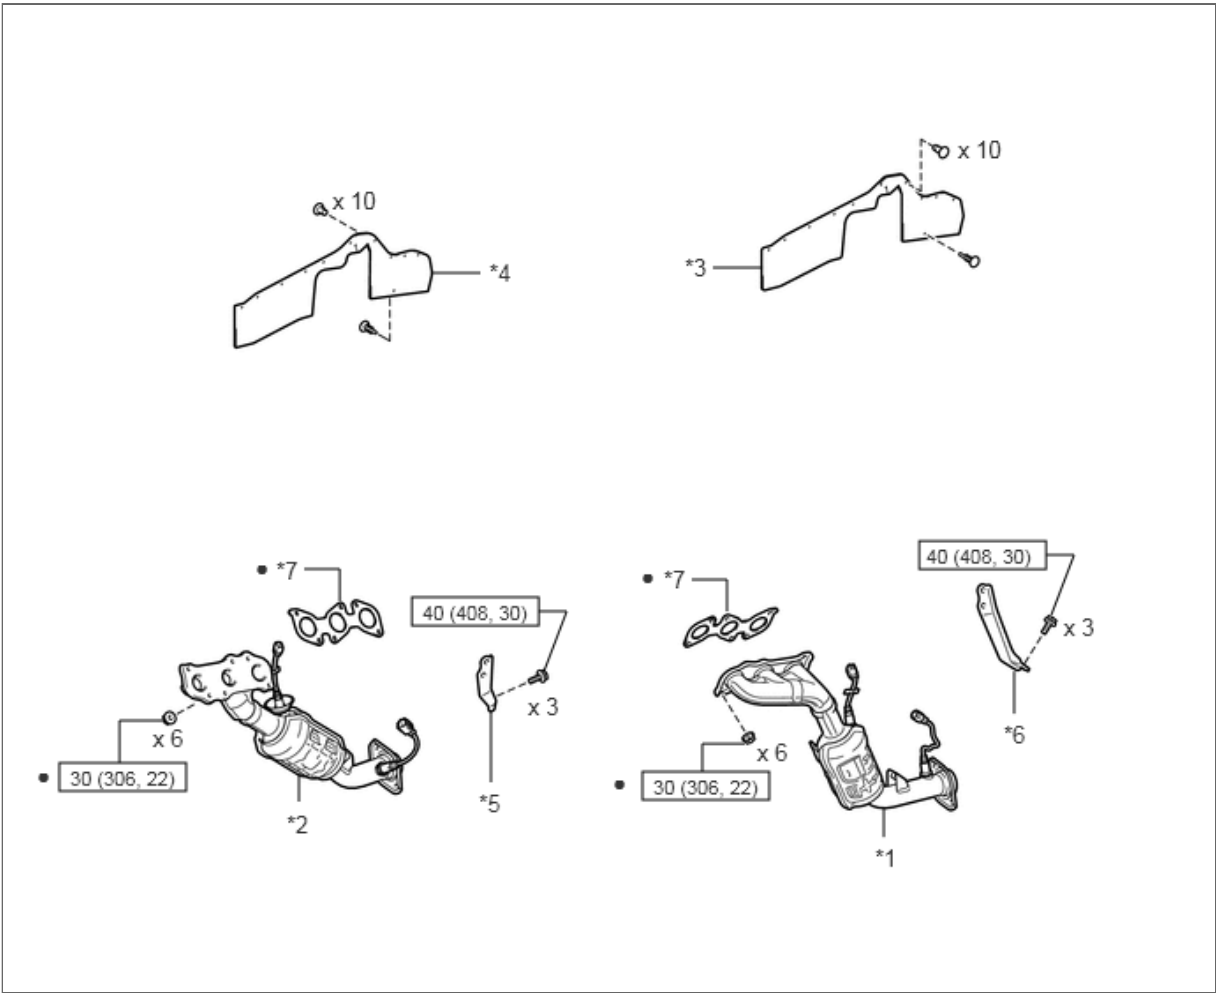

*1	EXHAUST MANIFOLD SUB-ASSEMBLY LH	*2	EXHAUST MANIFOLD SUB-ASSEMBLY RH
*3	FRONT FENDER APRON SEAL LH	*4	FRONT FENDER APRON SEAL RH
*5	NO. 1 MANIFOLD STAY	*6	NO. 2 MANIFOLD STAY
*7	GASKET	-	-
<div style="border: 1px solid black; width: 40px; height: 20px; margin: 0 auto;"></div>	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part





ILLUSTRATION

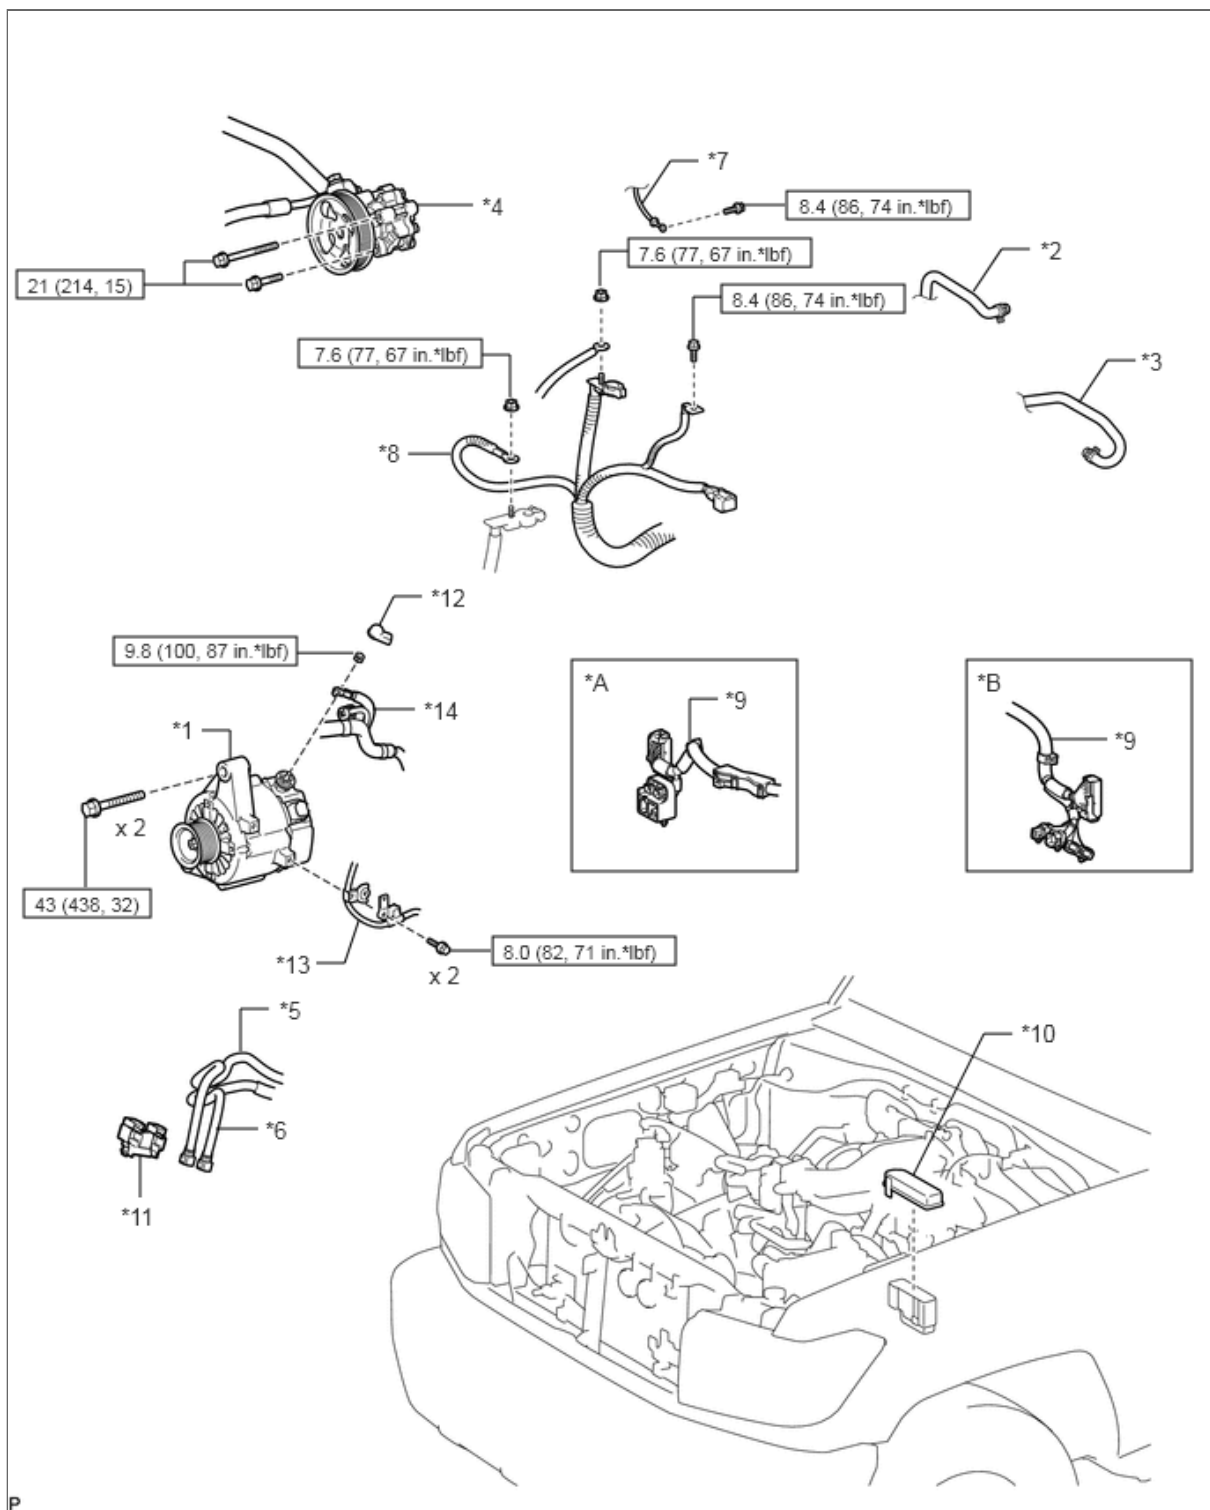

P

*A	for LHD	*B	for RHD
*1	GENERATOR ASSEMBLY	*2	INLET HEATER WATER HOSE
*3	OUTLET HEATER WATER HOSE	*4	VANE PUMP ASSEMBLY
*5	NO. 1 FUEL PIPE SUB-ASSEMBLY	*6	NO. 2 FUEL PIPE SUB-ASSEMBLY
*7	GROUND CABLE	*8	NO. 2 ENGINE WIRE
*9	ENGINE ROOM MAIN WIRE	*10	FUSE BLOCK COVER
*11	NO. 1 FUEL PIPE CLAMP	*12	TERMINAL CAP
*13	WIRE HARNESS CLAMP BRACKET	*14	WIRE HARNESS
<div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> N*m (kgf*cm, ft.*lbf): Specified torque		-	-


ILLUSTRATION

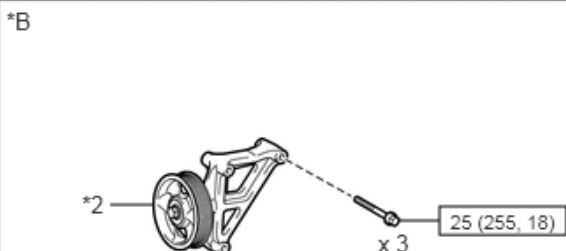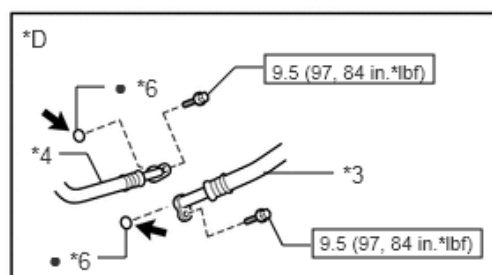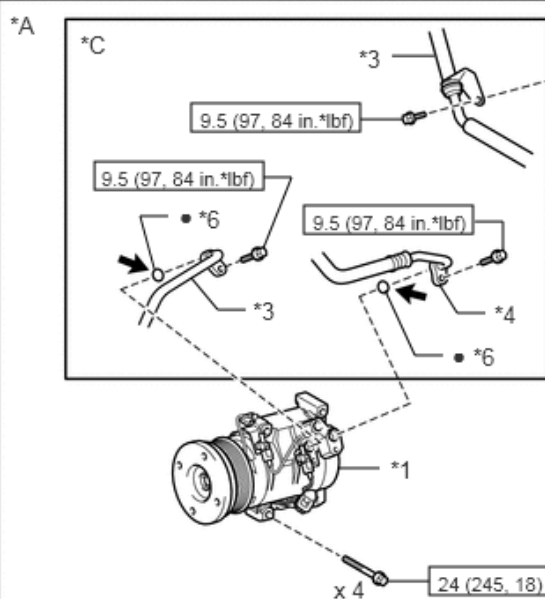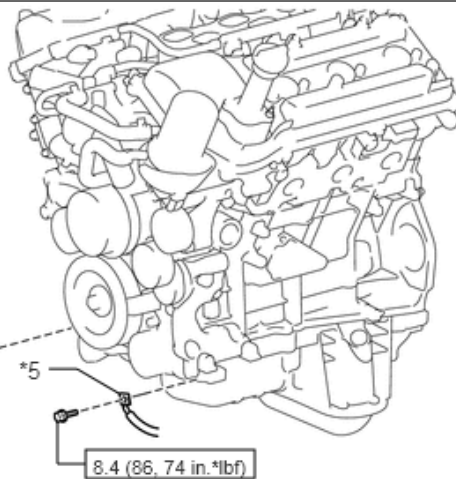

P


*A	w/ Air Conditioning System	*B	w/o Air Conditioning System
*C	for LHD	*D	for RHD
*1	COOLER COMPRESSOR ASSEMBLY	*2	IDLER PULLEY BRACKET
*3	NO. 1 COOLER REFRIGERANT SUCTION HOSE	*4	NO. 1 REFRIGERANT DISCHARGE HOSE
*5	NO. 7 ENGINE WIRE	*6	O-RING
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	Compressor oil ND-OIL 8 or equivalent	-	-

ILLUSTRATION

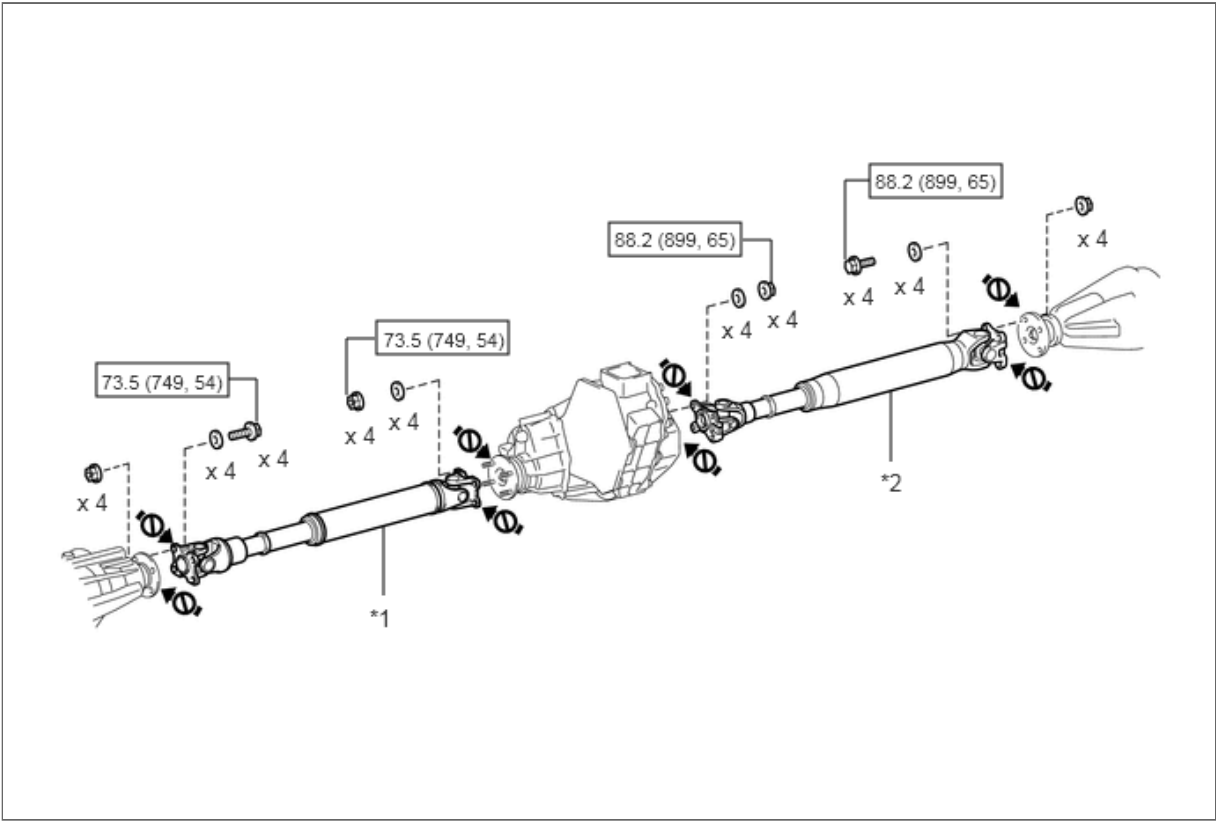


*1	FRONT PROPELLER SHAFT ASSEMBLY	*2	PROPELLER SHAFT ASSEMBLY
	N*m (kgf*cm, ft.*lbf): Specified torque		Do not apply lubricants


ILLUSTRATION

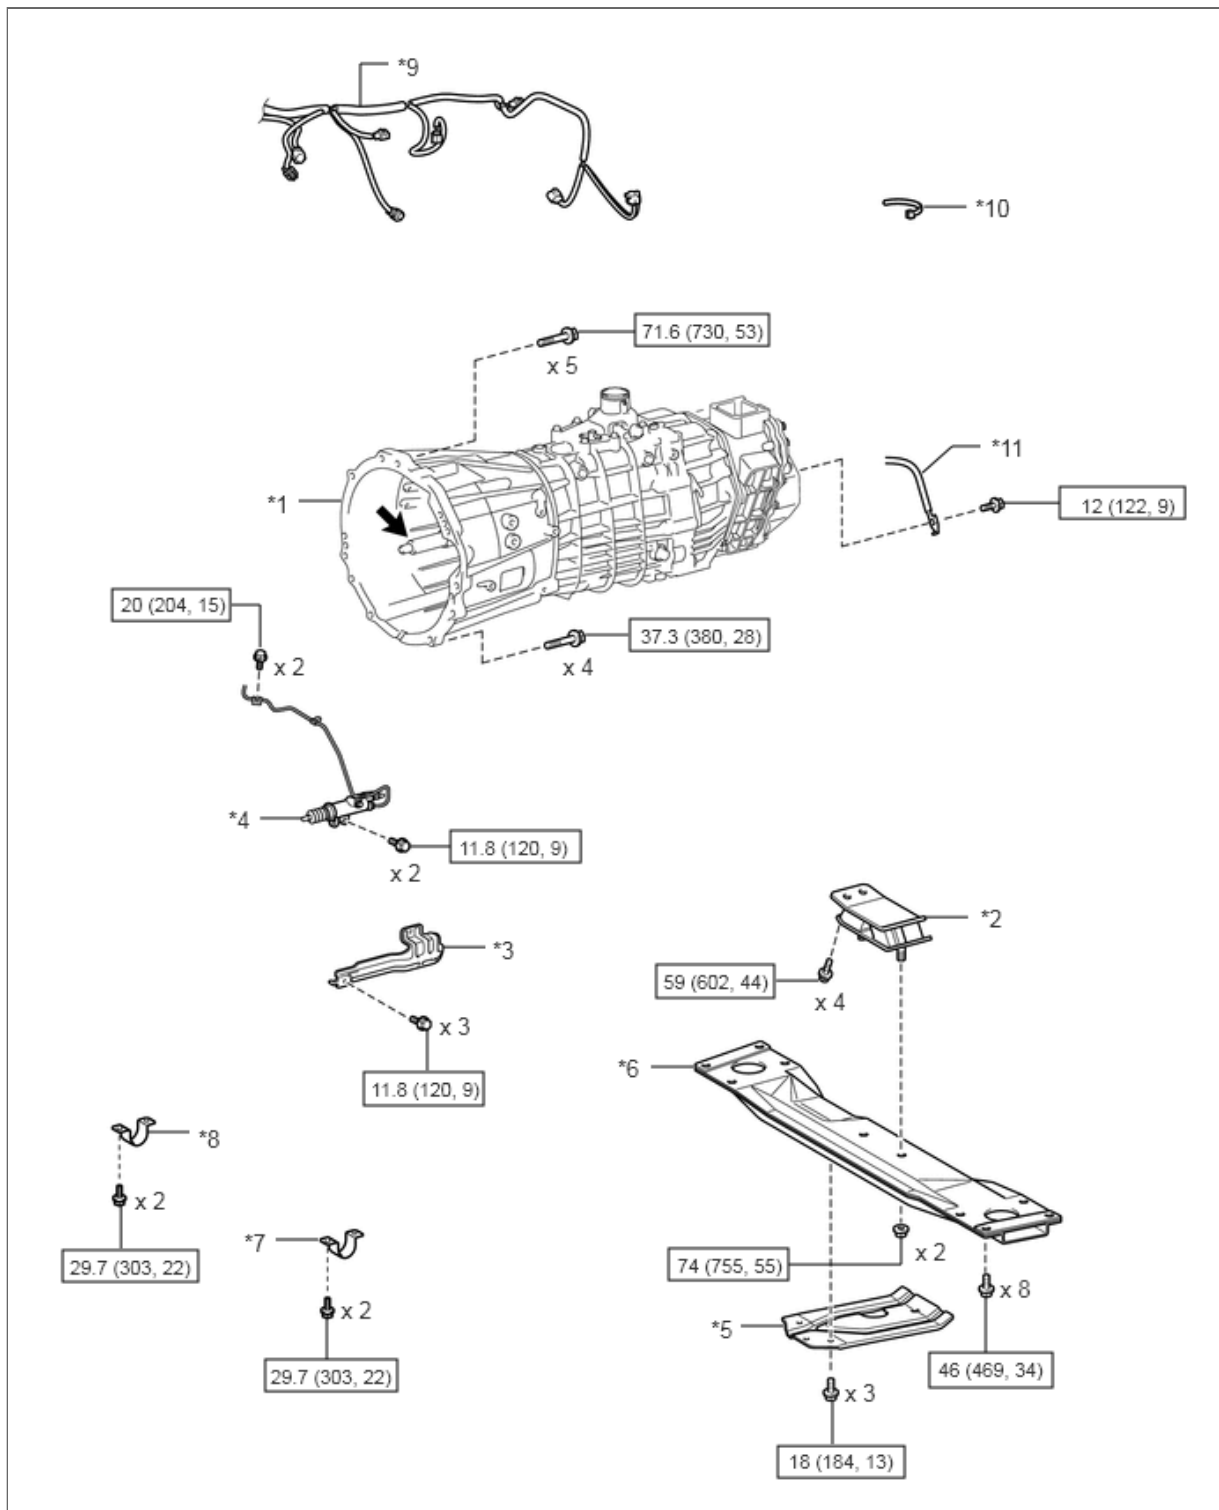

*1	MANUAL TRANSMISSION WITH TRANSFER	*2	REAR NO. 1 ENGINE MOUNTING INSULATOR
*3	NO. 1 CLUTCH HOUSING COVER	*4	CLUTCH RELEASE CYLINDER ASSEMBLY
*5	TRANSFER CASE PROTECTOR	*6	NO. 2 FRAME CROSSMEMBER SUB-ASSEMBLY
*7	FRONT STABILIZER BRACKET LH	*8	FRONT STABILIZER BRACKET RH
*9	WIRE HARNESS	*10	CLAMP
*11	NO. 3 BOND CABLE	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque		Clutch spline grease

ILLUSTRATION

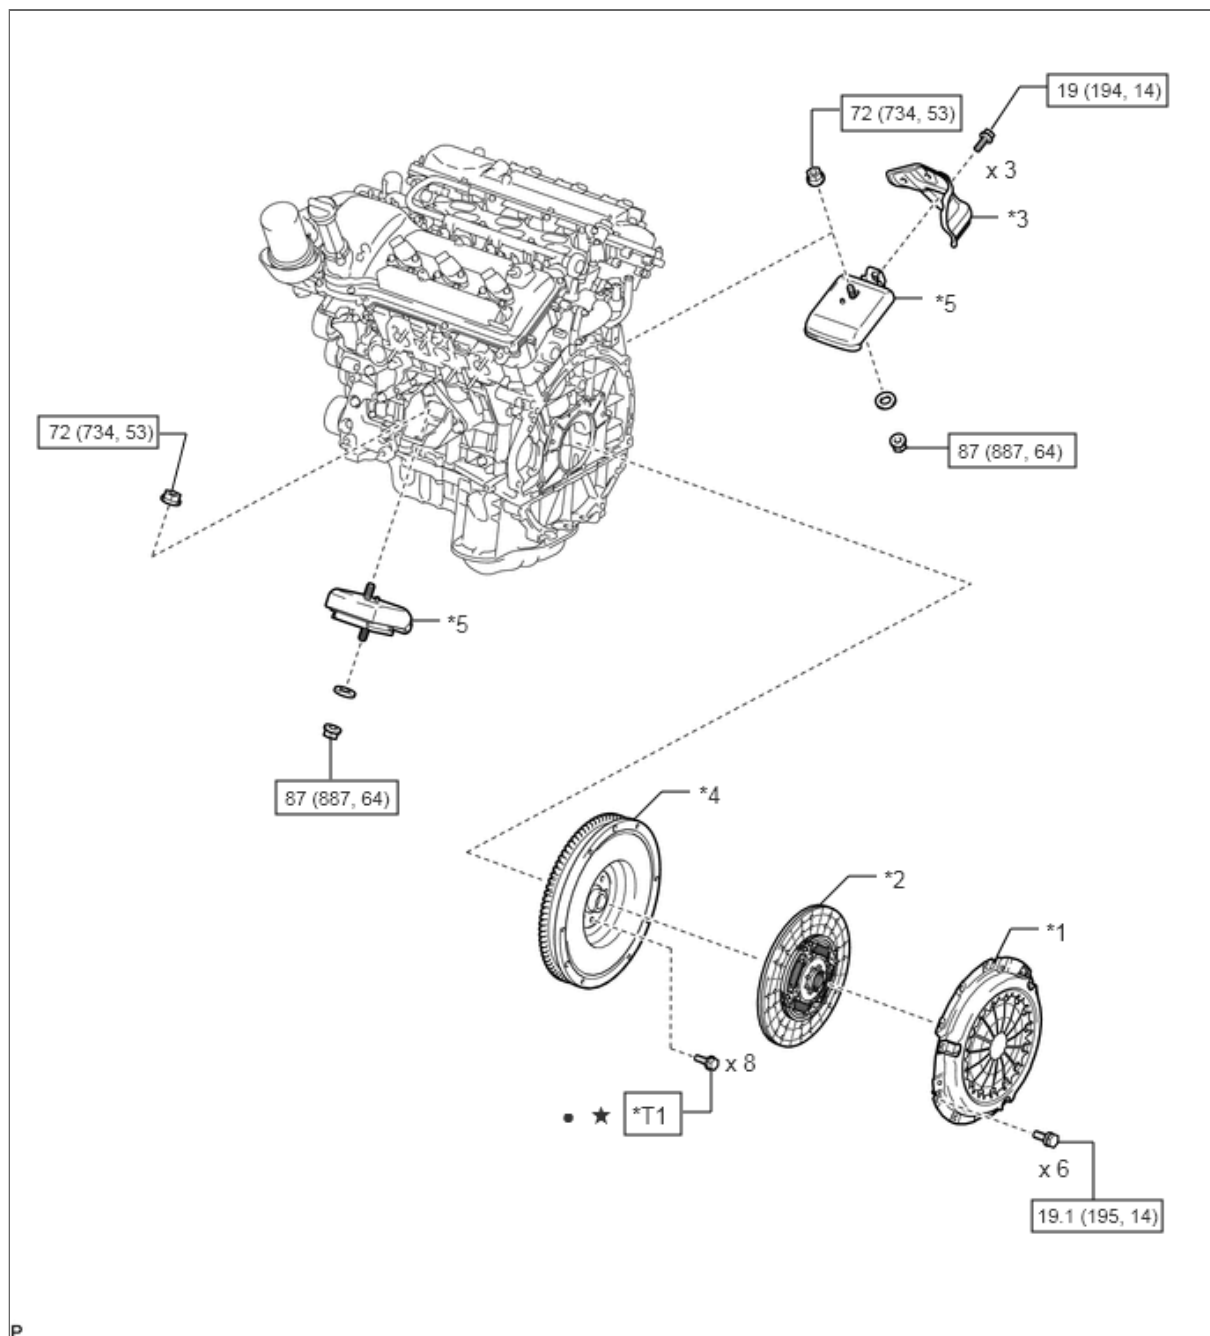

*1	CLUTCH COVER ASSEMBLY	*2	CLUTCH DISC ASSEMBLY
*3	ENGINE MOUNTING BRACKET HEAT INSULATOR	*4	FLYWHEEL SUB-ASSEMBLY
*5	FRONT ENGINE MOUNTING INSULATOR	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	●	Non-reusable part
★	Precorted part	-	-
*T1	1st: 30 (306, 22) 2nd: Turn 90°	-	-