

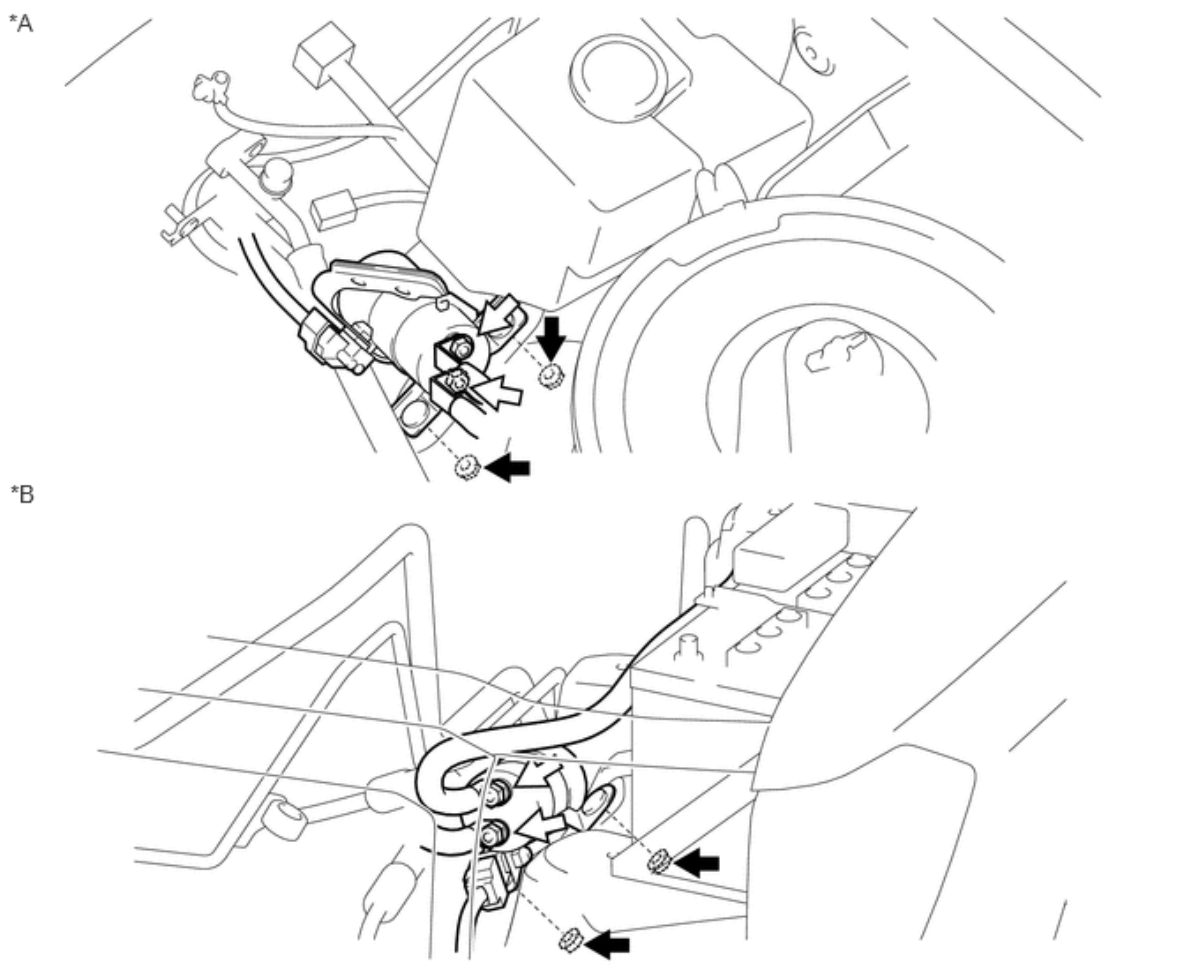
WINCH RELAY REMOVAL



PROCEDURE

1.DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

2.REMOVE WINCH MAIN RELAY

- a. Disconnect the connector.
- b. Remove the 2 nuts labeled B and disconnect the 2 wires.
- c. Remove the 2 nuts labeled A and relay.



*A	for 1GR-FE LHD	*B	for 1GR-FE RHD, 1HZ
	Nut A		Nut B