



## ILLUSTRATION

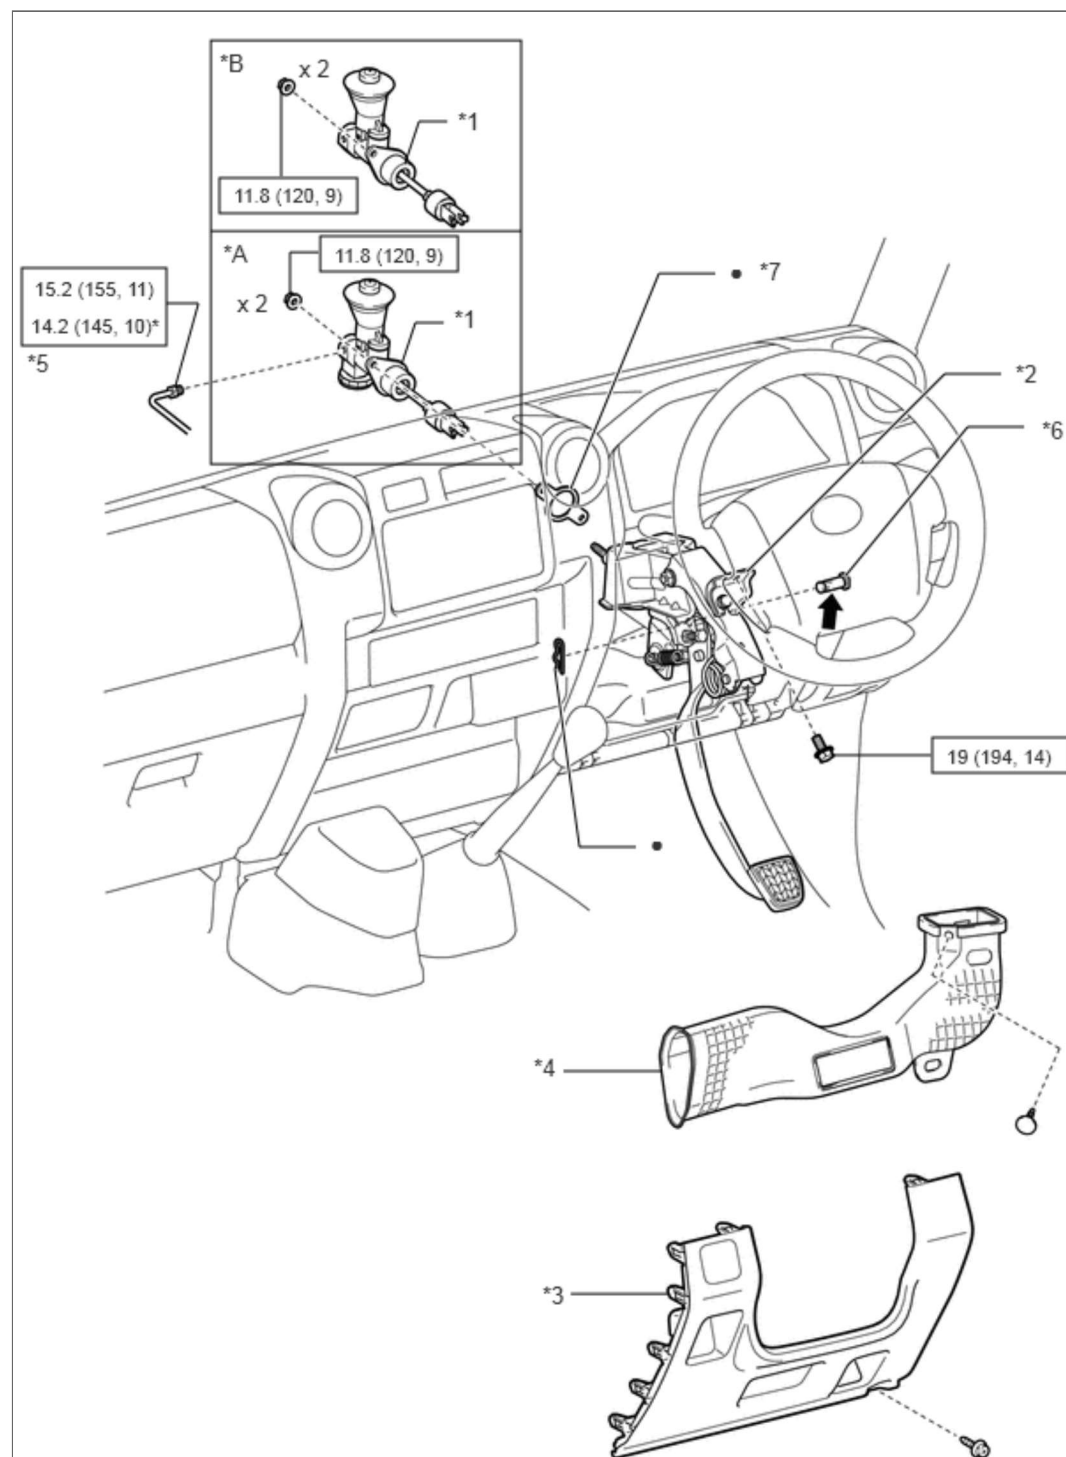


P

*A	for 1GR-FE, 1HZ	*B	for 1VD-FTV
*1	CLUTCH MASTER CYLINDER ASSEMBLY	*2	CLUTCH PEDAL SUPPORT ASSEMBLY
*3	LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY	*4	NO. 2 HEATER TO REGISTER DUCT
*5	CLUTCH MASTER CYLINDER TO FLEXIBLE HOSE TUBE	*6	CLUTCH MASTER CYLINDER PUSH ROD CLEVIS PIN
*7	GASKET	-	-
<div style="border: 1px solid black; width: 30px; height: 15px; margin-bottom: 5px;"></div> N*m (kgf*cm, ft.*lbf): Specified torque		*	For use with union nut wrench



•	Non-reusable part		MP grease

ILLUSTRATION

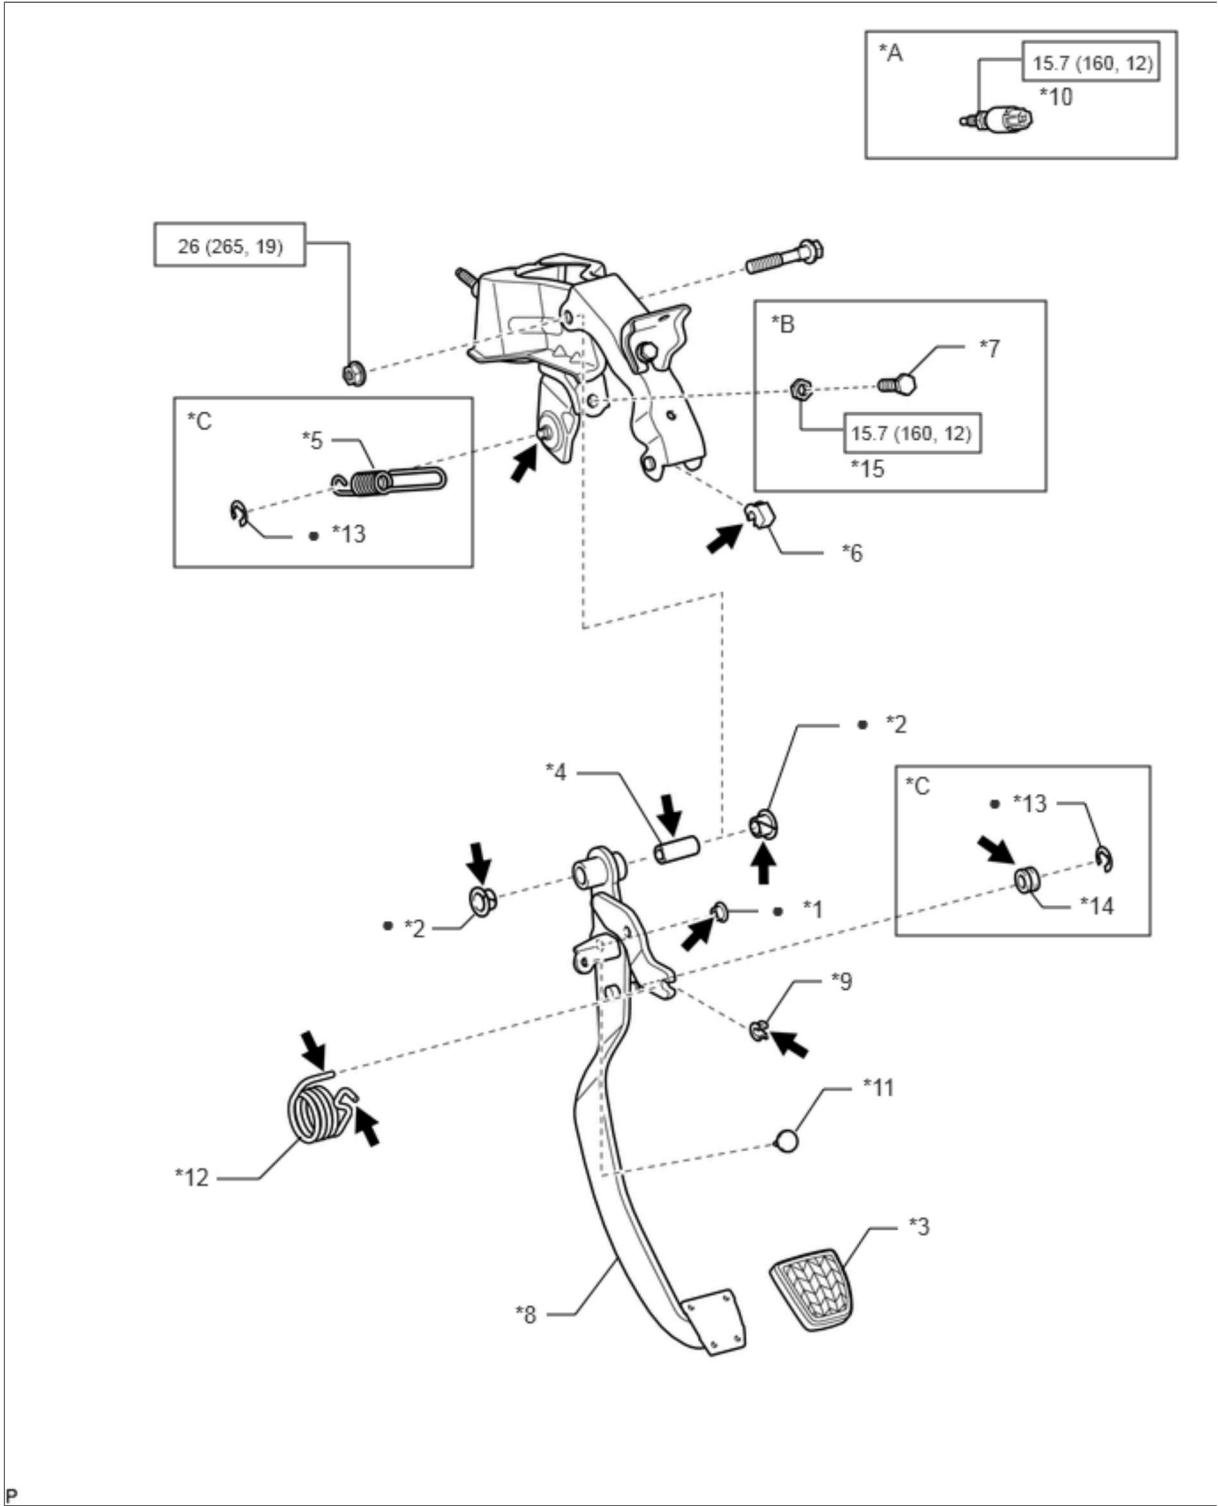

P

*A	for 1VD-FTV	*B	for 1GR-FE, 1HZ
*C	for 1GR-FE, 1VD-FTV	-	-
*1	CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH	*2	CLUTCH PEDAL BUSH
*3	CLUTCH PEDAL PAD	*4	CLUTCH PEDAL SHAFT COLLAR
*5	CLUTCH PEDAL SPRING	*6	CLUTCH PEDAL SPRING HOLDER
*7	CLUTCH PEDAL STOPPER BOLT	*8	CLUTCH PEDAL SUB-ASSEMBLY

*9	CLUTCH PEDAL TURNOVER BUSH	*10	CLUTCH SWITCH ASSEMBLY
*11	NO. 1 CLUTCH PEDAL CUSHION	*12	TURN OVER SPRING SEAT COMPRESSION SPRING
*13	E-RING	*14	SPACER
*15	LOCK NUT	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease	-	-