


H150F MANUAL TRANSMISSION / TRANSAXLE MANUAL TRANSMISSION ASSEMBLY(for 1GR-FE) COMPONENTS

ILLUSTRATION

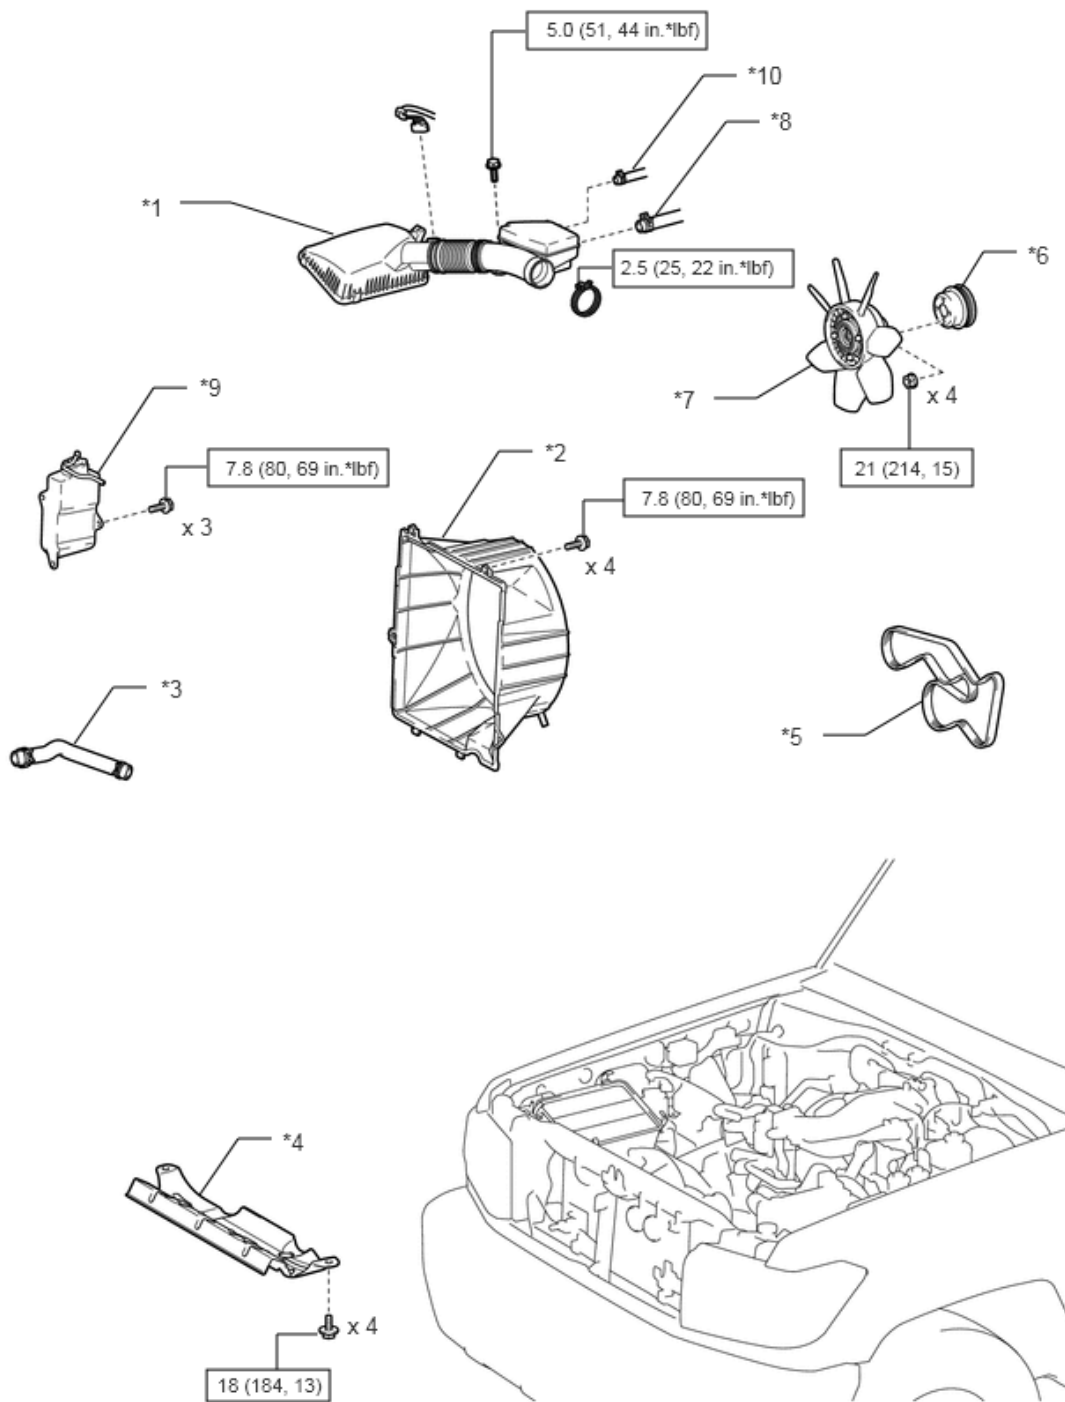


P

*1	AIR CLEANER CAP SUB-ASSEMBLY WITH NO. 1 AIR CLEANER HOSE	*2	FAN SHROUD
*3	NO. 1 RADIATOR HOSE	*4	NO. 2 ENGINE UNDER COVER
*5	FAN AND GENERATOR V BELT	*6	FAN PULLEY
*7	FAN WITH FLUID COUPLING	*8	NO. 2 VENTILATION HOSE
*9	RADIATOR RESERVOIR	*10	VACUUM HOSE
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-


--	--	--	--

ILLUSTRATION

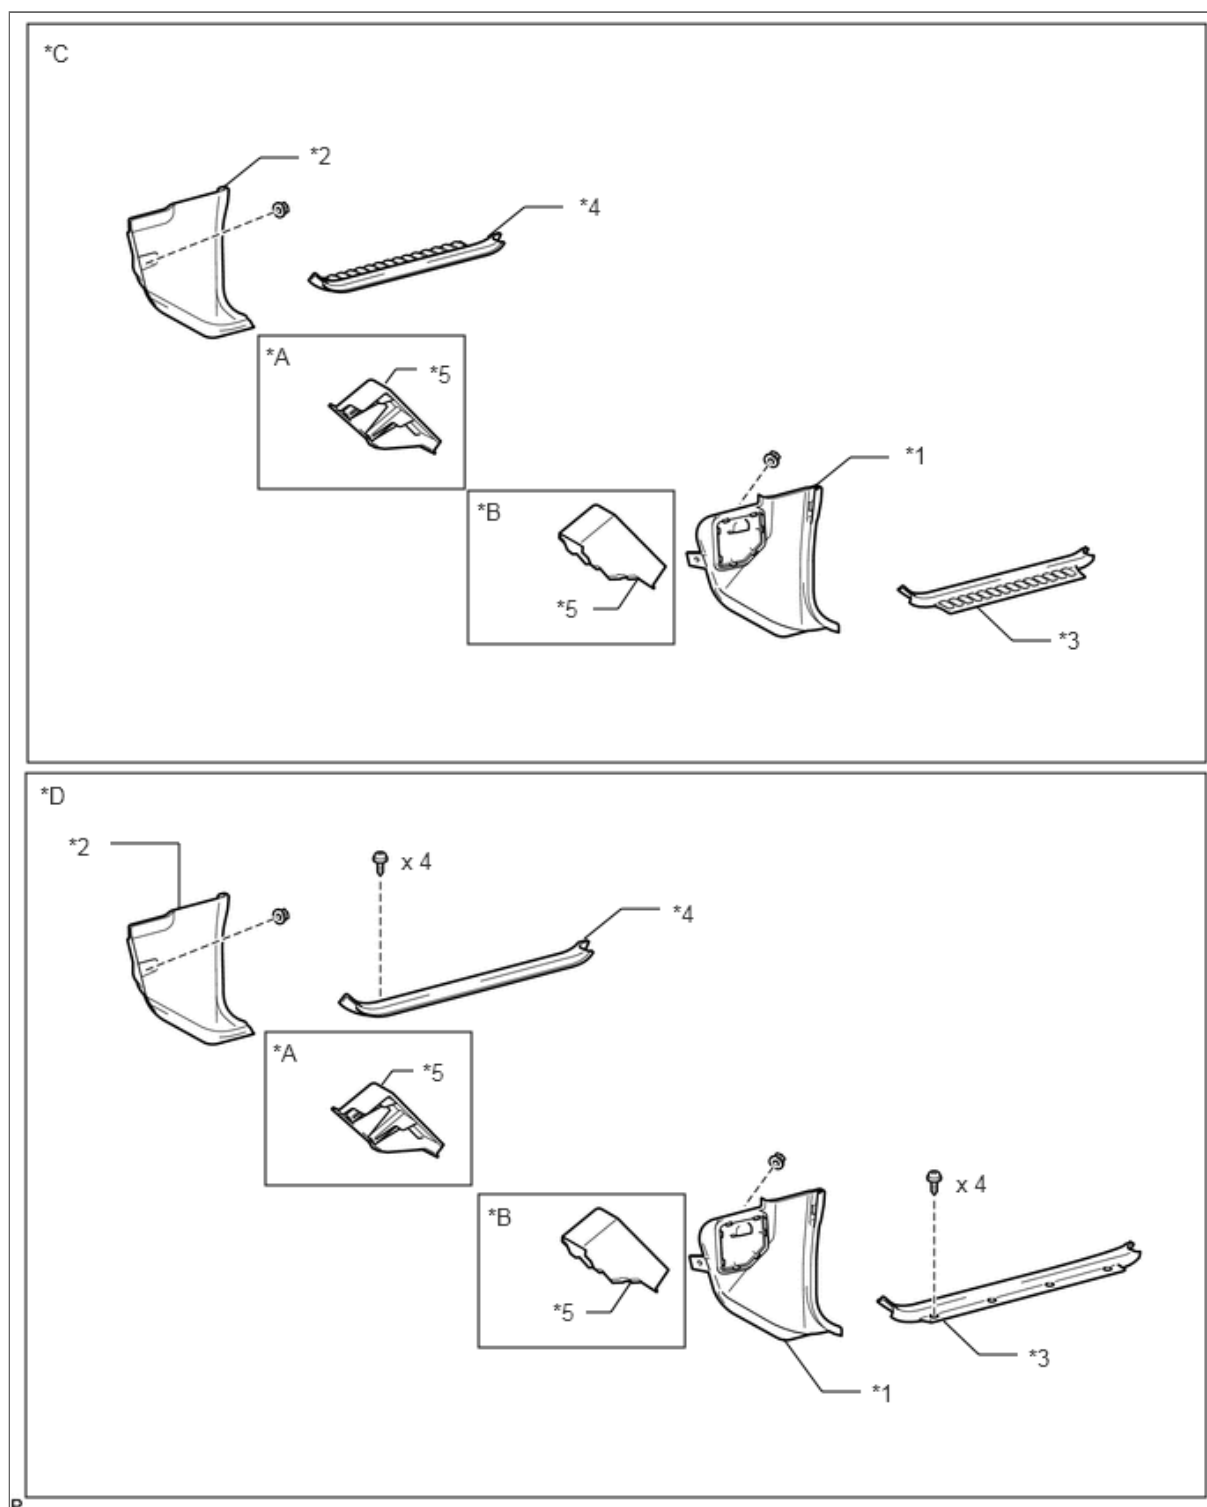


*A	for RHD	*B	for LHD
*C	for 4 Door	*D	for 2 Door
*1	COWL SIDE TRIM SUB-ASSEMBLY LH	*2	COWL SIDE TRIM SUB-ASSEMBLY RH
*3	FRONT DOOR SCUFF PLATE LH	*4	FRONT DOOR SCUFF PLATE RH
*5	FRONT FLOOR FOOTREST	-	-

ILLUSTRATION

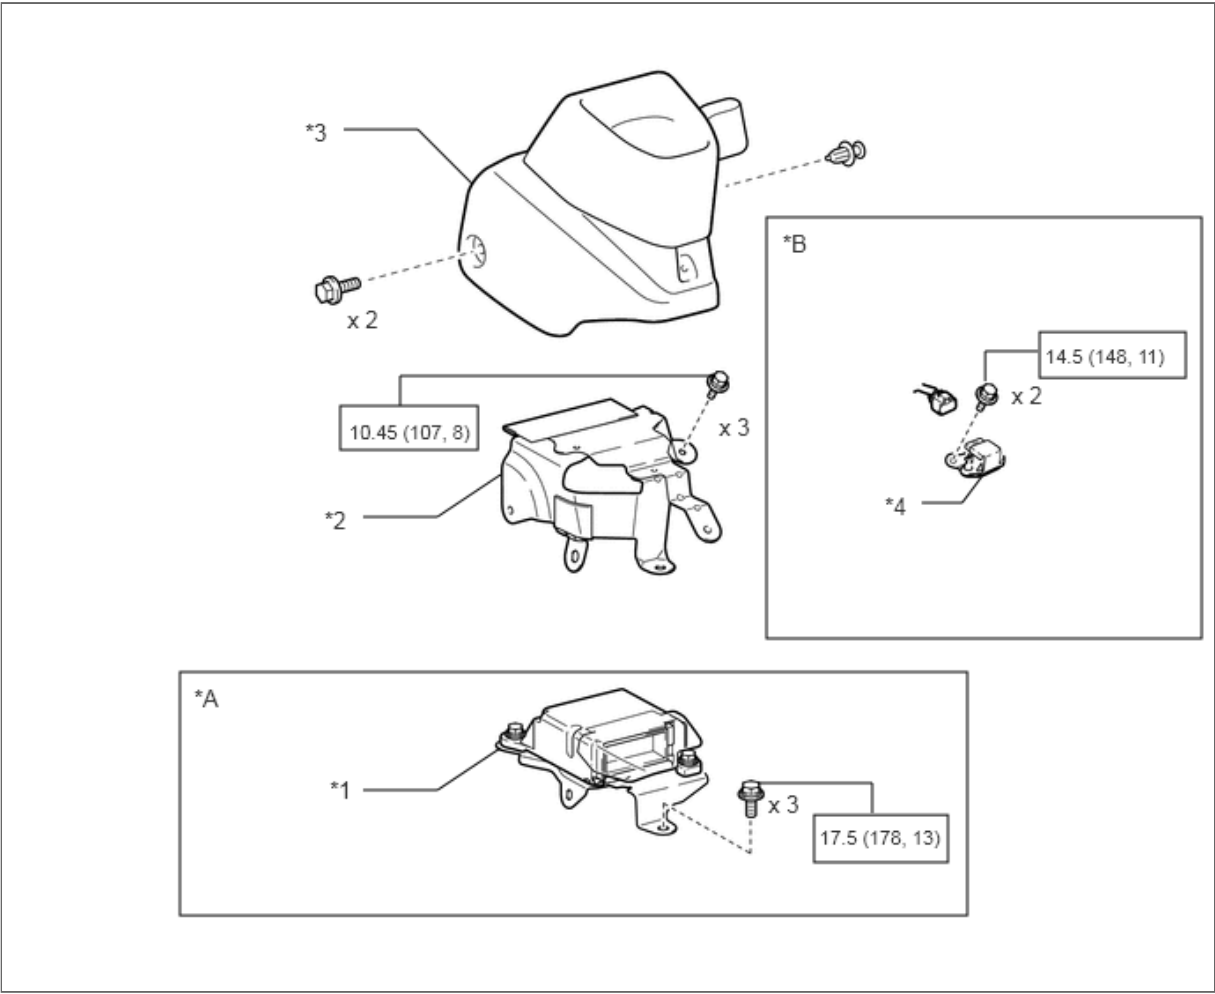


*A	w/ AIRBAG SYSTEM	*B	w/ ABS
*1	AIRBAG SENSOR ASSEMBLY WITH AIRBAG SENSOR BRACKET	*2	AIRBAG SENSOR COVER
*3	CONSOLE BOX	*4	DECELERATION SENSOR
<div><div></div></div>	N*m (kgf*cm, ft.*lbf): Specified torque	-	-


ILLUSTRATION

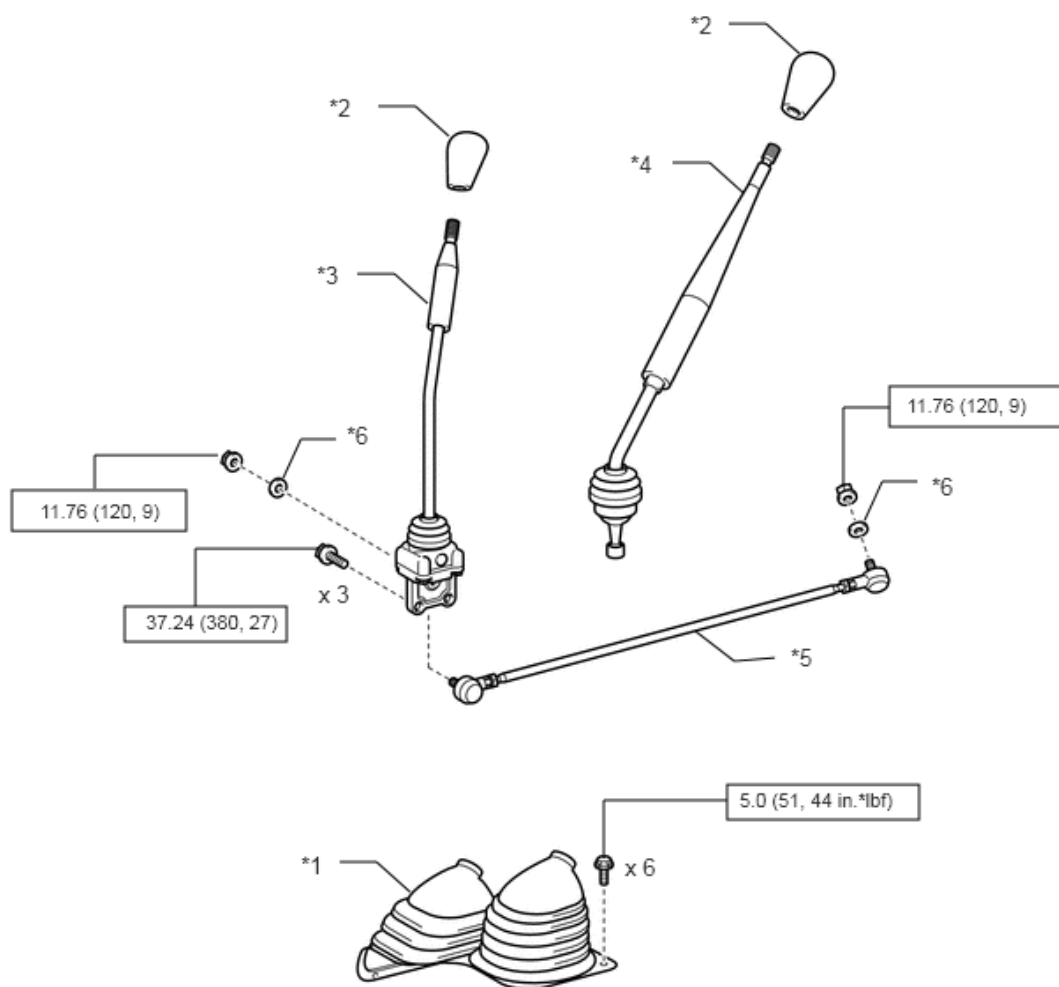

P

*1	NO. 1 SHIFT AND SELECT LEVER BOOT	*2	SHIFT LEVER KNOB SUB-ASSEMBLY
*3	TRANSFER SHIFT LEVER ASSEMBLY	*4	TRANSMISSION SHIFT LEVER ASSEMBLY
*5	HIGH AND LOW SHIFT ROD ASSEMBLY	*6	WASHER
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-


ILLUSTRATION

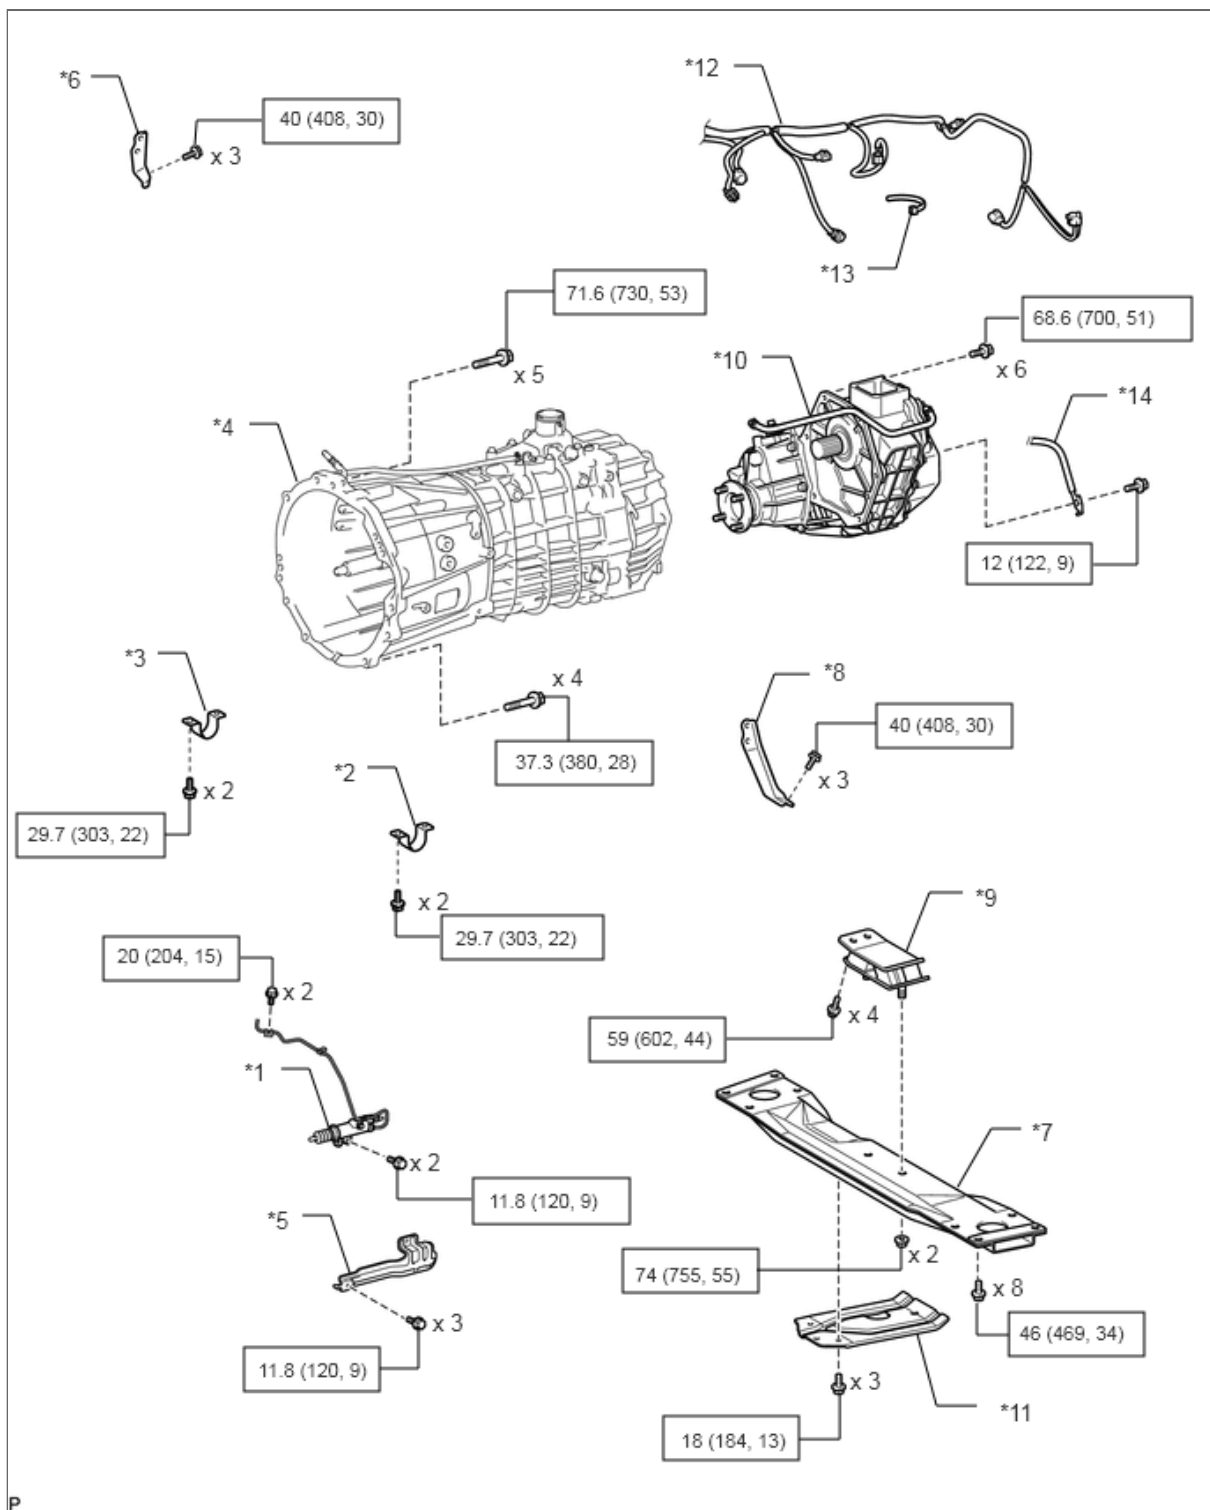

P


*1	CLUTCH RELEASE CYLINDER ASSEMBLY	*2	FRONT STABILIZER BRACKET LH
*3	FRONT STABILIZER BRACKET RH	*4	MANUAL TRANSMISSION
*5	NO. 1 CLUTCH HOUSING COVER	*6	NO. 1 EXHAUST MANIFOLD STAY
*7	NO. 2 FRAME CROSSMEMBER SUB-ASSEMBLY	*8	NO. 2 MANIFOLD STAY
*9	REAR ENGINE MOUNTING INSULATOR	*10	TRANSFER ASSEMBLY
*11	TRANSFER CASE PROTECTOR	*12	WIRE HARNESS
*13	CLAMP	*14	NO. 2 CABLE BOND
<div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> N*m (kgf*cm, ft.*lbf): Specified torque		-	-

ILLUSTRATION

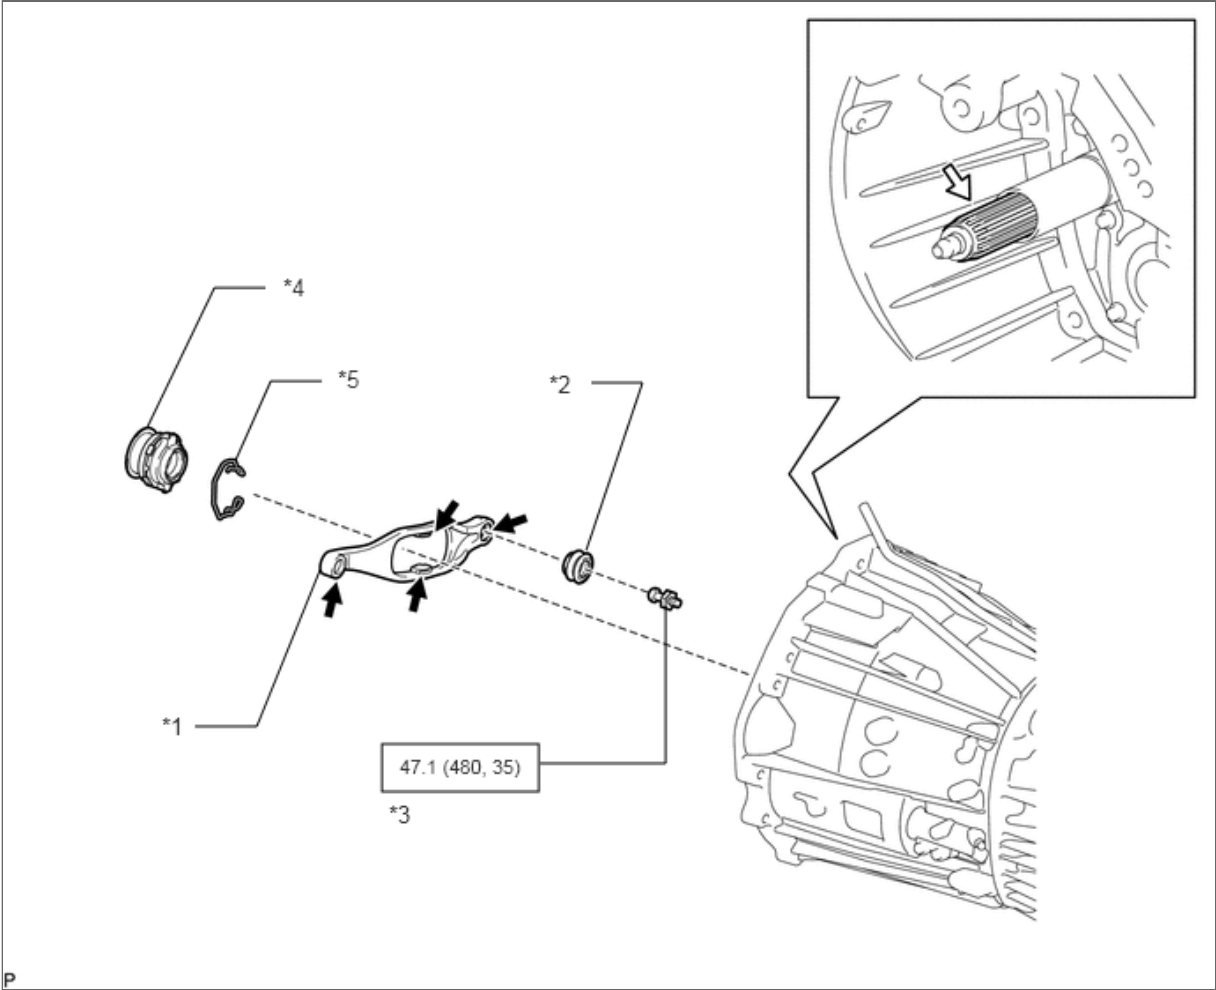

*1	CLUTCH RELEASE FORK SUB-ASSEMBLY	*2	CLUTCH RELEASE FORK SUPPORT BOOT
*3	RELEASE FORK SUPPORT	*4	CLUTCH RELEASE BEARING ASSEMBLY
*5	RELEASE BEARING HUB CLIP	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-
	Multemp 8158 grease or equivalent		Clutch spline grease

ILLUSTRATION

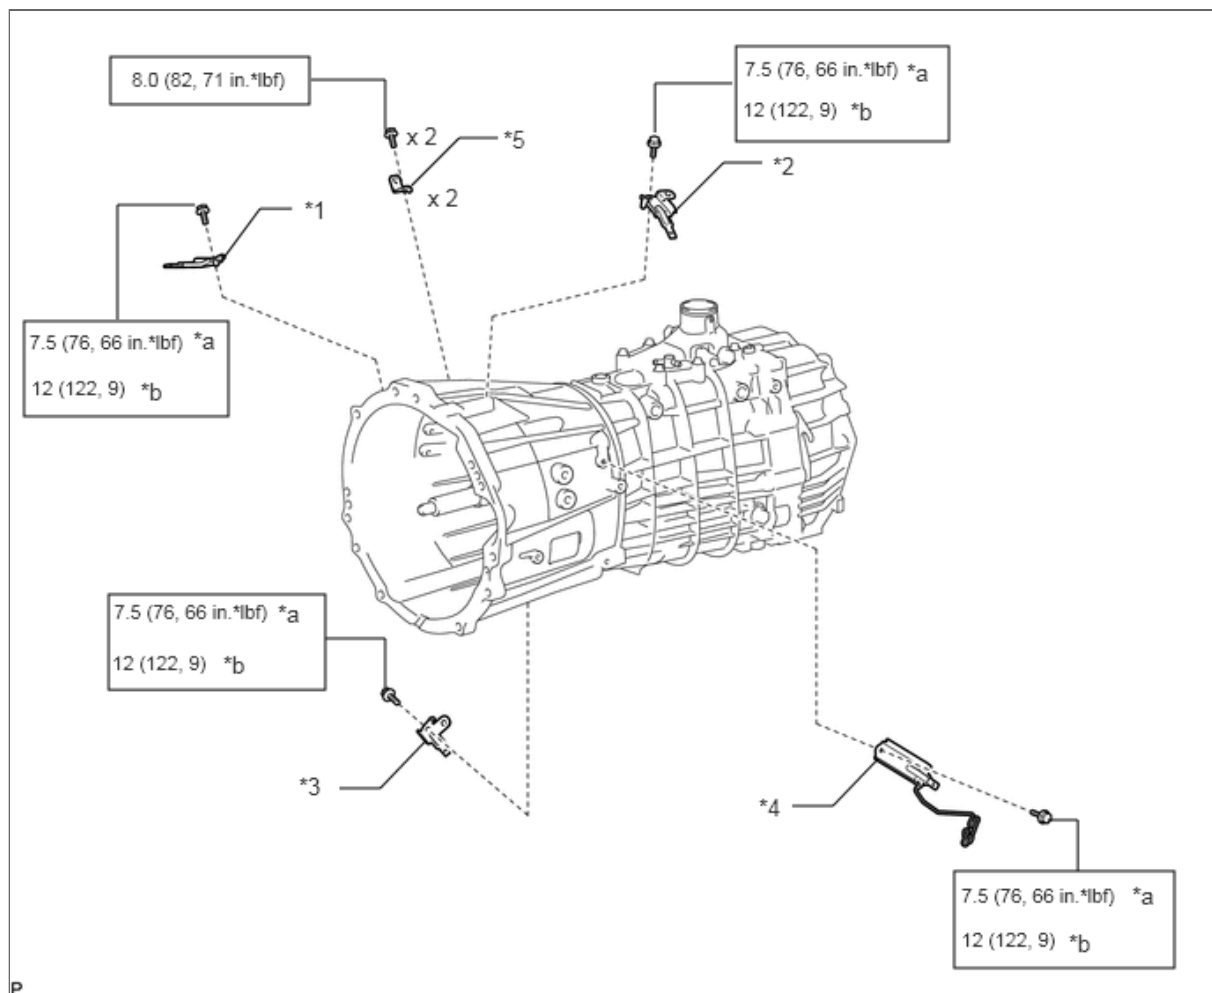

P

*1	AIR FUEL RATIO SENSOR BRACKET RH	*2	AIR FUEL RATIO SENSOR BRACKET LH
*3	HEATED OXYGEN SENSOR BRACKET RH	*4	HEATED OXYGEN SENSOR BRACKET LH
*5	WIRE HARNESS CLAMP BRACKET	-	-
*a	for Type A	*b	for Type B
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-