


## FRONT SUSPENSION FRONT STABILIZER BAR COMPONENTS

## ILLUSTRATION

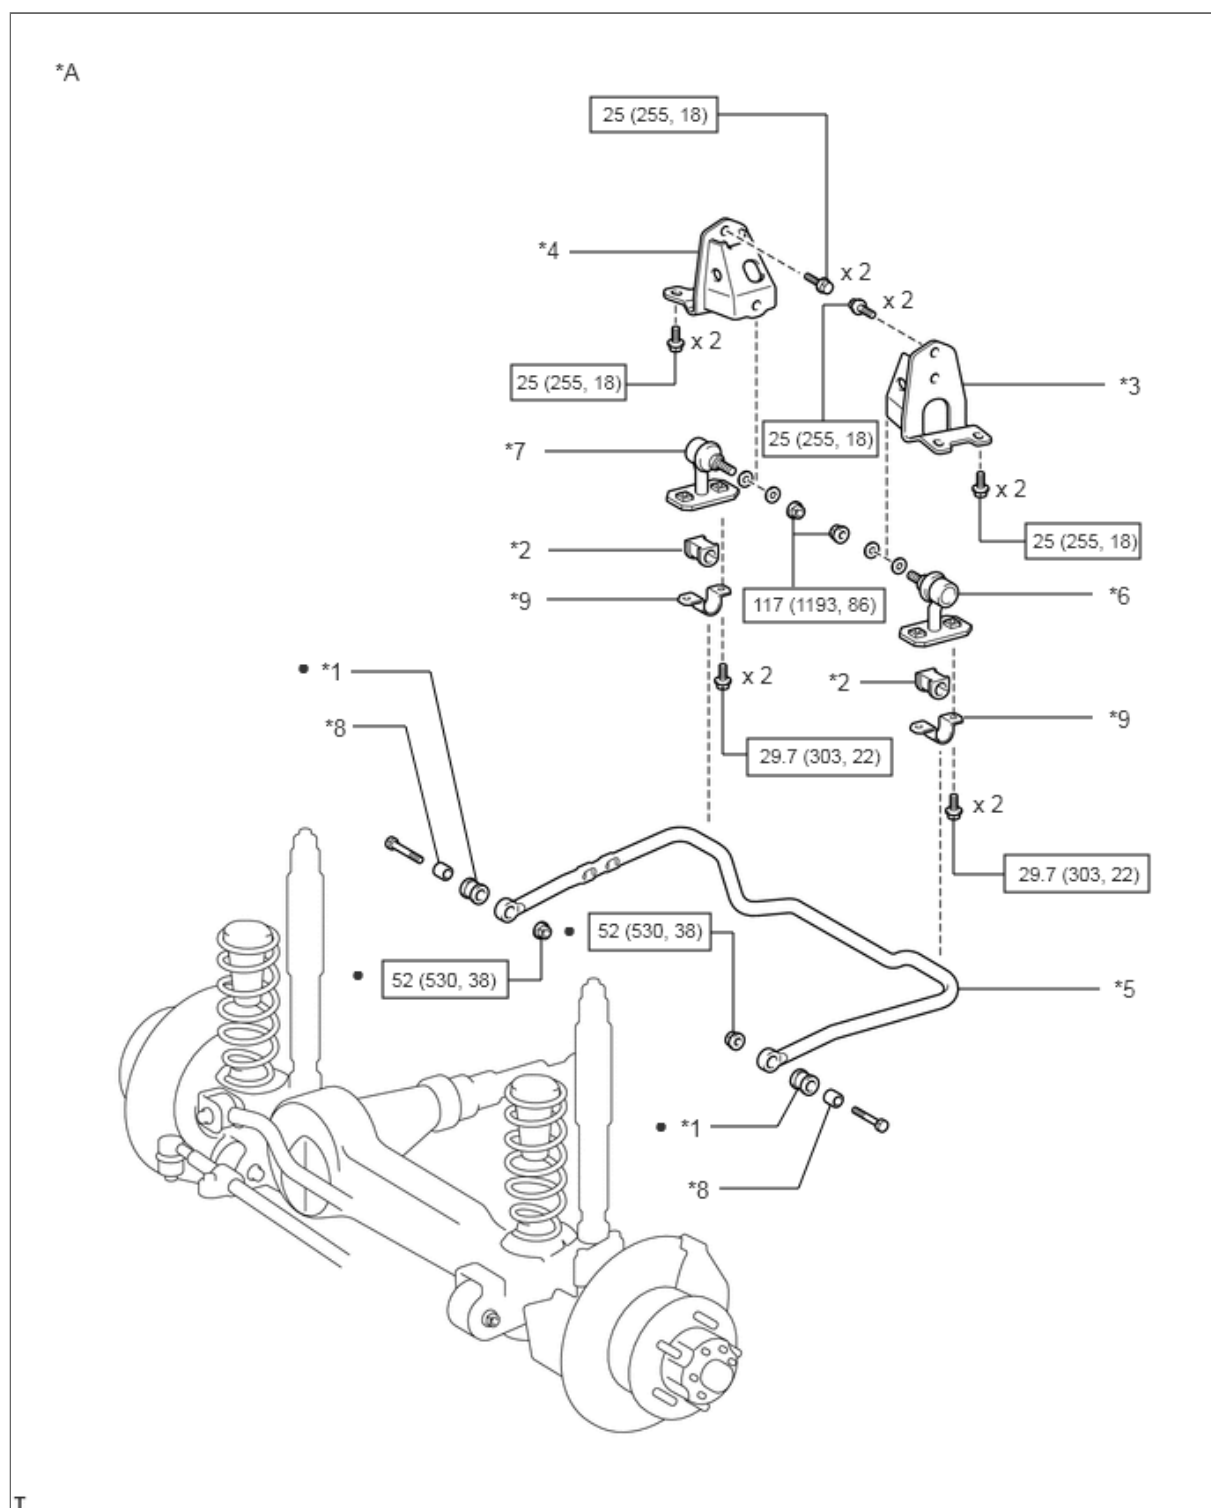


*A	except 1GR-FE	-	-
*1	BUSHING	*2	FRONT NO. 1 STABILIZER BAR BUSHING
*3	FRONT NO. 1 STABILIZER BRACKET LH	*4	FRONT NO. 1 STABILIZER BRACKET RH
*5	FRONT STABILIZER BAR	*6	FRONT STABILIZER LINK SUB-ASSEMBLY LH
*7	FRONT STABILIZER LINK SUB-ASSEMBLY RH	*8	COLLAR
*9	FRONT STABILIZER BRACKET COVER	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

--	--	--	--



*A	for 1GR-FE	*B	w/ Differential Lock
*1	BUSHING	*2	FRONT NO. 1 STABILIZER BAR BUSHING
*3	FRONT NO. 1 STABILIZER BRACKET LH	*4	FRONT NO. 1 STABILIZER BRACKET RH
*5	FRONT SHOCK ABSORBER ASSEMBLY LH	*6	FRONT SHOCK ABSORBER ASSEMBLY RH
*7	FRONT STABILIZER BAR	*8	FRONT STABILIZER LINK SUB-ASSEMBLY LH
*9	FRONT STABILIZER LINK SUB-ASSEMBLY RH	*10	WIRE HARNESS CLAMP
*11	COLLAR	*12	FRONT STABILIZER BRACKET COVER

*13	FRONT NO. 2 SHOCK ABSORBER CUSHION RETAINER	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part