

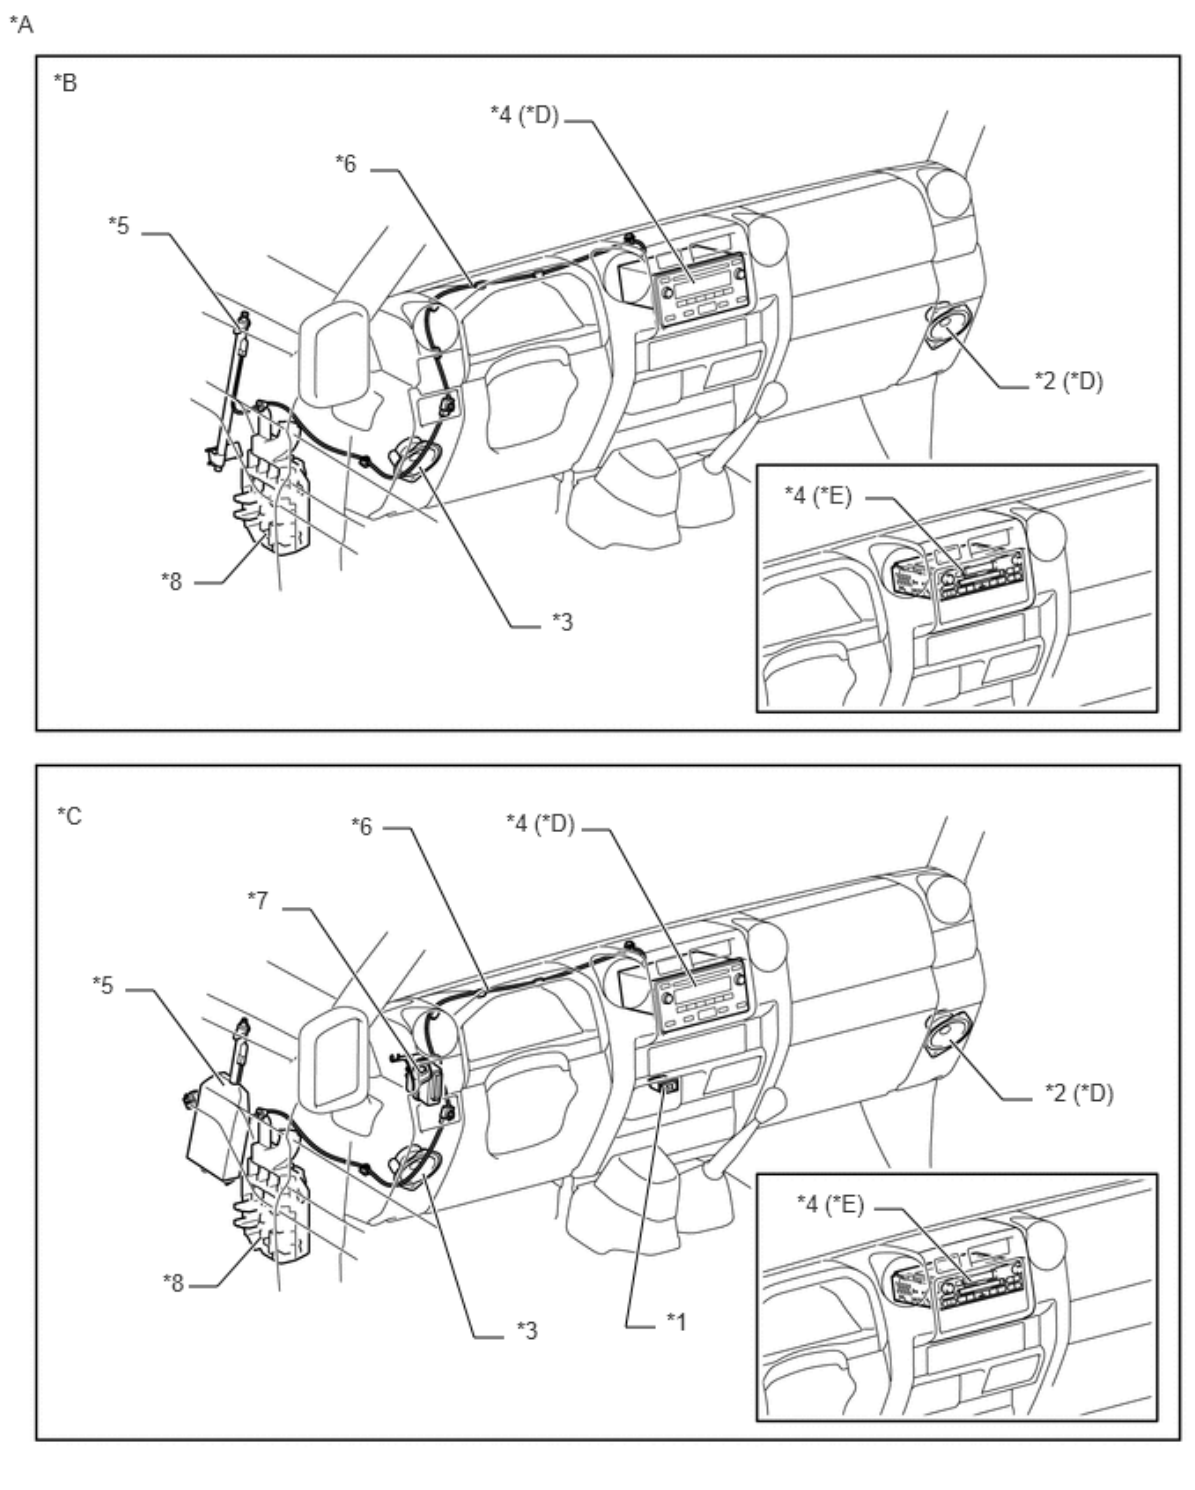


ILLUSTRATION

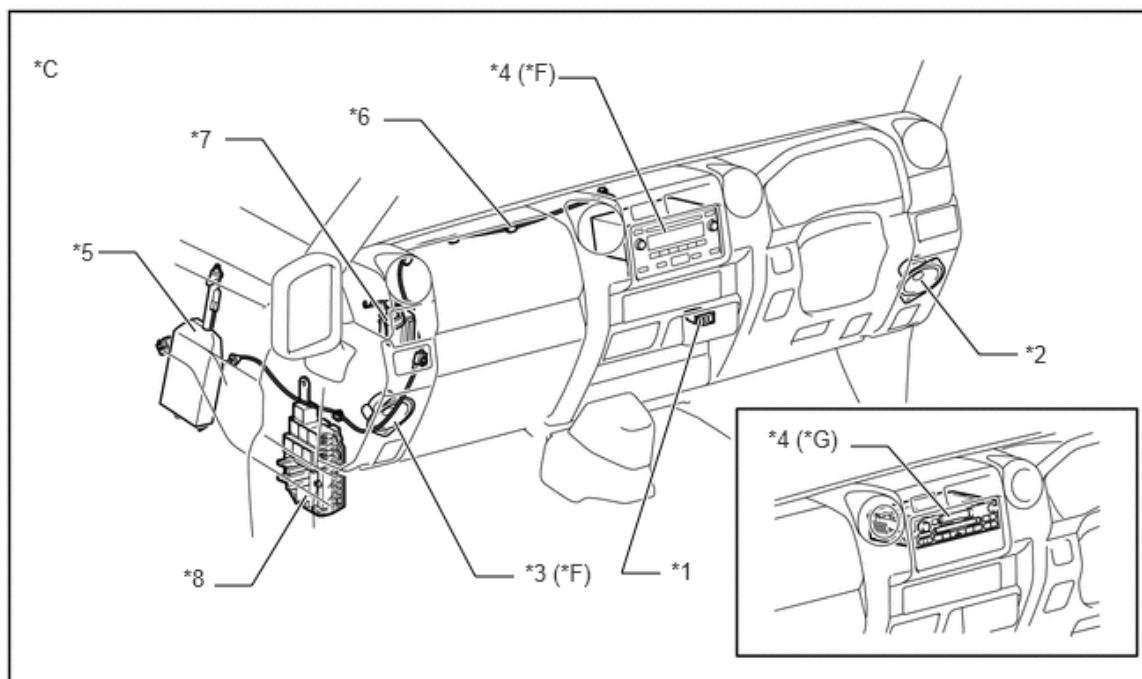


| | | | |
|----|---------------------------------|----|---|
| *A | for LHD | *B | for Manual Type Antenna |
| *C | for Electric Type Antenna | *D | w/ CD Player |
| *E | w/o CD Player | - | - |
| *1 | ANTENNA SWITCH ASSEMBLY | *2 | FRONT NO. 1 SPEAKER ASSEMBLY RH |
| *3 | FRONT NO. 1 SPEAKER ASSEMBLY LH | *4 | RADIO RECEIVER ASSEMBLY |
| *5 | ANTENNA WITH HOLDER ASSEMBLY | *6 | ANTENNA CORD SUB-ASSEMBLY |
| *7 | MOTOR ANTENNA CONTROL RELAY | *8 | COWL SIDE RELAY BLOCK ASSEMBLY - ECU-B FUSE - ECU IG FUSE - RADIO FUSE |

ILLUSTRATION

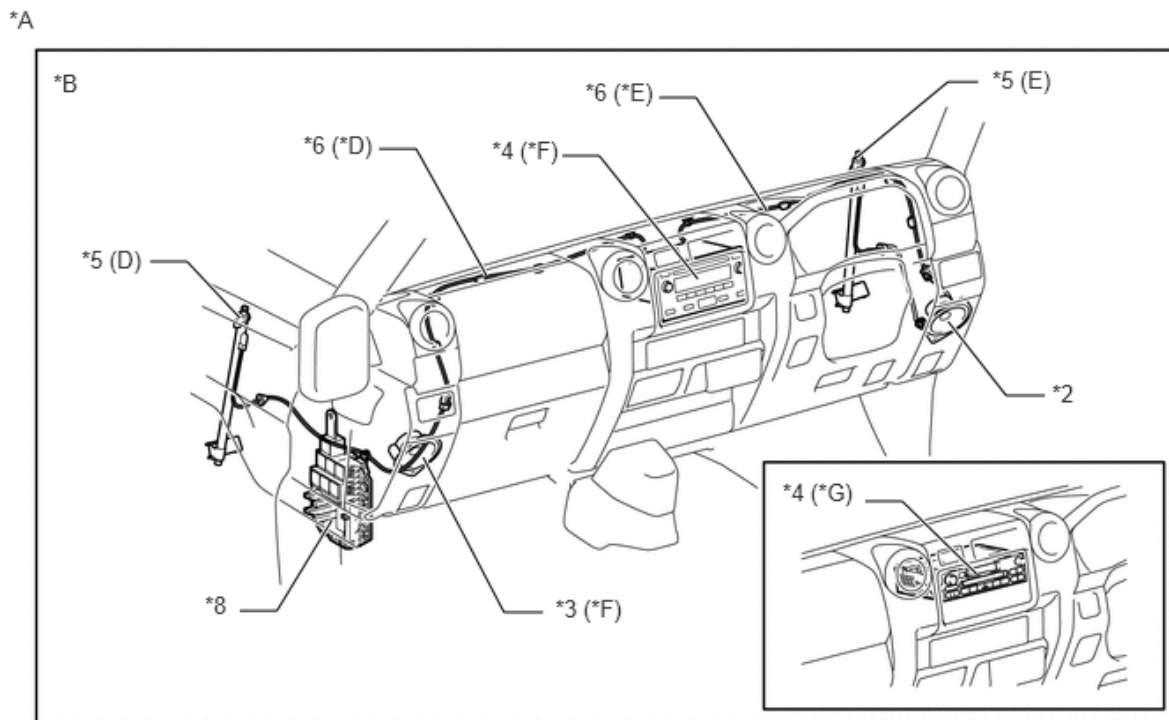

| | | | |
|----|---------------------------------|----|---|
| *A | for RHD | *B | for Manual Type Antenna |
| *C | for Electric Type Antenna | *D | w/ Snorkel |
| *E | w/o Snorkel | *F | w/ CD Player |
| *G | w/o CD Player | - | - |
| *1 | ANTENNA SWITCH ASSEMBLY | *2 | FRONT NO. 1 SPEAKER ASSEMBLY RH |
| *3 | FRONT NO. 1 SPEAKER ASSEMBLY LH | *4 | RADIO RECEIVER ASSEMBLY |
| *5 | ANTENNA WITH HOLDER ASSEMBLY | *6 | ANTENNA CORD SUB-ASSEMBLY |
| *7 | MOTOR ANTENNA CONTROL RELAY | *8 | COWL SIDE RELAY BLOCK ASSEMBLY - ECU-B FUSE - ECU IG FUSE - RADIO FUSE |

ILLUSTRATION

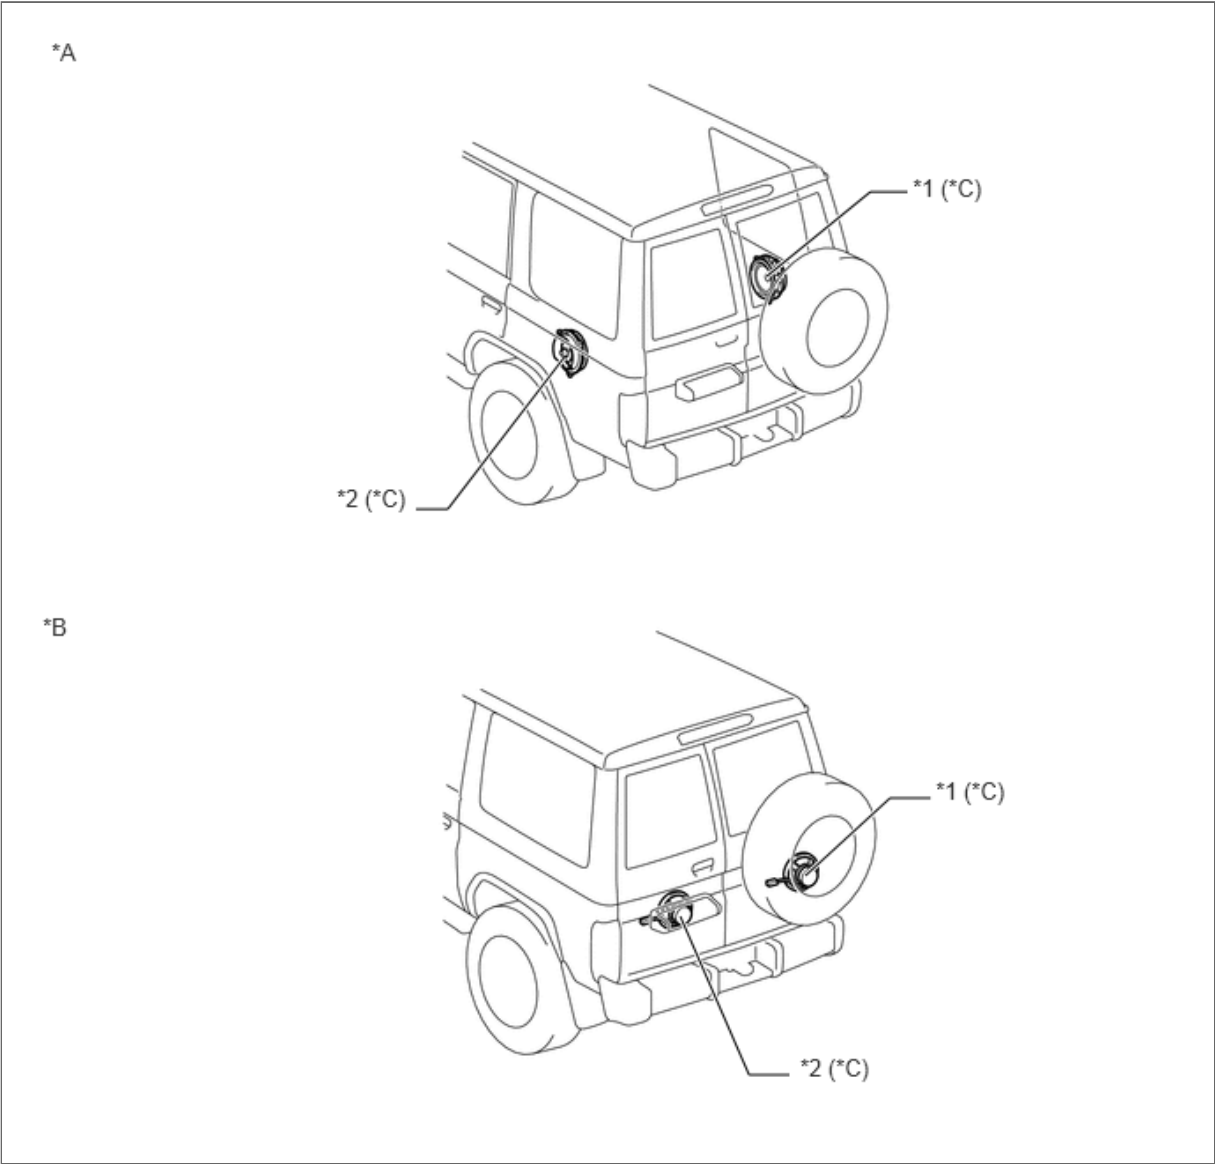

| | | | |
|----|----------------------------|----|----------------------------|
| *A | for Model Code #J76 Series | *B | for Model Code #J78 Series |
| *C | for 4 Speakers | - | - |
| *1 | REAR SPEAKER ASSEMBLY RH | *2 | REAR SPEAKER ASSEMBLY LH |