


## PROCEDURE

## 1. INSTALL PROPELLER SHAFT ASSEMBLY

37110

- a. Completely remove any oil or the like and clean the contact surfaces of the 2 propeller shaft flanges, differential flange and transfer flange.

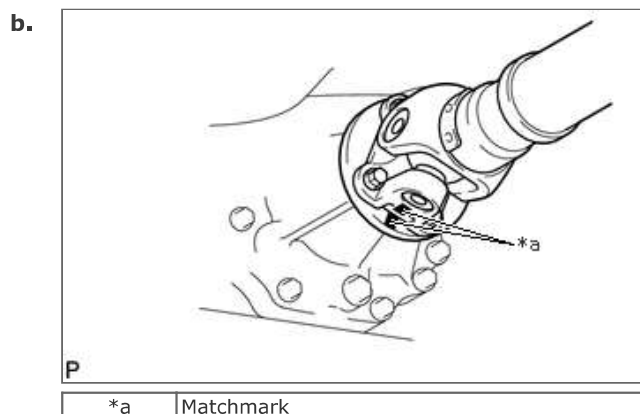


Align the matchmarks on the propeller shaft flange and transfer flange.

- c. Install the propeller shaft assembly with the 4 washers and 4 nuts.

**Torque:**

**88.2 N\*m (899 kgf\*cm, 65 ft.\*lbf)**

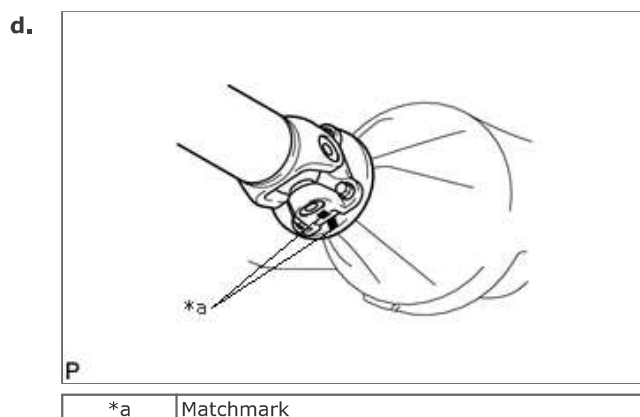

Align the matchmarks on the propeller shaft flange and differential flange.

- e. Install the propeller shaft assembly with the 4 bolts, 4 washers and 4 nuts.

**Torque:**

**88.2 N\*m (899 kgf\*cm, 65 ft.\*lbf)**