


CAUTION / NOTICE / HINT**HINT:**

- Use the same procedure for LHD and RHD vehicles.
- The procedures listed below are for LHD vehicles.

PROCEDURE**1.DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL****2.REMOVE ANTENNA NUT**


86396

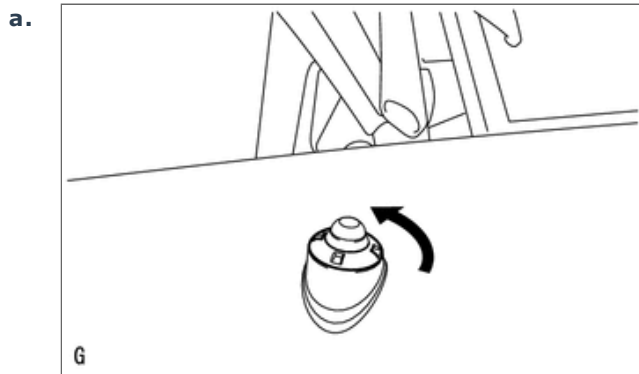

Remove the antenna nut as shown in the illustration.

3.REMOVE ANTENNA ORNAMENT

86392

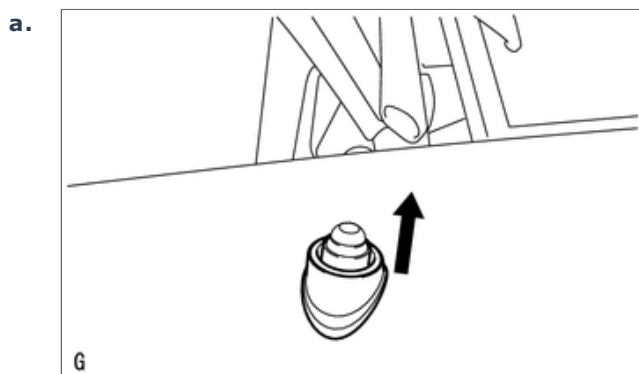

Remove the antenna ornament as shown in the illustration.

4.REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY (for Driver Side)

55480D

[Click here](#)Vehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>REMOVAL


5.REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (for Passenger Side)

55550

[Click here](#)Vehicle Interior>INTERIOR PANELS / TRIM>INSTRUMENT PANEL SAFETY PAD>REMOVAL


6.REMOVE ANTENNA ASSEMBLY (for Auto Type Antenna)

86300

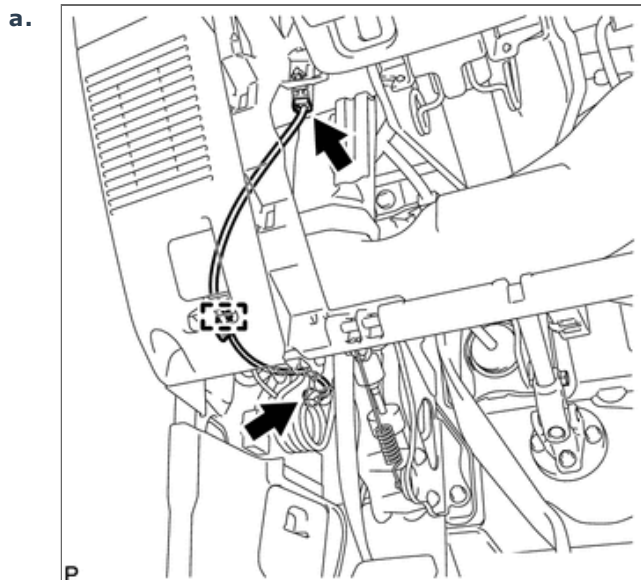

Disconnect the connector.


- b. Detach the antenna assembly from the clamp and push out the grommet from inside the vehicle.

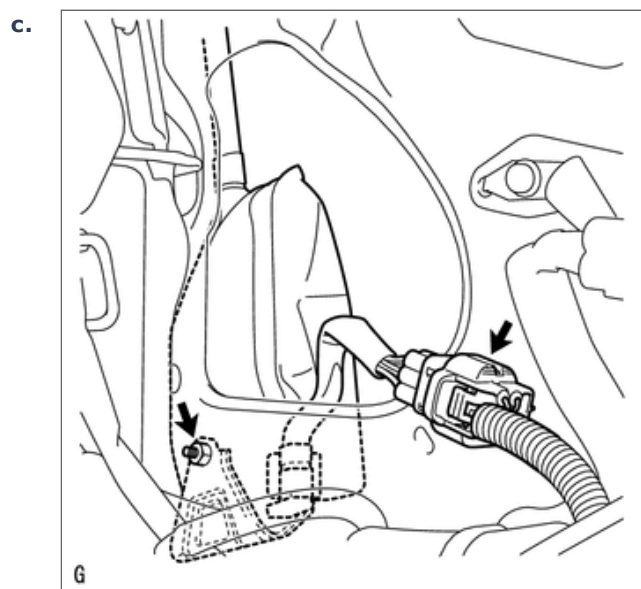

Disconnect the connector and remove the nut.


- d. Remove the antenna assembly from the engine room hole.

a.

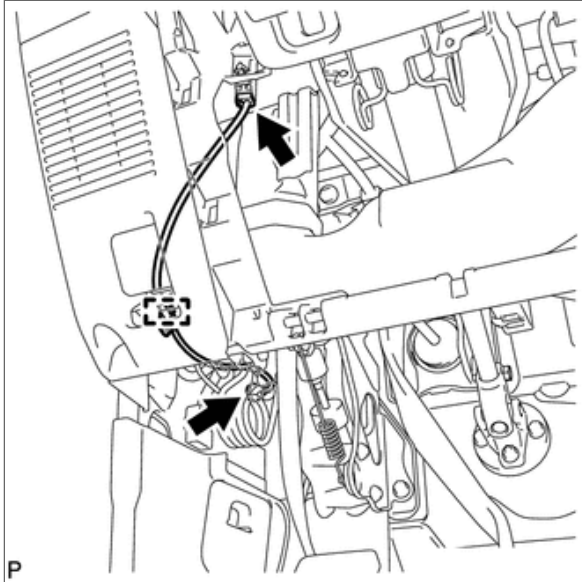


Detach the antenna assembly from the clamp and push out the grommet from inside the vehicle.

b.

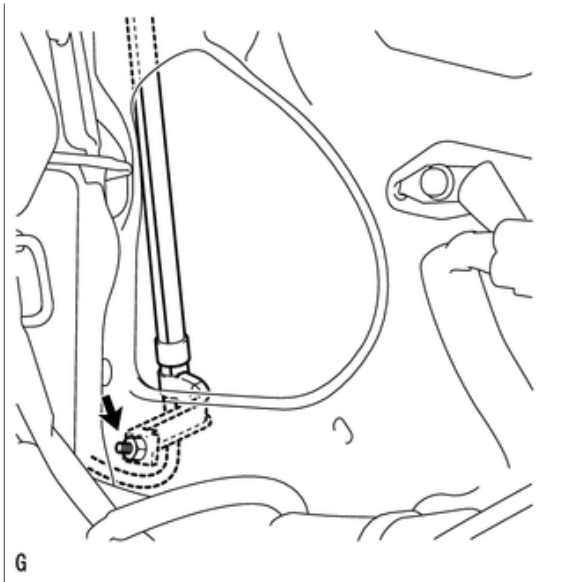

Remove the nut. Then remove the antenna assembly from the engine room hole.

a.

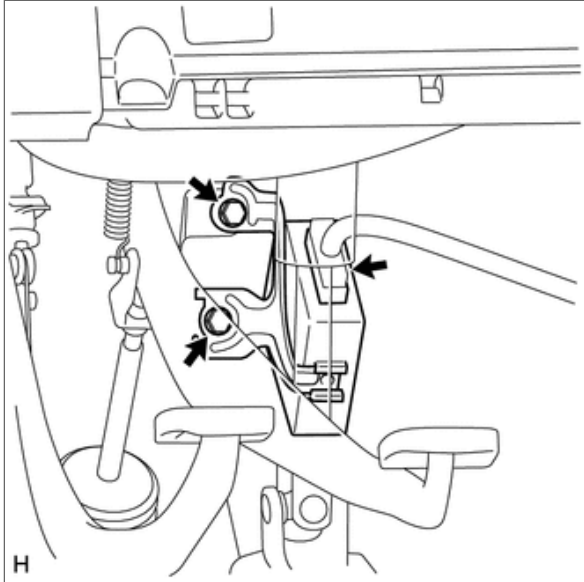

Disconnect the connector.

b. Remove the 2 bolts and antenna motor control relay.