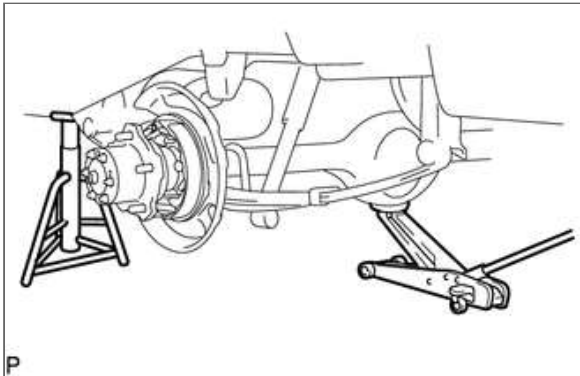


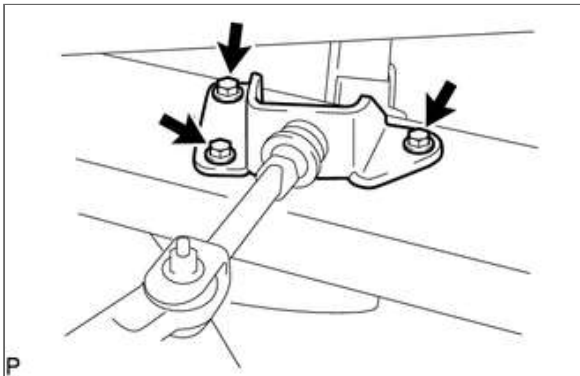
PROCEDURE

1.REMOVE REAR WHEEL

Click here [Suspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL](#)

2.SUPPORT AXLE HOUSING ASSEMBLY**a.**

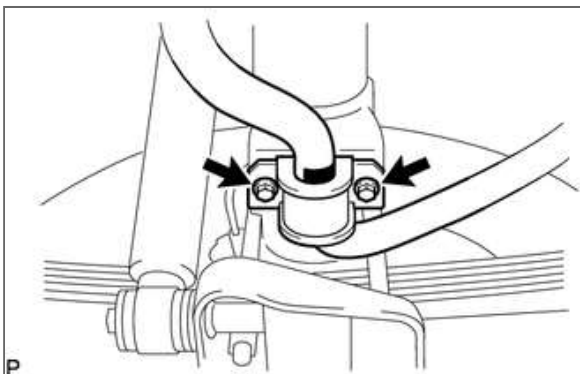
Support the rear axle housing assembly with a jack.

3.DISCONNECT REAR STABILIZER BAR LINK BRACKET**48826B****a.**

Disconnect the rear stabilizer bar link bracket with the 3 bolts.

HINT:

Use the same procedure described for the other side.

4.REMOVE REAR STABILIZER BAR**48812****a.**

Remove the rear stabilizer bracket with the 2 bolts.

HINT:

Use the same procedure described for the other side.

- b.** Remove the rear stabilizer bar and 2 rear stabilizer bushings.



5.REMOVE REAR STABILIZER BUSHING

48815R

- a.** Remove the 2 rear stabilizer bushings from the rear stabilizer bar.



6.REMOVE STABILIZER LINK SUB-ASSEMBLY

48802

- a.** Remove the nut, 3 rear stabilizer cushion retainers, rear stabilizer bar link bracket and 2 rear stabilizer cushions from the stabilizer link sub-assembly.

HINT:

Use the same procedure described for the other side.

- b.** Remove the nut, bolt and stabilizer link sub-assembly from the rear stabilizer bar.

HINT:

Use the same procedure described for the other side.

- c.** Remove the 2 collars and 2 cushions from the rear stabilizer bar.