



AXLE AND DIFFERENTIAL REAR DIFFERENTIAL CARRIER ASSEMBLY(for LSD) COMPONENTS


ILLUSTRATION

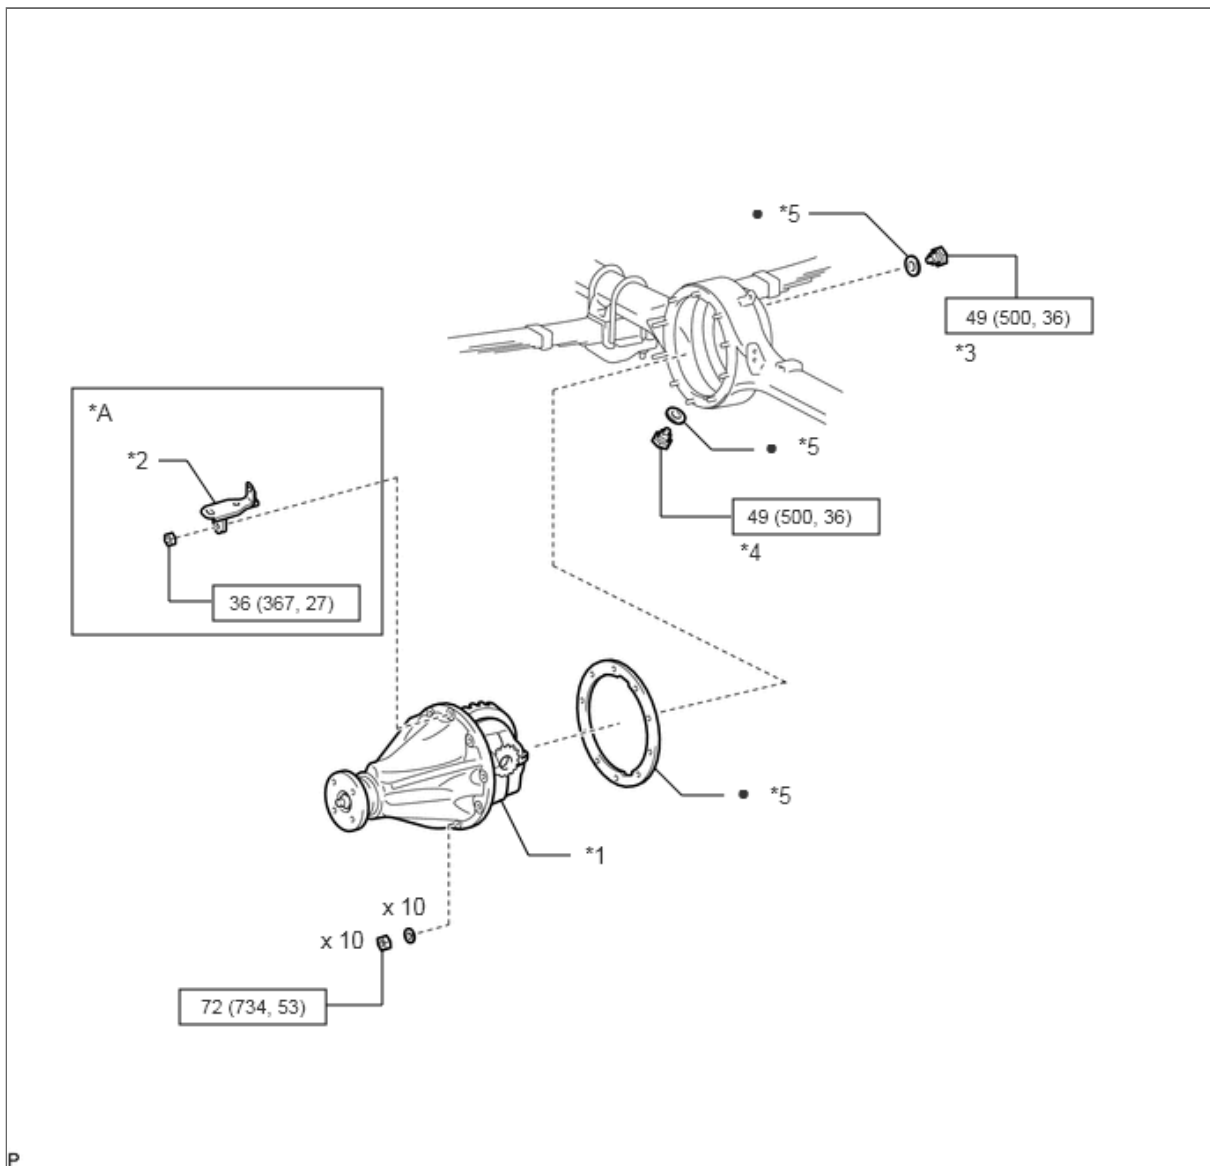

P

*A	w/ ABS	-	-
*1	REAR DIFFERENTIAL CARRIER SUB-ASSEMBLY	*2	WIRE HARNESS CLAMP BRACKET
*3	FILLER PLUG	*4	DRAIN PLUG
*5	GASKET	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part


ILLUSTRATION

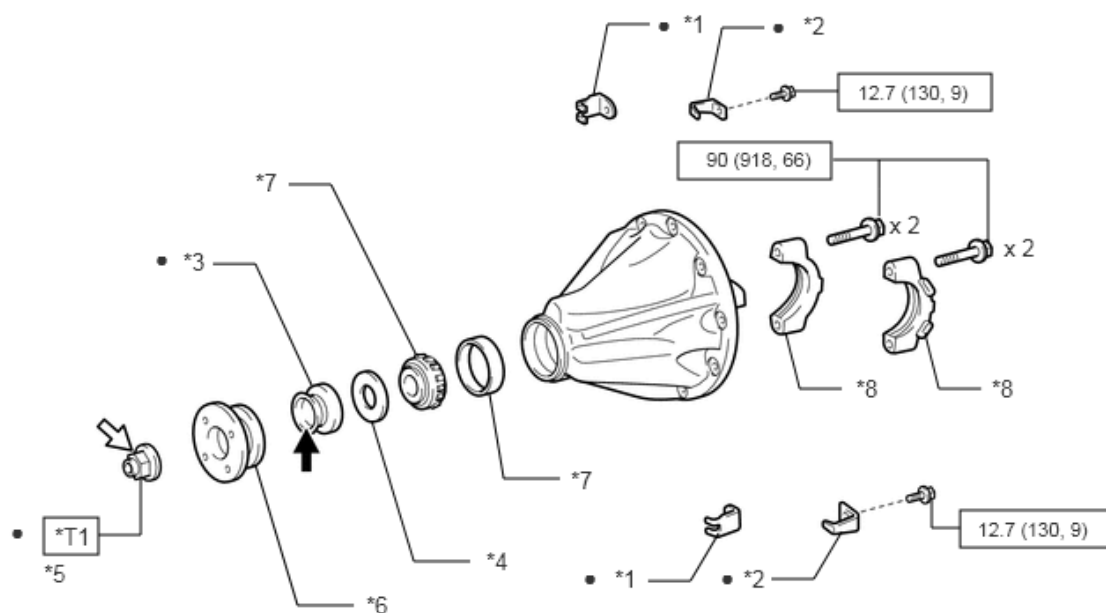

P



*1	REAR DIFFERENTIAL BEARING ADJUSTING NUT LOCK (DOUBLE TYPE)	*2	REAR DIFFERENTIAL BEARING ADJUSTING NUT LOCK (SINGLE TYPE)
*3	REAR DIFFERENTIAL CARRIER OIL SEAL	*4	REAR DIFFERENTIAL DRIVE PINION OIL SLINGER
*5	REAR DRIVE PINION COMPANION FLANGE	*6	REAR DRIVE PINION COMPANION FLANGE NUT
*7	REAR DRIVE PINION FRONT TAPERED ROLLER BEARING	*8	BEARING CAP
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
	MP grease		Hypoid gear oil LSD
*T1	441 N*m (4497 kgf*cm, 325 ft.*lbf) or less	-	-

ILLUSTRATION

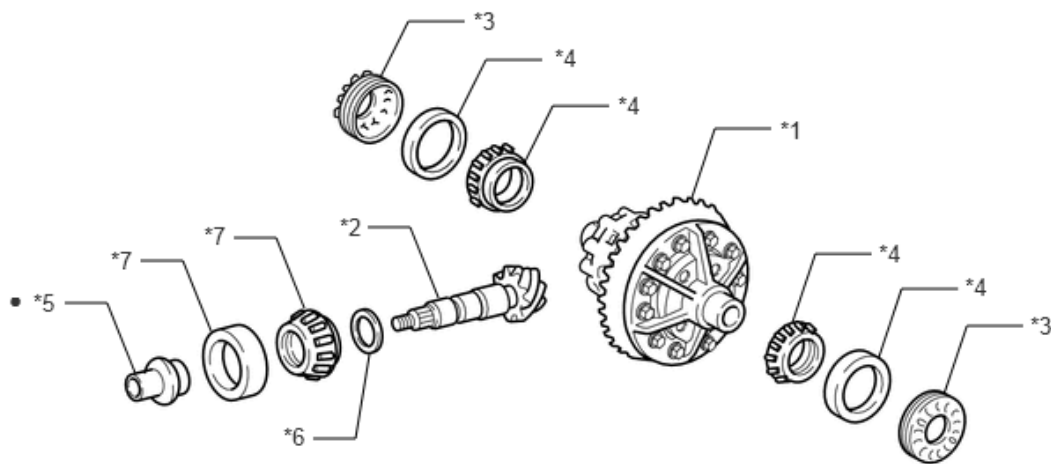

*1	DIFFERENTIAL CASE ASSEMBLY	*2	DIFFERENTIAL DRIVE PINION
*3	REAR DIFFERENTIAL BEARING ADJUSTING NUT	*4	REAR DIFFERENTIAL CASE BEARING
*5	REAR DIFFERENTIAL DRIVE PINION BEARING SPACER	*6	REAR DIFFERENTIAL DRIVE PINION PLATE WASHER
*7	REAR DRIVE PINION REAR TAPERED ROLLER BEARING	-	-
•	Non-reusable part	-	-

ILLUSTRATION

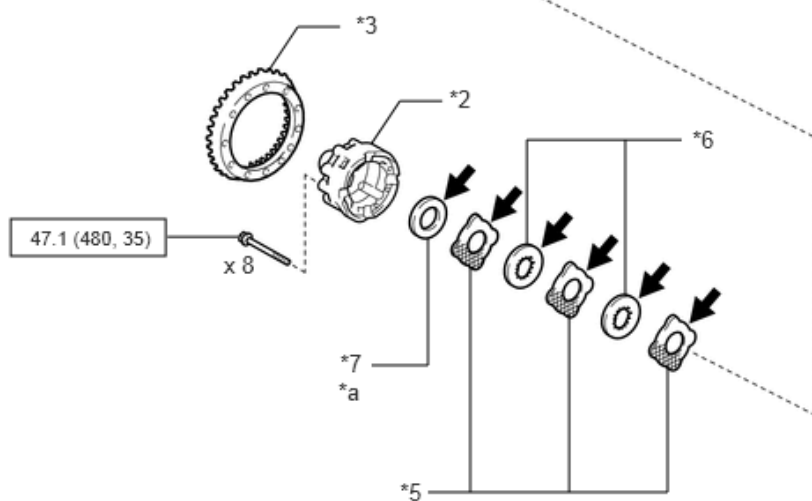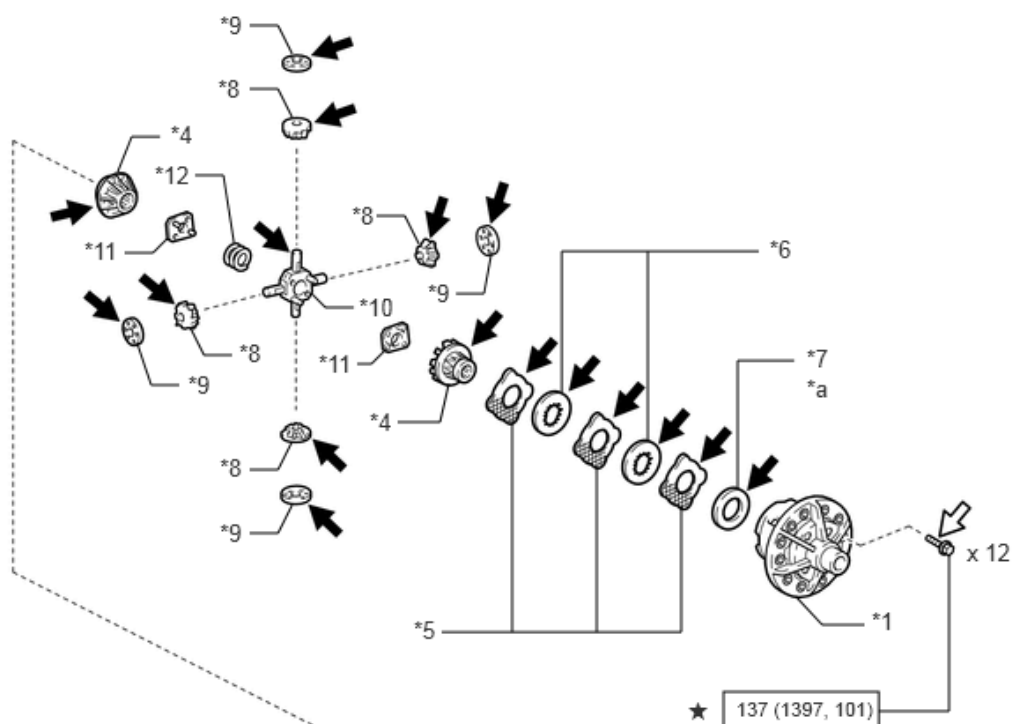

P

*1	DIFFERENTIAL CASE LH	*2	DIFFERENTIAL CASE RH
*3	DIFFERENTIAL RING GEAR	*4	REAR DIFFERENTIAL SIDE GEAR
*5	REAR NO. 2 DIFFERENTIAL SIDE GEAR THRUST WASHER	*6	CLUTCH PLATE
*7	REAR DIFFERENTIAL SIDE GEAR THRUST SHIM	*8	REAR DIFFERENTIAL PINION
*9	REAR DIFFERENTIAL PINION THRUST WASHER	*10	REAR DIFFERENTIAL SPIDER
*11	SPRING RETAINER	*12	COMPRESSION SPRING
*a	If the side gear backlash has been adjusted by TOYOTA dealer, rear differential side gear thrust shims are installed between the rear No. 2 differential side gear thrust washer and the differential case.		
	N*m (kgf*cm, ft.*lbf): Specified torque		
			Hypoid gear oil

	Adhesive	★	Precoated part
---	----------	---	----------------