
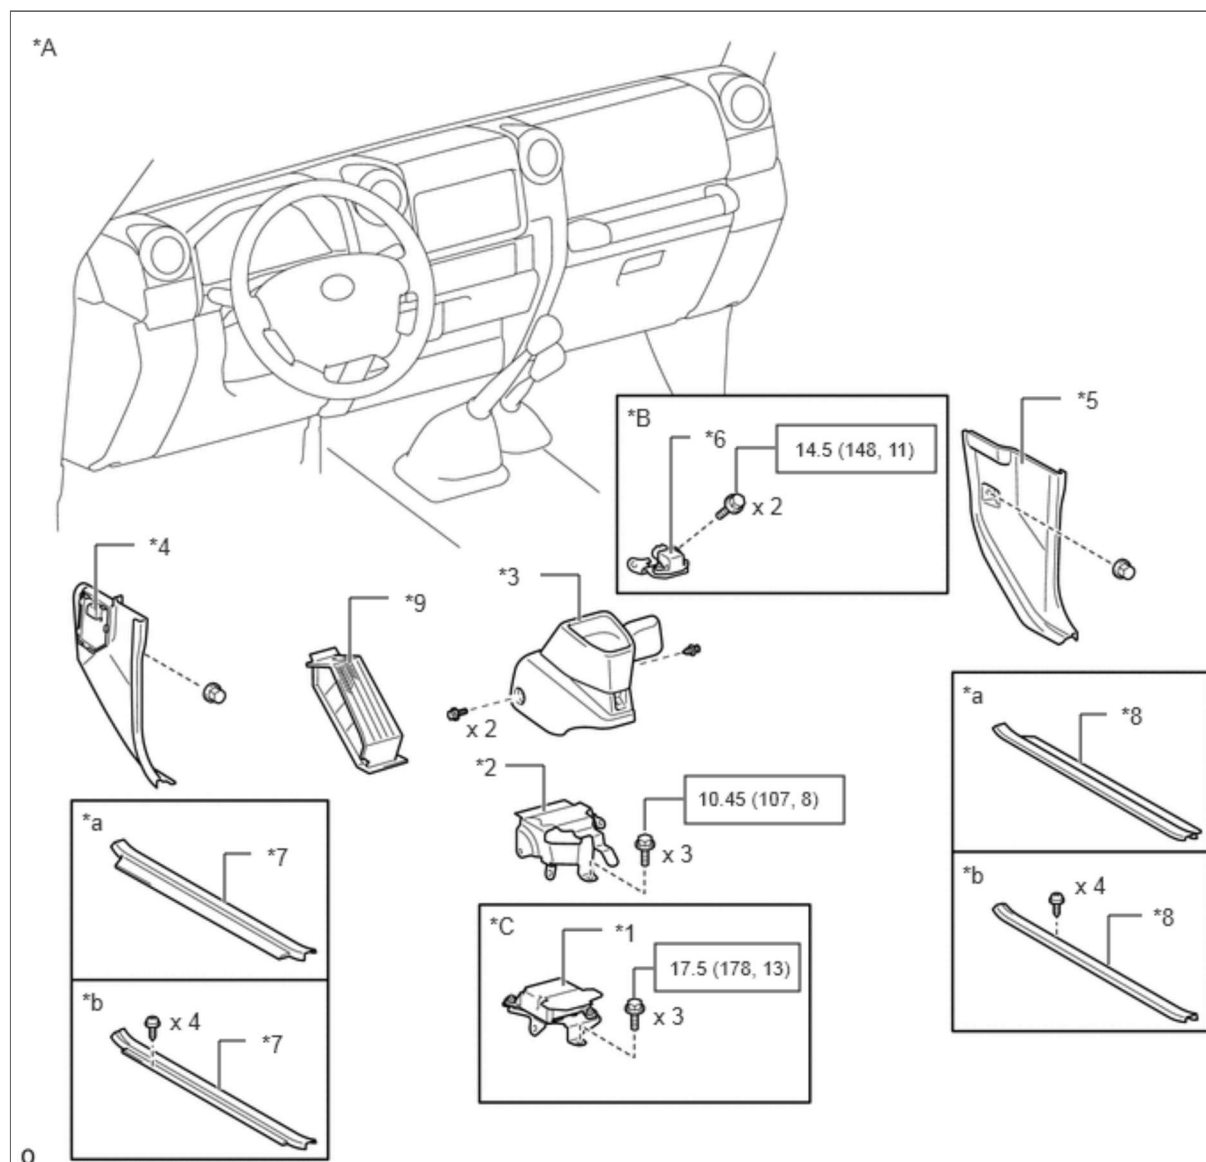



ILLUSTRATION



*A	for LHD	*B	w/ ABS
*C	w/ Airbag System	-	-
*1	AIRBAG SENSOR ASSEMBLY WITH AIRBAG SENSOR BRACKET	*2	AIRBAG SENSOR COVER
*3	CONSOLE BOX	*4	COWL SIDE TRIM SUB-ASSEMBLY LH
*5	COWL SIDE TRIM SUB-ASSEMBLY RH	*6	DECELERATION SENSOR
*7	FRONT DOOR SCUFF PLATE LH	*8	FRONT DOOR SCUFF PLATE RH
*9	FRONT FLOOR FOOTREST	-	-
*a	for 4 Door	*b	for 2 Door
 N*m (kgf*cm, ft.*lbf): Specified torque		-	-

ILLUSTRATION


*A

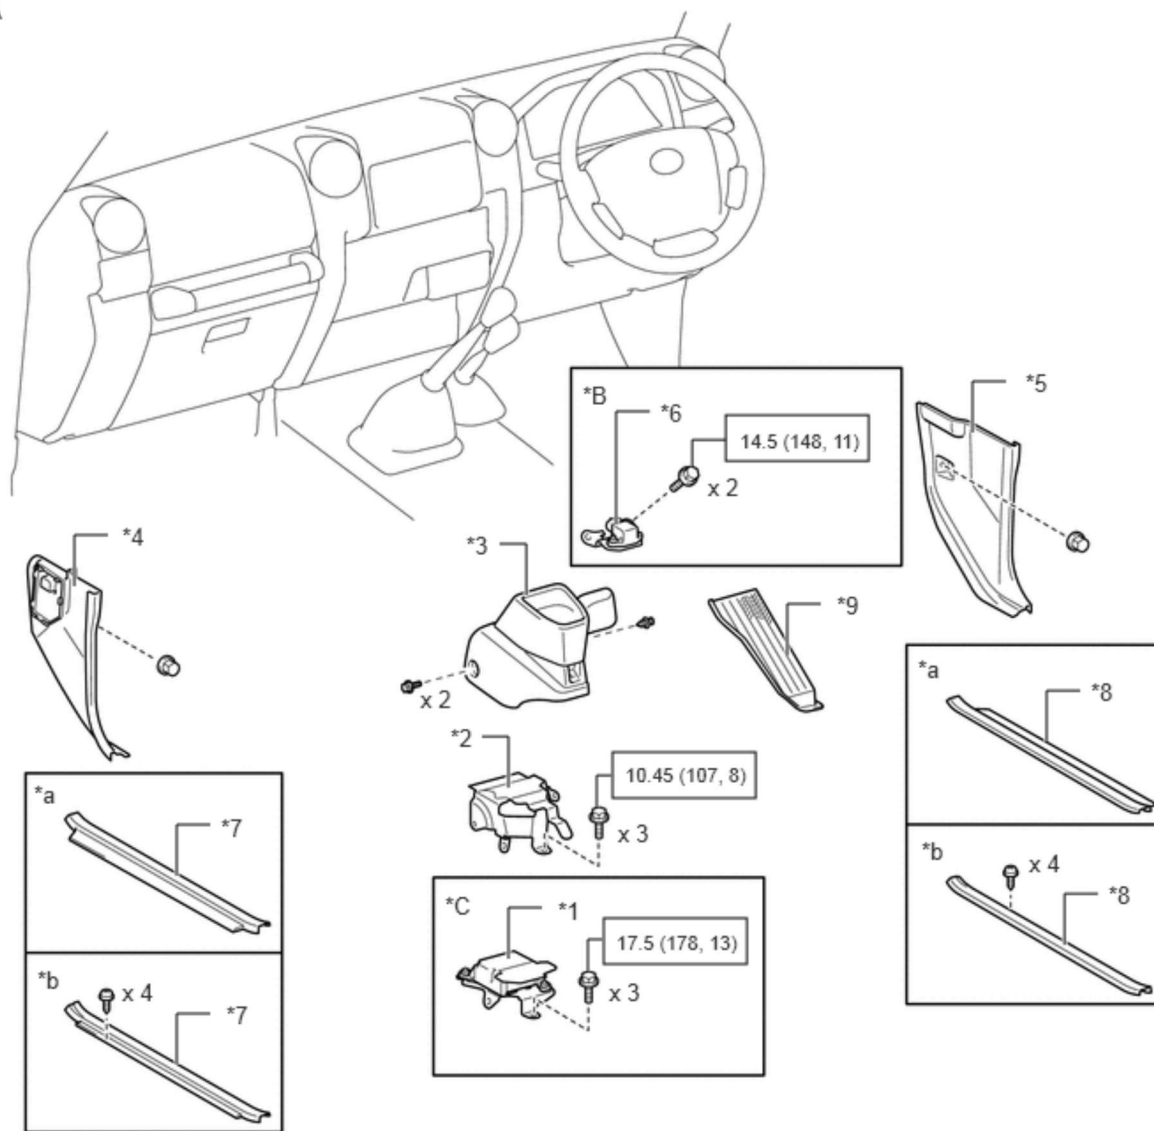


0

*A	for RHD	*B	w/ ABS
*C	w/ Airbag System	-	-
*1	AIRBAG SENSOR ASSEMBLY WITH AIRBAG SENSOR BRACKET	*2	AIRBAG SENSOR COVER
*3	CONSOLE BOX	*4	COWL SIDE TRIM SUB-ASSEMBLY LH
*5	COWL SIDE TRIM SUB-ASSEMBLY RH	*6	DECELERATION SENSOR
*7	FRONT DOOR SCUFF PLATE LH	*8	FRONT DOOR SCUFF PLATE RH
*9	FRONT FLOOR FOOTREST	-	-
*a	for 4 Door	*b	for 2 Door
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-


ILLUSTRATION

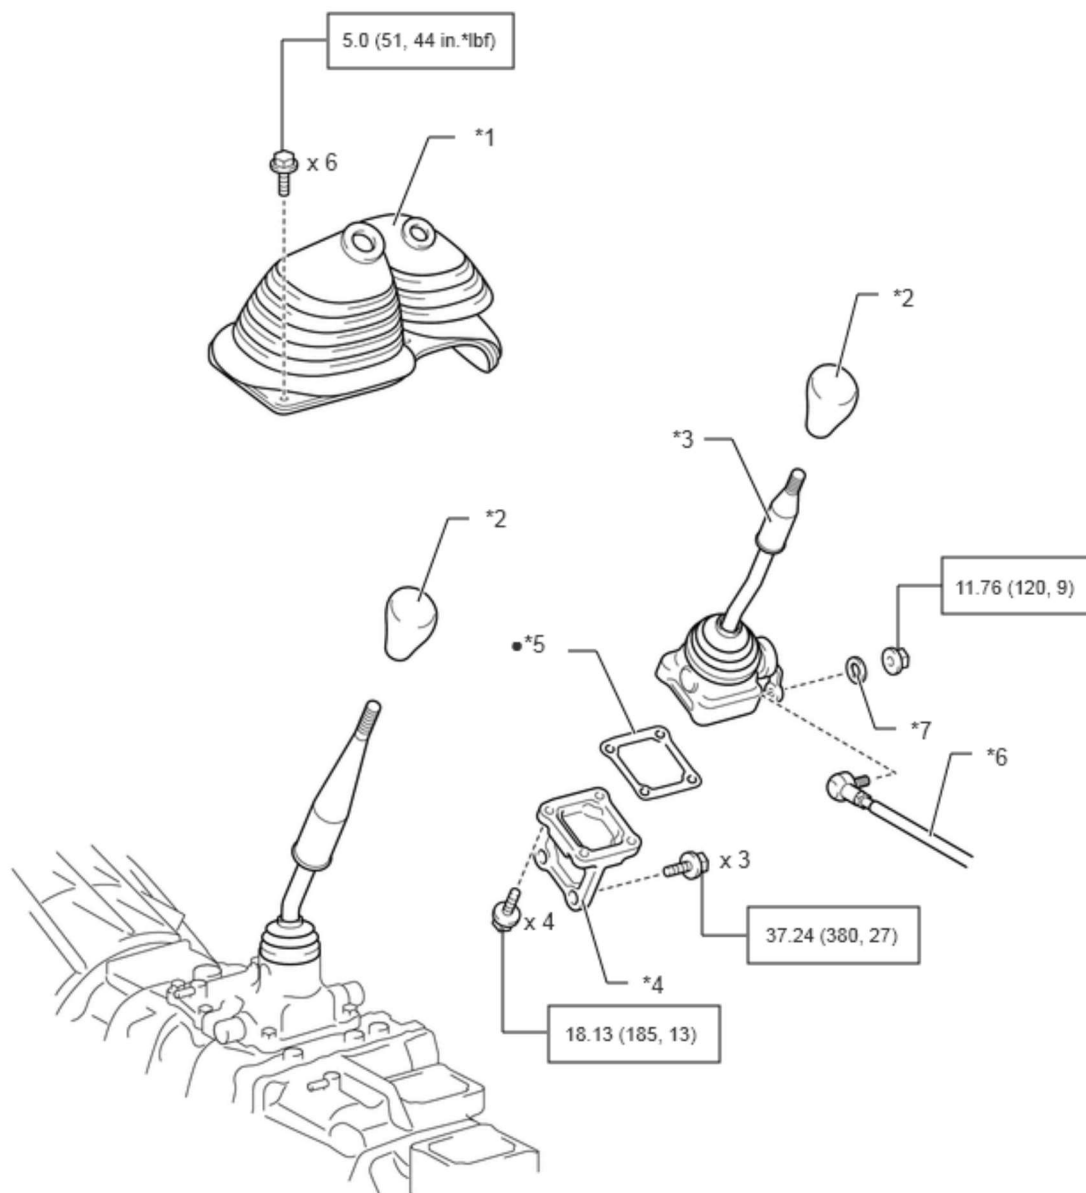


0

*1	NO. 1 SHIFT AND SELECT LEVER BOOT	*2	SHIFT LEVER KNOB SUB-ASSEMBLY
*3	TRANSFER SHIFT LEVER ASSEMBLY	*4	TRANSFER CONTROL SHIFT LEVER RETAINER BRACKET
*5	TRANSFER CONTROL SHIFT LEVER RETAINER GASKET	*6	HIGH AND LOW SHIFT ROD SUB-ASSEMBLY
*7	WASHER	-	-
			
		N*m (kgf*cm, ft.*lbf): Specified torque	• Non-reusable part

ILLUSTRATION

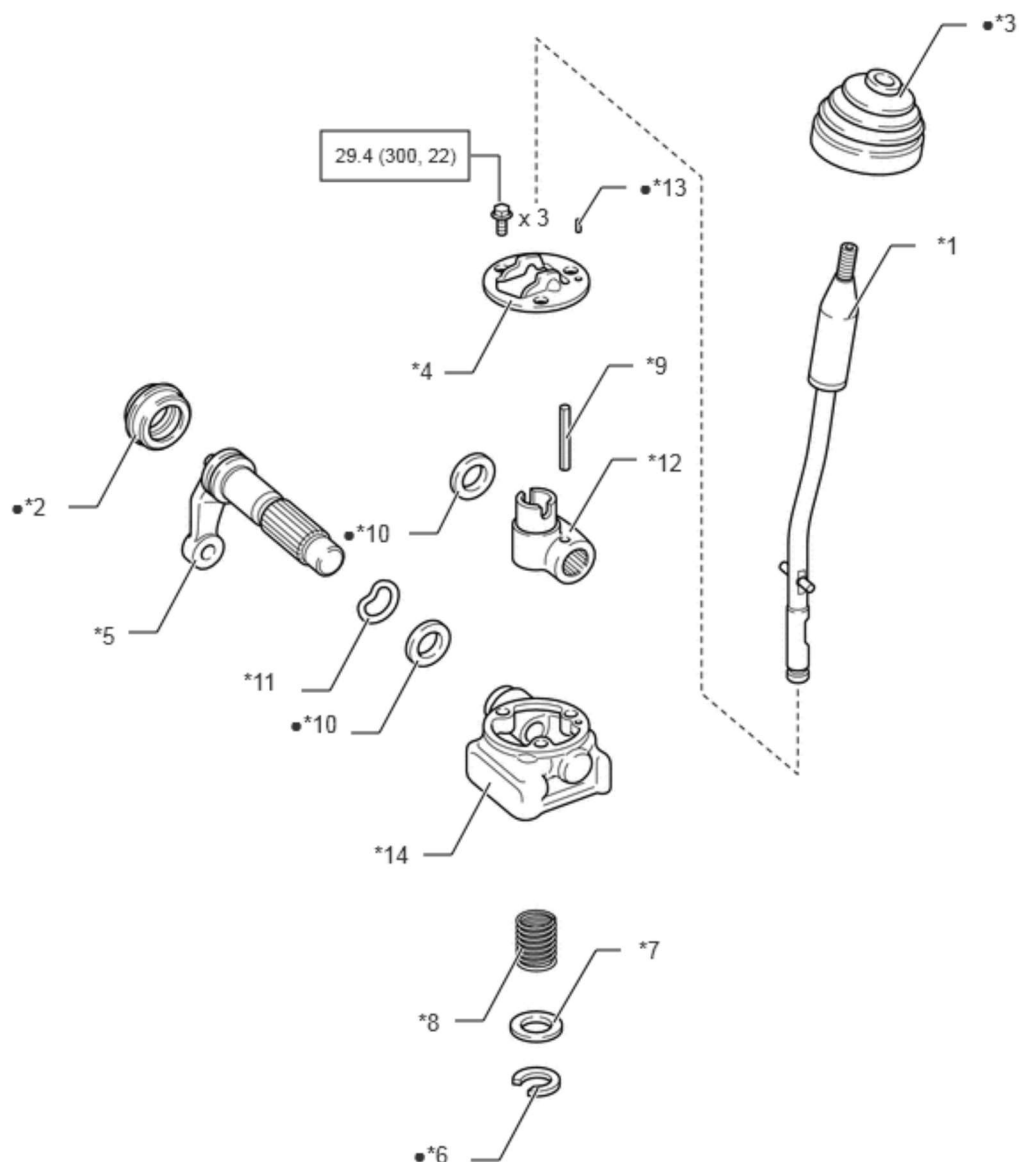

0

*1	TRANSFER HIGH AND LOW SHIFT LEVER ASSEMBLY	*2	TRANSFER SHIFT LEVER BOOT
*3	NO. 2 TRANSFER SHIFT LEVER BOOT	*4	TRANSFER SHIFT LEVER CAP
*5	TRANSFER SHIFT LEVER SHAFT	*6	FRONT TRANSFER DRIVE SHIFT LEVER HOLE SNAP RING
*7	PLATE WASHER	*8	TRANSFER SHIFT LEVER COMPRESSION SPRING
*9	SLOTTED PIN	*10	TRANSFER SHIFT LEVER BUSH
*11	WAVE WASHER	*12	TRANSFER SHIFT LEVER SUPPORT
*13	STRAIGHT PIN	*14	TRANSFER CONTROL SHIFT LEVER RETAINER
 N·m (kgf·cm, ft.·lbf): Specified torque		•	Non-reusable part