
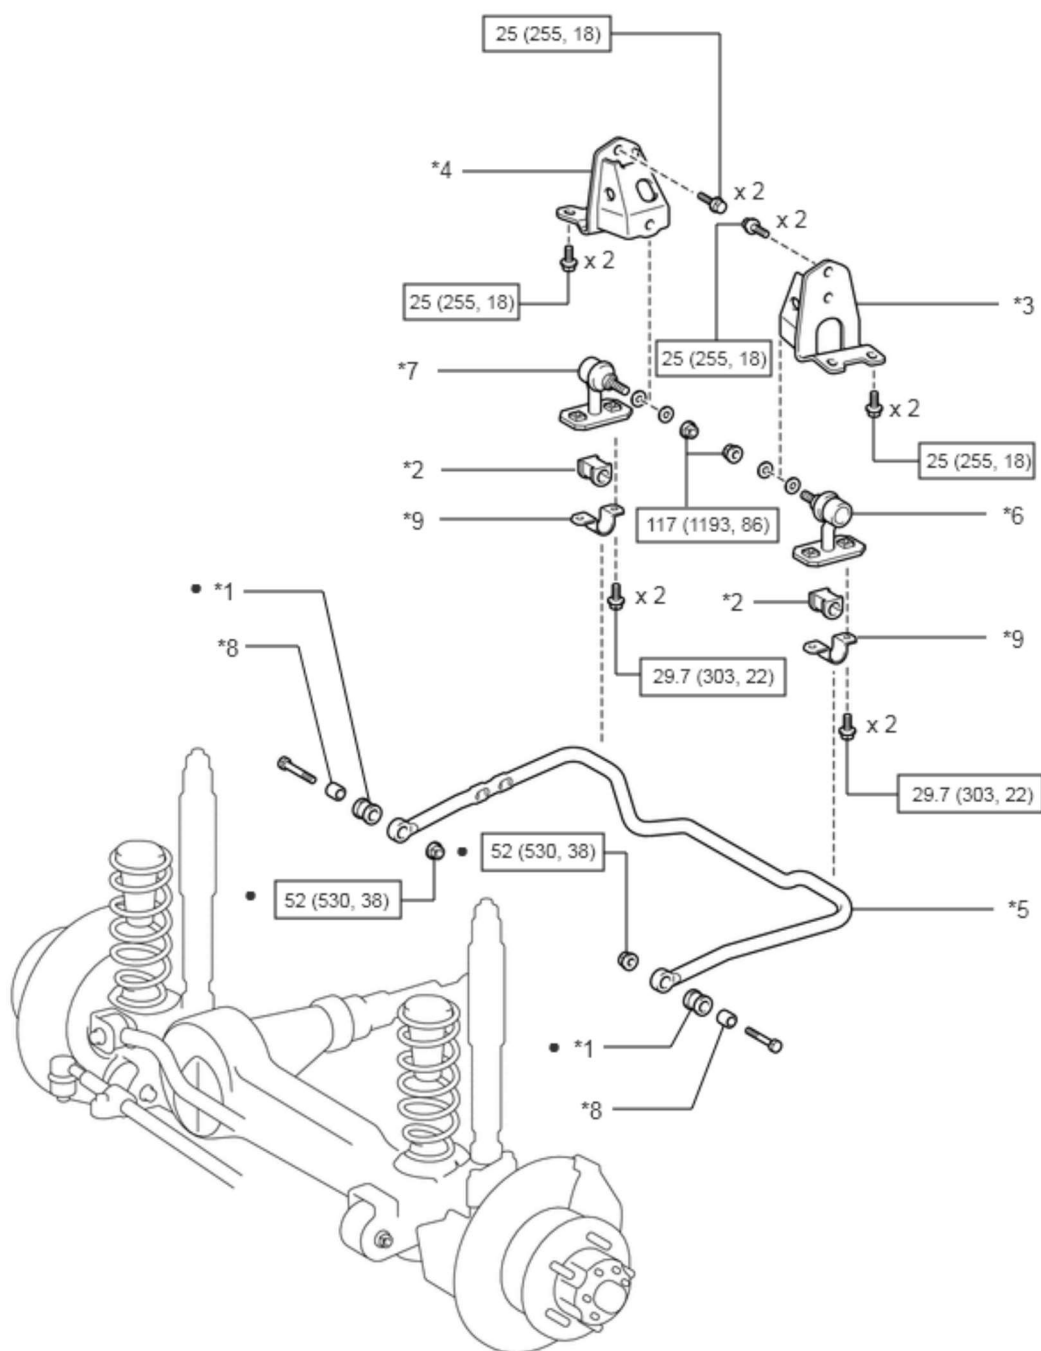


ILLUSTRATION


*A



T

*A	except 1GR-FE	-	-
*1	BUSHING	*2	FRONT NO. 1 STABILIZER BAR BUSHING
*3	FRONT NO. 1 STABILIZER BRACKET LH	*4	FRONT NO. 1 STABILIZER BRACKET RH
*5	FRONT STABILIZER BAR	*6	FRONT STABILIZER LINK SUB-ASSEMBLY LH
*7	FRONT STABILIZER LINK SUB-ASSEMBLY RH	*8	COLLAR
*9	FRONT STABILIZER BRACKET COVER	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

ILLUSTRATION

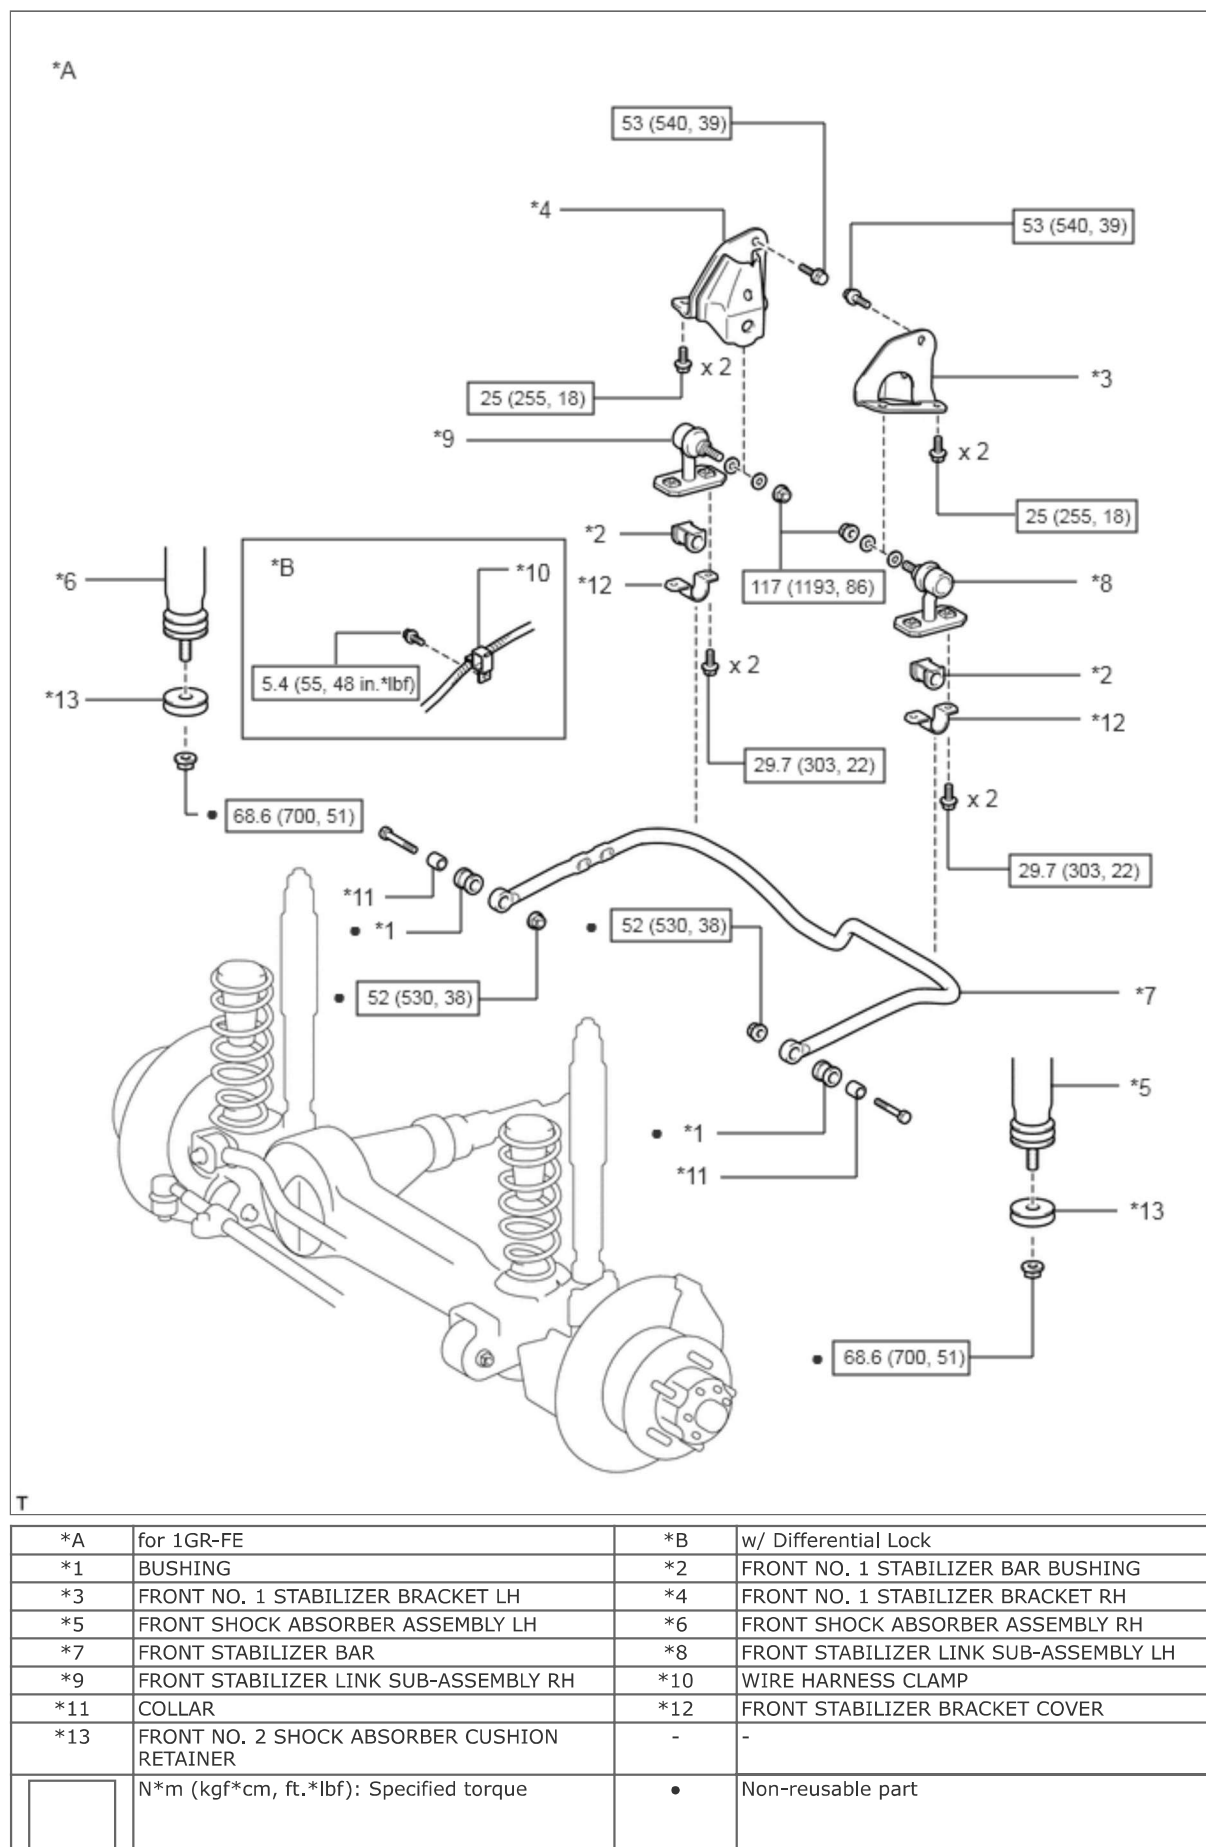

			
---	--	--	--